


SECTION 308-07A: Four Wheel Drive (4WD) Systems
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Transfer Case Control Module (TCCM)

Removal and Installation

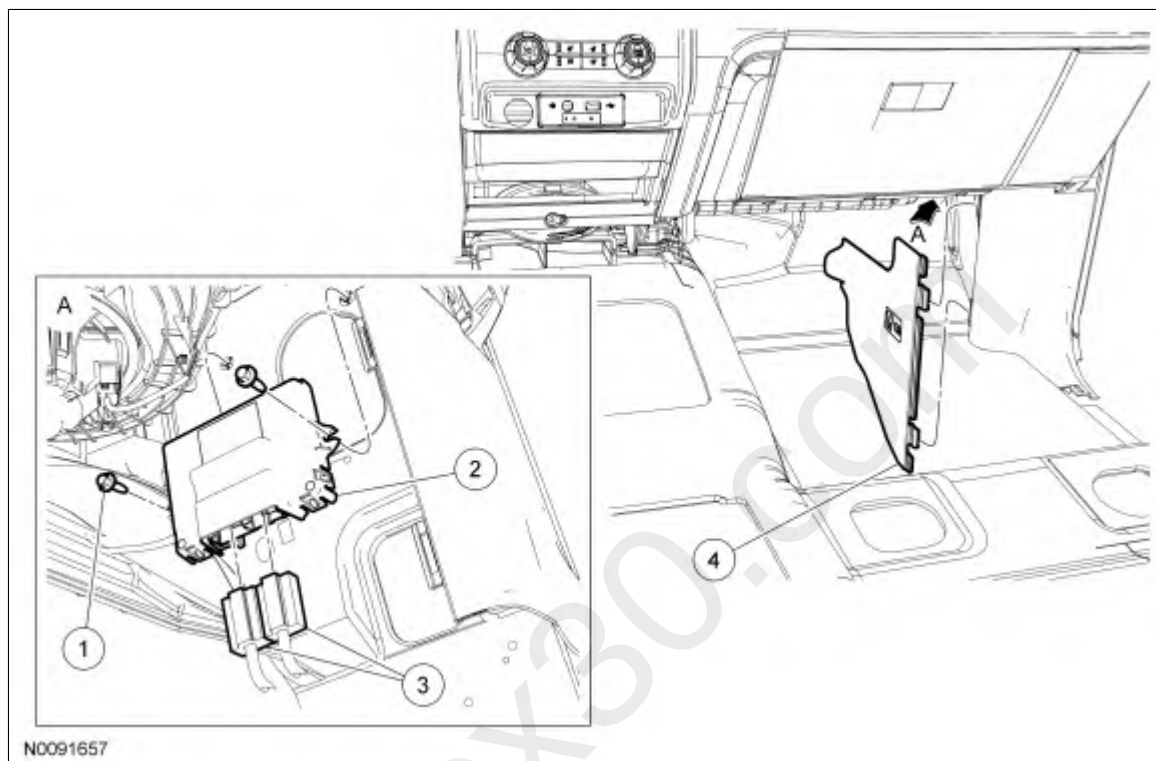

Item	Part Number	Description
1	W706287	Screw (2 required)
2	7E453	Transfer Case Control Module (TCCM)
3	—	<u>TCCM</u> electrical connectors (part of 12A581)
4	023A98	Central Junction Box (CJB) cover

1. Remove the Central Junction Box (CJB) cover to gain access to the Transfer Case Control Module (TCCM).

NOTE: The TCCM has slotted mounting holes. It is not necessary to remove the LH TCCM screw when removing the TCCM.

2. Loosen the LH TCCM screw and remove the RH TCCM screw.
 - To install, tighten to 7 Nm (62 lb-in).
3. Disconnect the 2 electrical connectors.
4. Remove the TCCM.
5. To install, reverse the removal procedure.

mcx30.com