


SECTION 415-00B: Information and Entertainment Systems — AM/FM/CD
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Antenna Cable — Satellite Radio

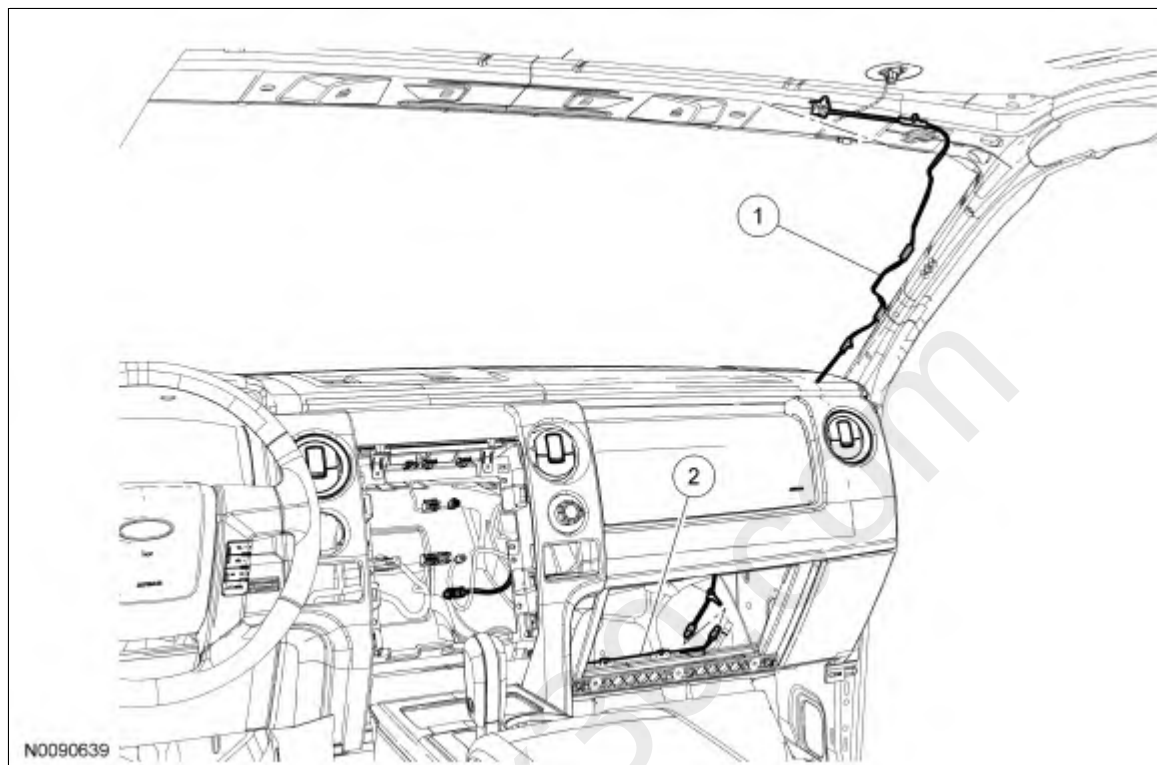

Item	Part Number	Description
1	19A397	Upper satellite radio antenna cable
2	19A397/10E928	Lower satellite radio antenna cable (without/with navigation)

Removal and Installation

Both cables

1. Lower the glove compartment completely.
2. Disconnect the upper-to-lower satellite radio antenna cable connection.

Upper cable

3. Remove the RH A-pillar trim panel. For additional information, refer to [Section 501-05](#).
4. Remove the 3 screws, the RH sun visor retaining clip, and the RH sun visor.
 - If equipped, disconnect the electrical connector.
5. Lower the front of the headliner enough to gain access to the satellite radio antenna electrical connector.

6. Remove the upper satellite radio antenna cable.
 - Disconnect the electrical connector.
 - Separate the pushpins from the A-pillar and instrument panel.

Lower cable

7. Remove the Audio Front Control Module (ACM). For additional information, refer to [Audio Control Module \(ACM\)](#) in this section.
8. Remove the lower satellite radio antenna cable.
 - Disconnect the electrical connector.
 - Separate the pushpins from the instrument panel.

Both cables

9. To install, reverse the removal procedure.
-