




7.

Pull the housing away from the vehicle and remove.

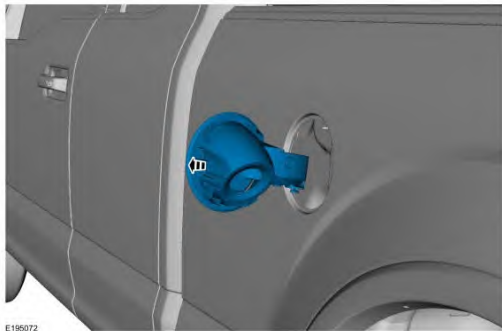

REMOVAL AND INSTALLATION > FUEL FILLER DOOR ASSEMBLY > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > REAR DOOR CHECK ARM - SUPERCREW > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.



NOTE: LH side shown in illustration, RH similar.

1.

Remove the check arm bolt.

Torque

: 17 lb.ft (22.5 Nm)



2.

Remove the rear door trim panel. Refer to: Rear Door Trim Panel - SuperCrew .

3.

Remove the speaker.

1.

Disconnect the electrical connector.

2.

Remove the bolts and the speaker.



4.

Remove the nuts.

Torque

: 80 lb.in (9 Nm)