




5.

Remove the check arm assembly.

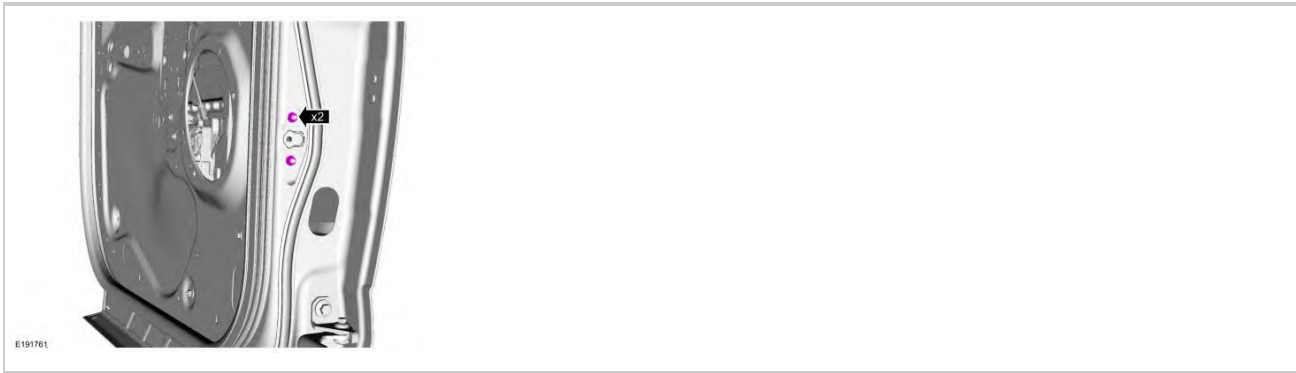

REMOVAL AND INSTALLATION > REAR DOOR CHECK ARM - SUPERCREW > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > REAR DOOR - SUPERCAB > REMOVAL



NOTE: The rear door should only be removed and installed to the vehicle at 90° door open position. Detaching and reattaching the rear door at full open (170°) could possibly release an internal spring in the hinge mechanism and therefore disable the hinge function completely.




NOTE: Removal steps in this procedure may contain installation details.



NOTE: LH side shown in illustration, RH side similar.


1.

Remove the rear body access trim panel.

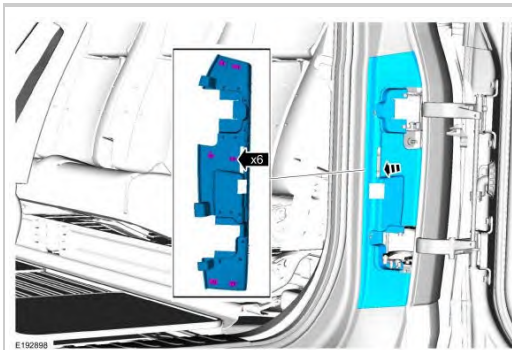

2.

Disconnect the rear door electrical connector.

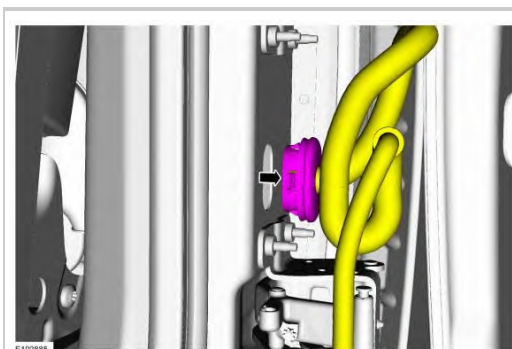

3.




NOTE: This step requires the aid of another technician.

Remove the bolts.

Torque

: 20 lb.ft (27.5 Nm)



E192868