


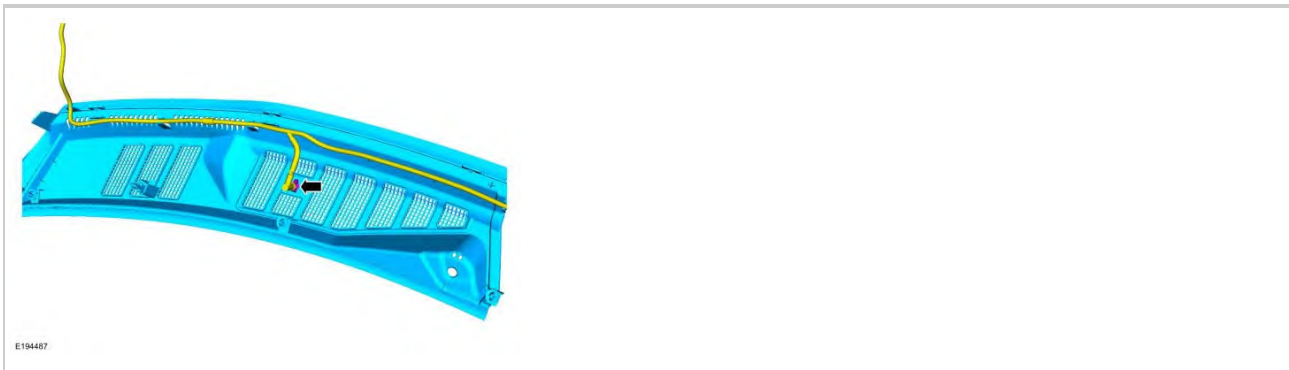

REMOVAL AND INSTALLATION > COWL PANEL GRILLE > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FENDER

Special Tool(s) / General Equipment

Knife

REMOVAL AND INSTALLATION > FENDER > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.



NOTE: LH side shown in illustration, RH side similar.

1.

Remove the front fender moulding. REFER to: Front Fender Moulding .

2.

Remove the fender splash shield. REFER to: Fender Splash Shield .

3.

Remove the bolt.

Torque

: 80 lb.in (9 Nm)



4.

Remove the bolts.

Torque

: 80 lb.in (9 Nm)




5.

Remove the bolt.

Torque

: 44 lb.in (5 Nm)

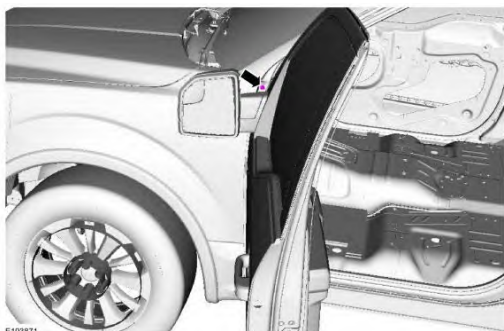


6.

Lift the corner of the cowl panel grille and remove the bolt.

Torque

: 80 lb.in (9 Nm)

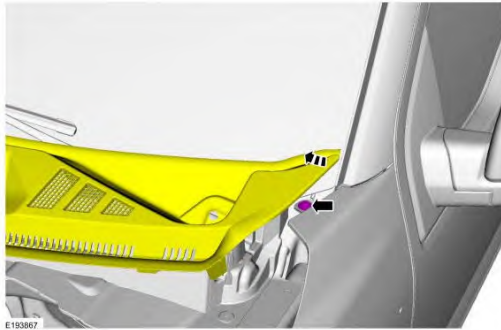

7.


Remove the headlamp assembly. REFER to: Headlamp Assembly .

8.

Remove the bolt.

Torque


: 80 lb.in (9 Nm)

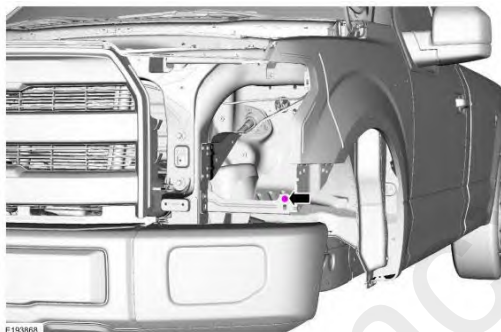

9.

Using a knife, cut the foam sealant between the fender and the body.

Use the General Equipment: Knife

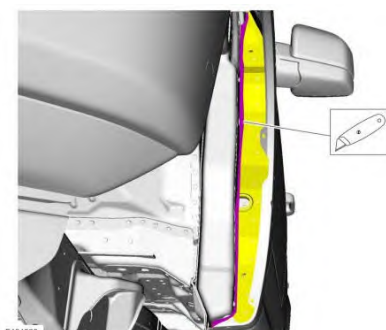

10.