

1.

 **NOTE:** During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FRONT DOOR TRIM PANEL > REMOVAL

 **NOTE:** LH side shown in illustration, RH side similar.

1.

Release the clips and remove the sail panel trim cover.




2.

Release the clips and remove the door handle trim cover.



3.

Remove the retainers.

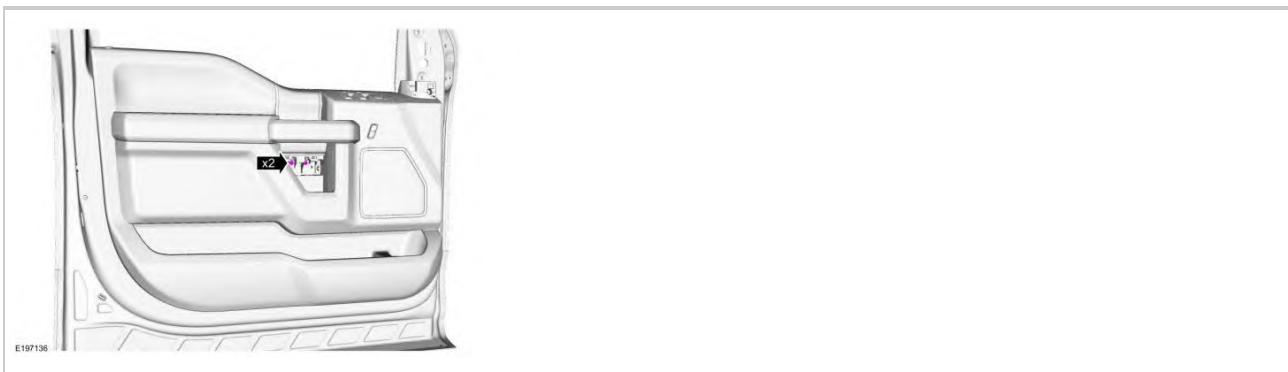

4.

Remove the grab handle cover.


1.

 **NOTE:** Use care when releasing the clips or damage to the rear tab may occur.

Release the clips.

2.

Slide the cover forward to disengage the rear tab.

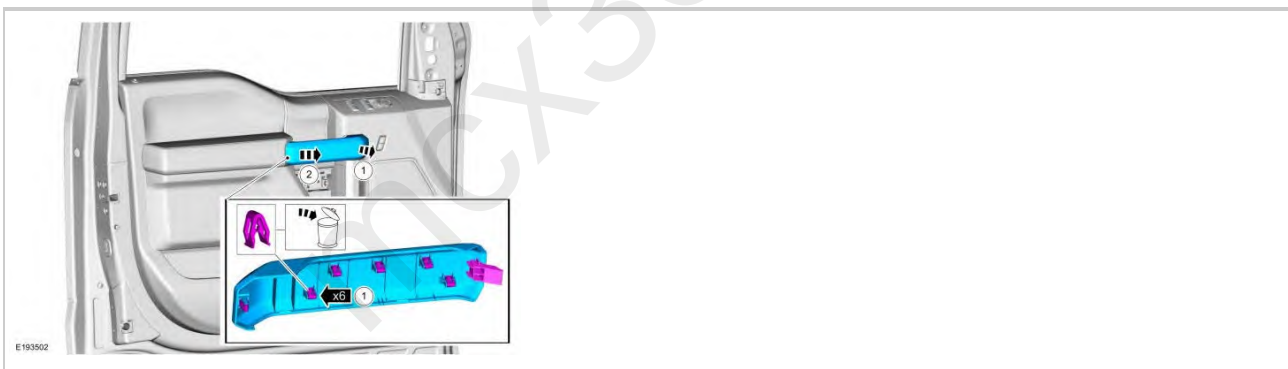

5.

Remove the door trim panel bolts.



6.

Remove the front door trim panel lower retainers.



SuperCab



NOTE: Removal of the filler trim panel is not required to remove the front door trim panel.


7.

Release the clips and disengage the weatherstrip from around the front door filler trim panel.



8.

Remove the front door filler trim panel reflector.

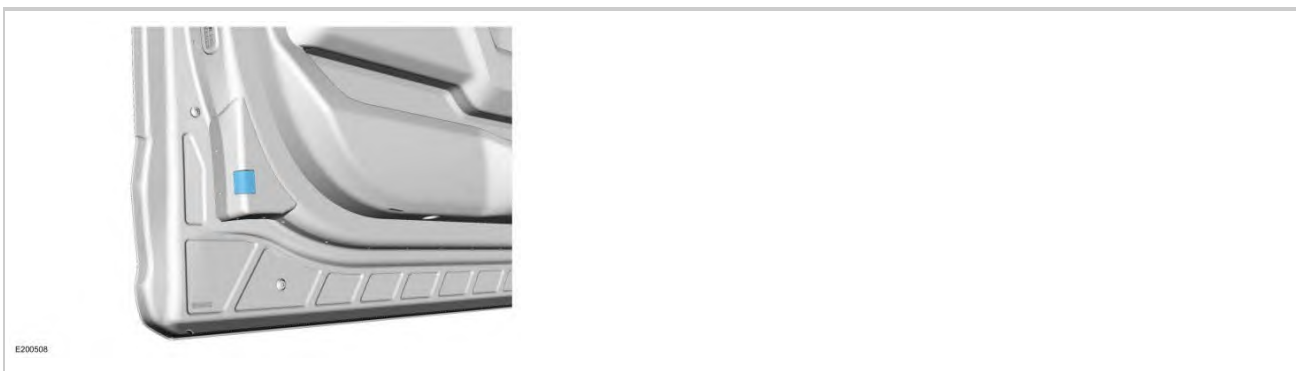

9.

Remove the front door filler trim panel.

1.

Remove the front door filler trim panel retainer.

2.

Release the front door filler trim panel lower clip.

3.

Disengage the hook and remove the front door filler trim panel.



Vehicles With Manual Windows

10.

Remove the window regulator handle.

1.


Position aside the cover.

2.

Remove the retainer and the window regulator handle.

Torque

: 33 lb.in (3.7 Nm)

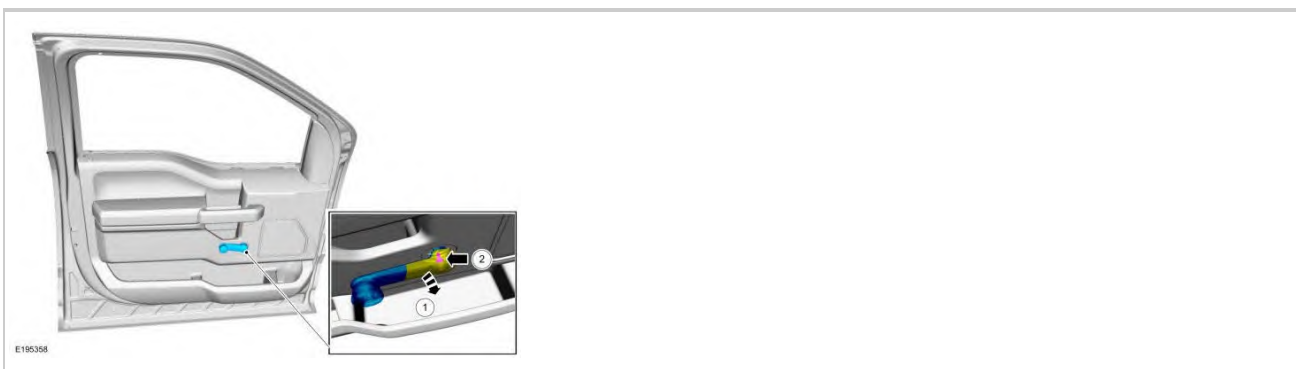

All vehicles