

REMOVAL AND INSTALLATION > TRAILER BRAKE CONTROL MODULE (TBM) > REMOVAL

 **NOTE:** The trailer brake system is normally installed at the assembly plant, however, the system can be installed at the dealership. If the system is installed at the dealership, the TBM will be installed in place of the coin bin/storage tray and the IPC must be configured to communicate with the TBM. Refer to PROGRAMMABLE PARAMETERS .

All vehicles


1.

Remove the FCIM. REFER to: Front Controls Interface Module (FCIM) - Vehicles Without: SYNC.
REFER to: Front Controls Interface Module (FCIM) - Vehicles With: SYNC Without Touchscreen.
REFER to: Front Controls Interface Module (FCIM) - Vehicles With: Touchscreen Display. REFER to: Front Controls Interface Module (FCIM) - Vehicles With: Sony Audio System.

Vehicles equipped with floor console

2.


Remove the screws and the center instrument panel lower finish panel.

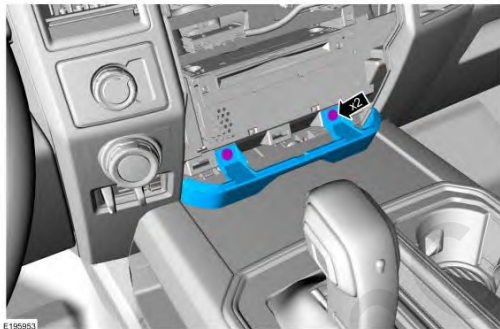

Vehicles without floor console

3.


Remove the screw, detach the clips and remove the center instrument panel lower finish panel.

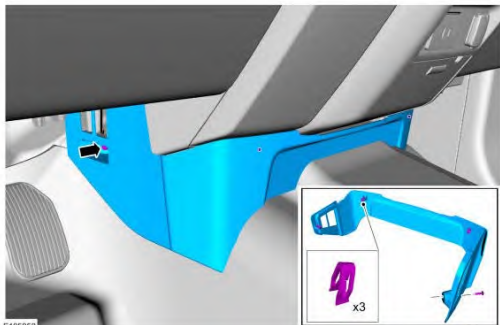

4.

Detach the clips, disconnect the electrical connector(s) if equipped and remove the LH center instrument panel finish panel.

Use the General Equipment: Interior Trim Remover

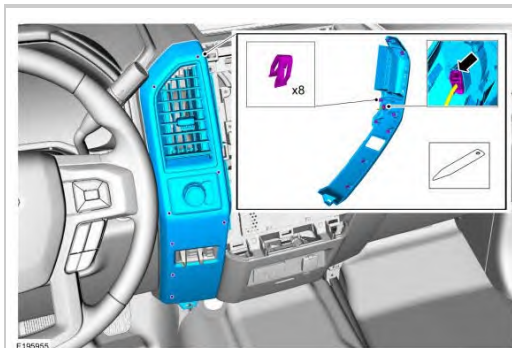

Vehicles equipped with floor console


5.

Place the transmission selector lever in the NEUTRAL position.



6.

Detach the clips and remove the floor console upper finish panel.

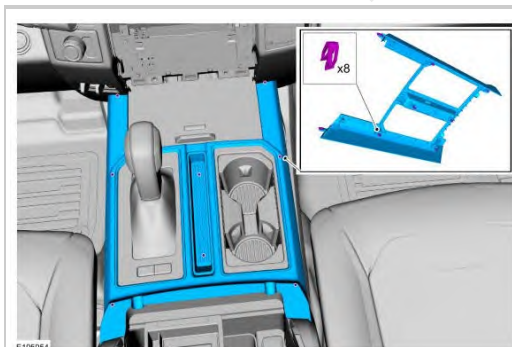

7.

Detach the clips, disconnect the electrical connector(s) (if equipped) and remove the LH center instrument panel finish panel.