

	Pump - Fuel (External)
	Sensor - Side Impact
	Solenoid - Brake Shift Park Interlock
	Speaker - Door (front)
	Speaker - Door (rear)
	Speaker - Front
	Speaker - Rear
	Speaker - Tweeter - LH - Front
	Speaker - Tweeter - LH - Rear
	Speaker - Tweeter - RH - Front
	Speaker - Tweeter - RH - Rear

CONNECTOR VIEWS > CONNECTOR END VIEW C604 - PASSENGER DOOR WINDOW CONTROL SWITCH

Connector: C604

Description

PASSENGER DOOR WINDOW CONTROL SWITCH

Color

Harness


14630

Base Part

part# N/A

Service Pigtail

See Below

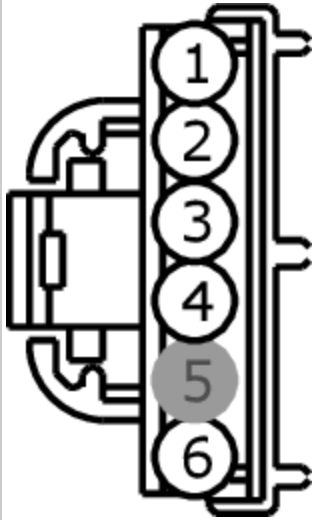

Pin	Circuit	Gauge	Circuit Function	Qualifier
1	RPW05 (GN-BN)	22	CTRL MOD. - POWER WINDOW SWITCH FRONT PASSENGER RETURN	
2	CPW20 (WH-OG)	22	SWITCH - POWER WINDOW FRONT PASSENGER # UP	
3	CPW19 (VT)	22	SWITCH - POWER WINDOW FRONT PASSENGER # DOWN	
4	CPL78 (VT-WH)	22	CTRL MOD. - DOOR LOCK # SWITCH TRIM DOOR LOCK PASSENGER ILLUMINATION	
5	*	*	Not Used	
6	RPW05 (GN-BN)	22	CTRL MOD. - POWER WINDOW SWITCH FRONT PASSENGER RETURN	

Available Pigtail Kits	Service Part Number: 9U2Z-14S411-APA Gauge:
Pigtail Kit Part Number WPT-1028	