


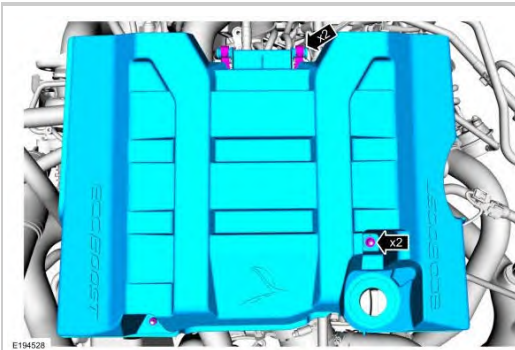

11.

Fill the cooling system. REFER to: COOLING SYSTEM DRAINING AND VACUUM FILLING .

12.

Check and top off the engine oil level as needed.

Material

: Motorcraft® SAE 5W-30 Premium Synthetic Blend Motor Oil / XO-5W30-QSP (WSS-M2C946-A)

REMOVAL AND INSTALLATION > TURBOCHARGER OIL SUPPLY TUBE RH

Materials

Name	Specification
Motorcraft® SAE 5W-30 Premium Synthetic Blend Motor Oil XO-5W30-QSP	WSS-M2C946-A

REMOVAL AND INSTALLATION > TURBOCHARGER OIL SUPPLY TUBE RH > REMOVAL



NOTE: Whenever turbocharger air intake system components are removed, always cover open ports to protect from debris. It is important that no foreign material enter the system. The turbocharger compressor vanes are susceptible to damage from even small particles. All components should be inspected and cleaned, if necessary, prior to installation or reassembly.

1.

With the vehicle in NEUTRAL, position it on a hoist. REFER to: Jacking and Lifting - Overview .

2.

Remove the engine appearance cover retainers and then remove the engine appearance cover.