


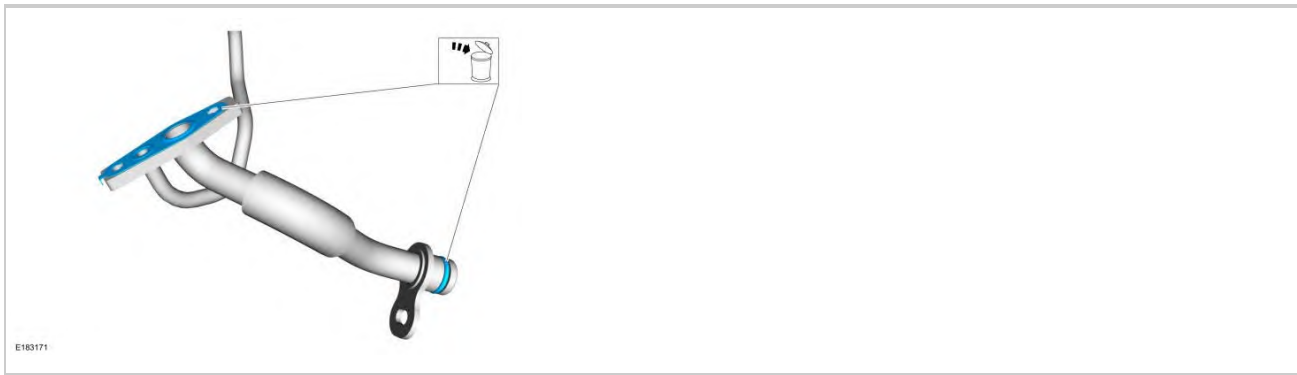

REMOVAL AND INSTALLATION > TURBOCHARGER OIL SUPPLY TUBE LH > INSTALLATION

1.

Install the new turbocharger oil manifold assembly O-ring seal and gasket. Lubricate the new turbocharger oil manifold assembly O-ring seal with clean engine oil.

Material

: Motorcraft® SAE 5W-30 Premium Synthetic Blend Motor Oil / XO-5W30-QSP (WSS-M2C946-A)



2.

Inspect the turbocharger oil supply tube fitting and replace as needed.

Torque:

Type 1: 35 lb.ft (48 Nm)

Type 2: 24 lb.ft (32 Nm)