


Rear View Mirrors - System Operation and Component Description

System Operation

System Diagram - Exterior, Power, Without Memory

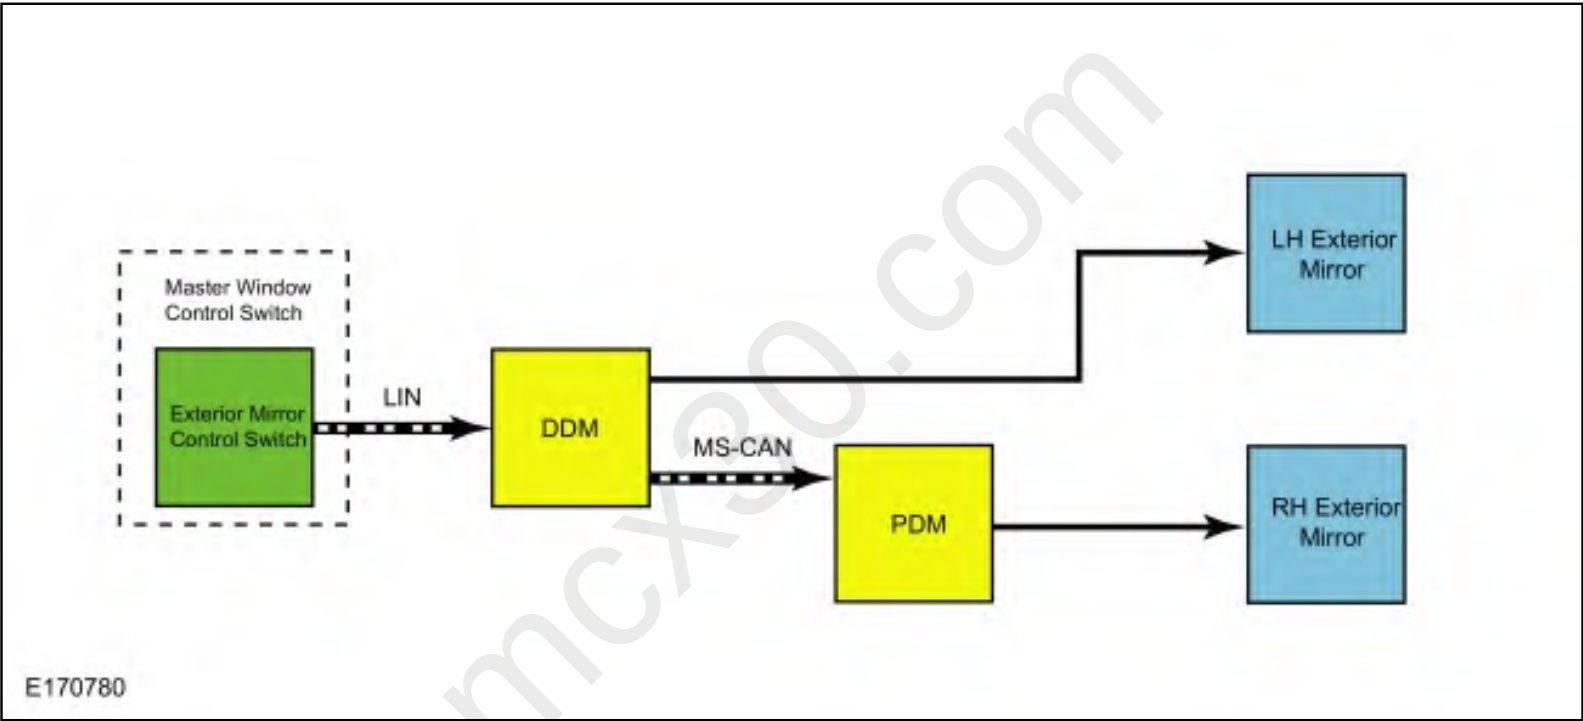

Network Message Chart

Module Network Input Messages — PDM

Broadcast Message	Originating Module	Message Purpose
Passenger mirror command	DDM	Contains the movement requests for the RH exterior mirror glass generated by the exterior mirror control switch.

System Operation - Exterior, Power, Without Memory

All functions of the power mirror feature are integrated into one switch module (integral to the LH front door