


Front Center Seat Backrest Cover - SuperCab/ SuperCrew

Base Part Number: Base Part Number: 64416


Removal

All seats


1. Remove the front center seat backrest.
Refer to: [Front Center Seat Backrest](#) (501-10A Front Seats, Removal and Installation).
2.
Remove the seatbelt guide.
 1. Remove the screws.
 2. Position the seatbelt aside.

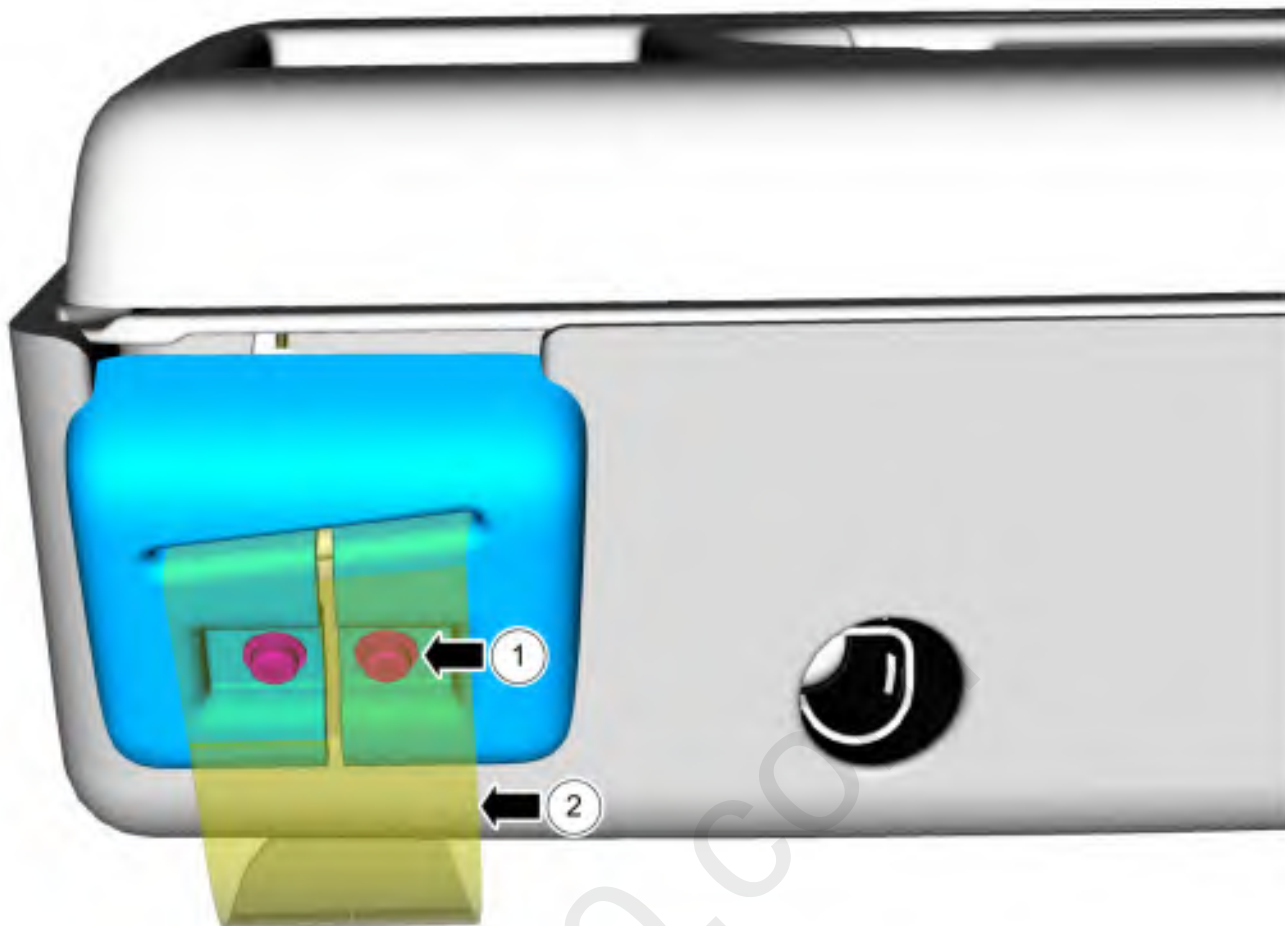

3. Remove the cup holder insert.

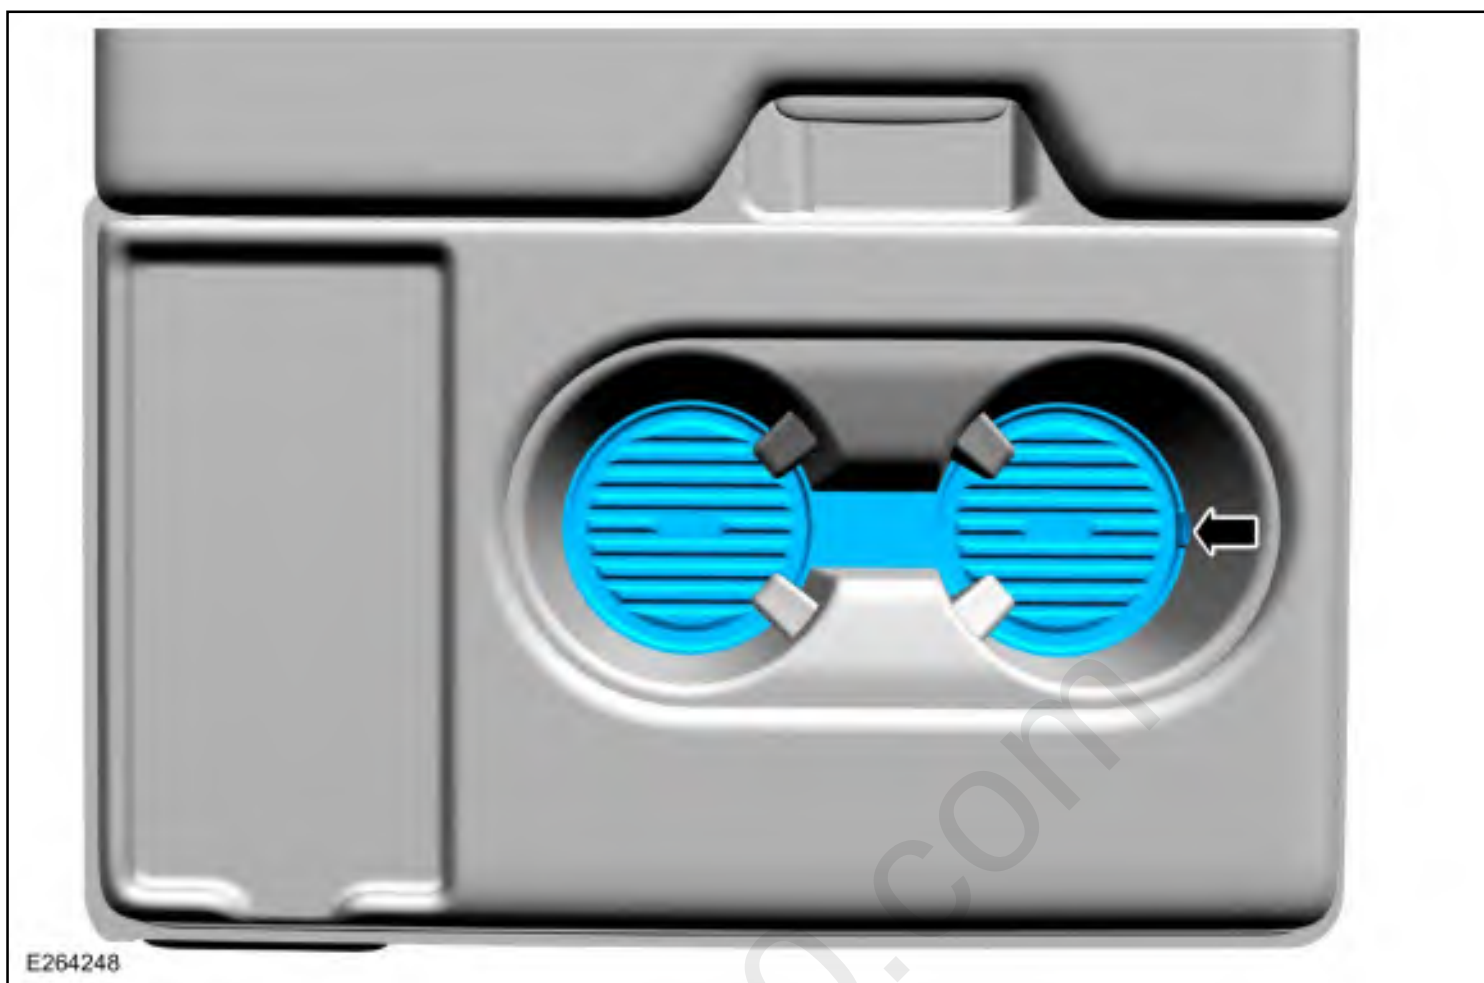


4. Remove the cup holder.
 1. Remove the screw.
 2. Release the retaining clips.

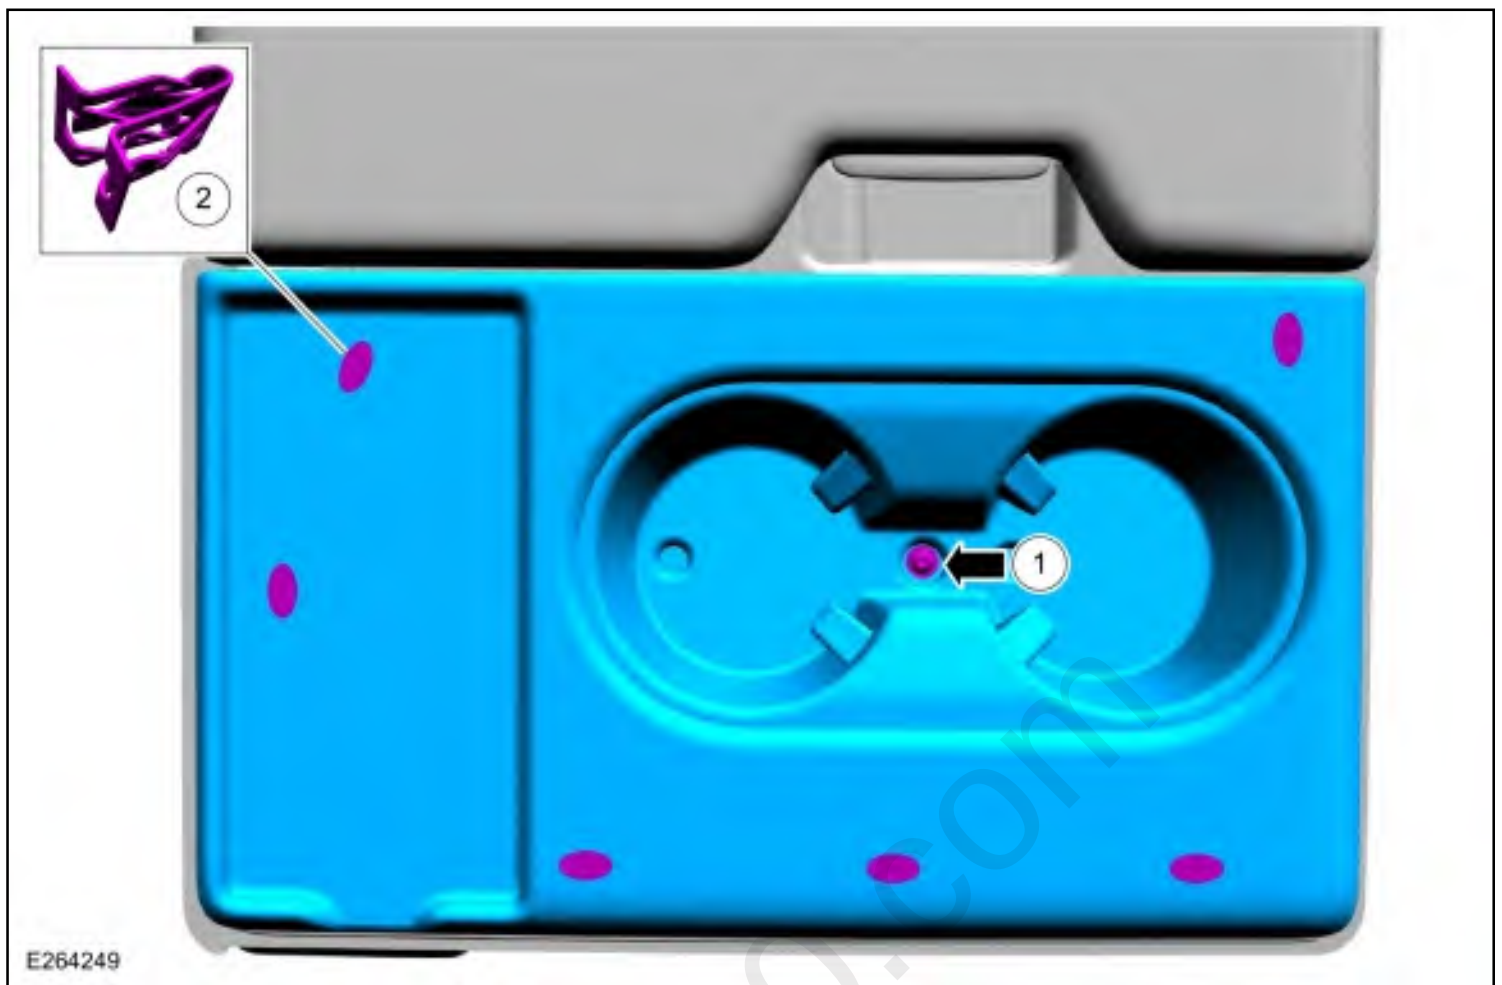



Seats with storage tray

5. Remove the trim cover.

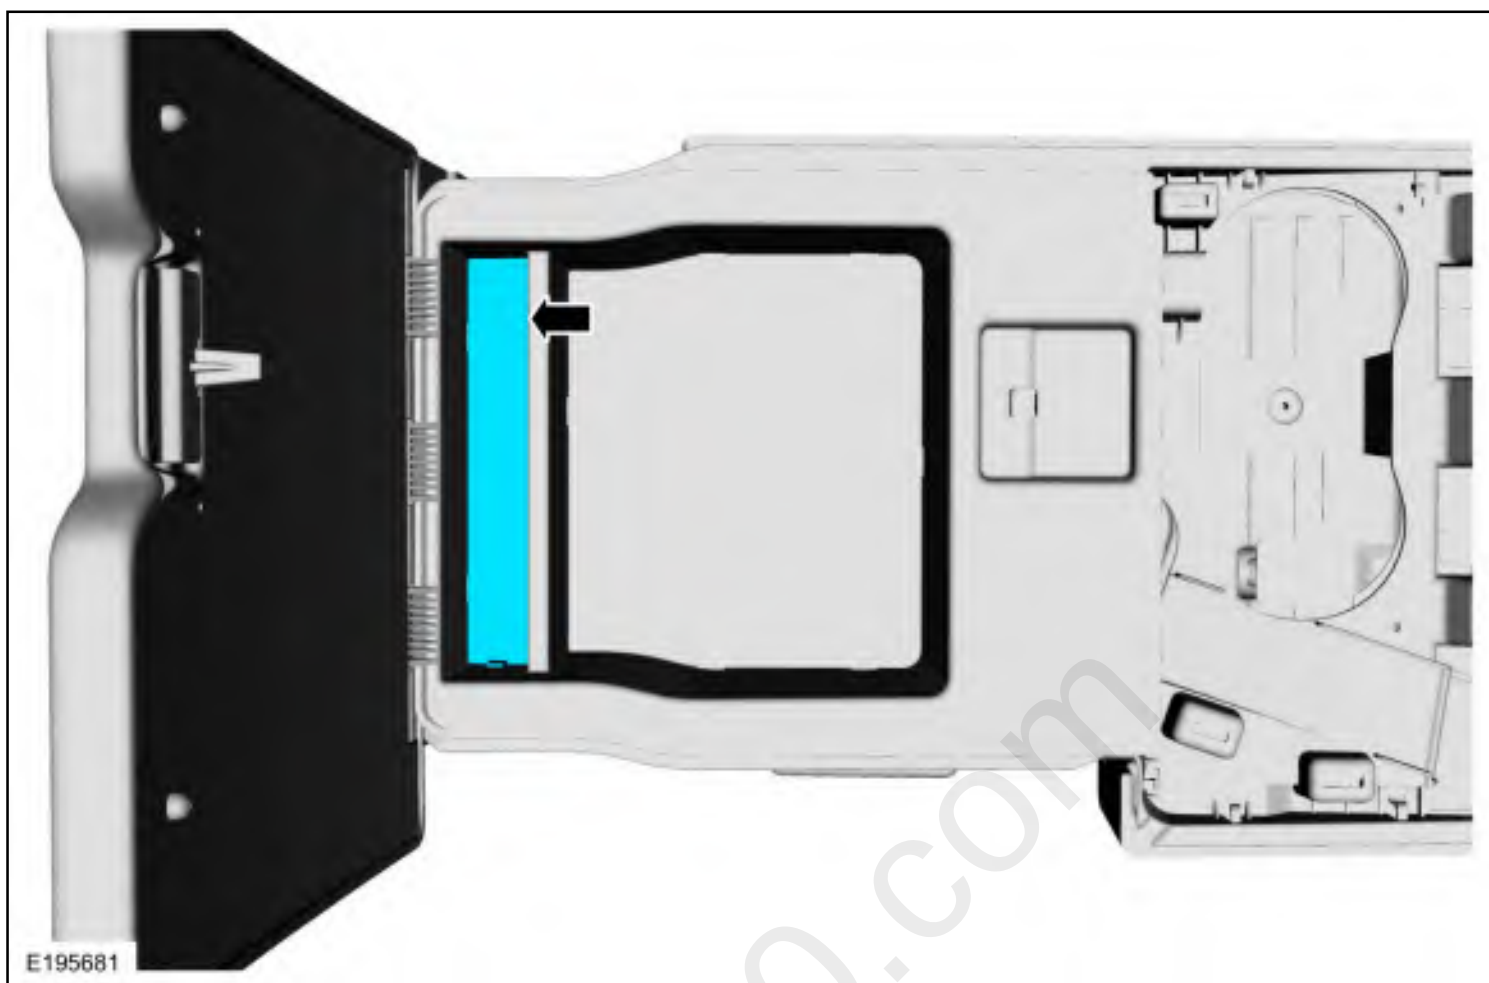

6. Remove the armrest storage tray.
 1. Remove the screws.
 2. Release the retainers.
 3. Remove the storage tray.

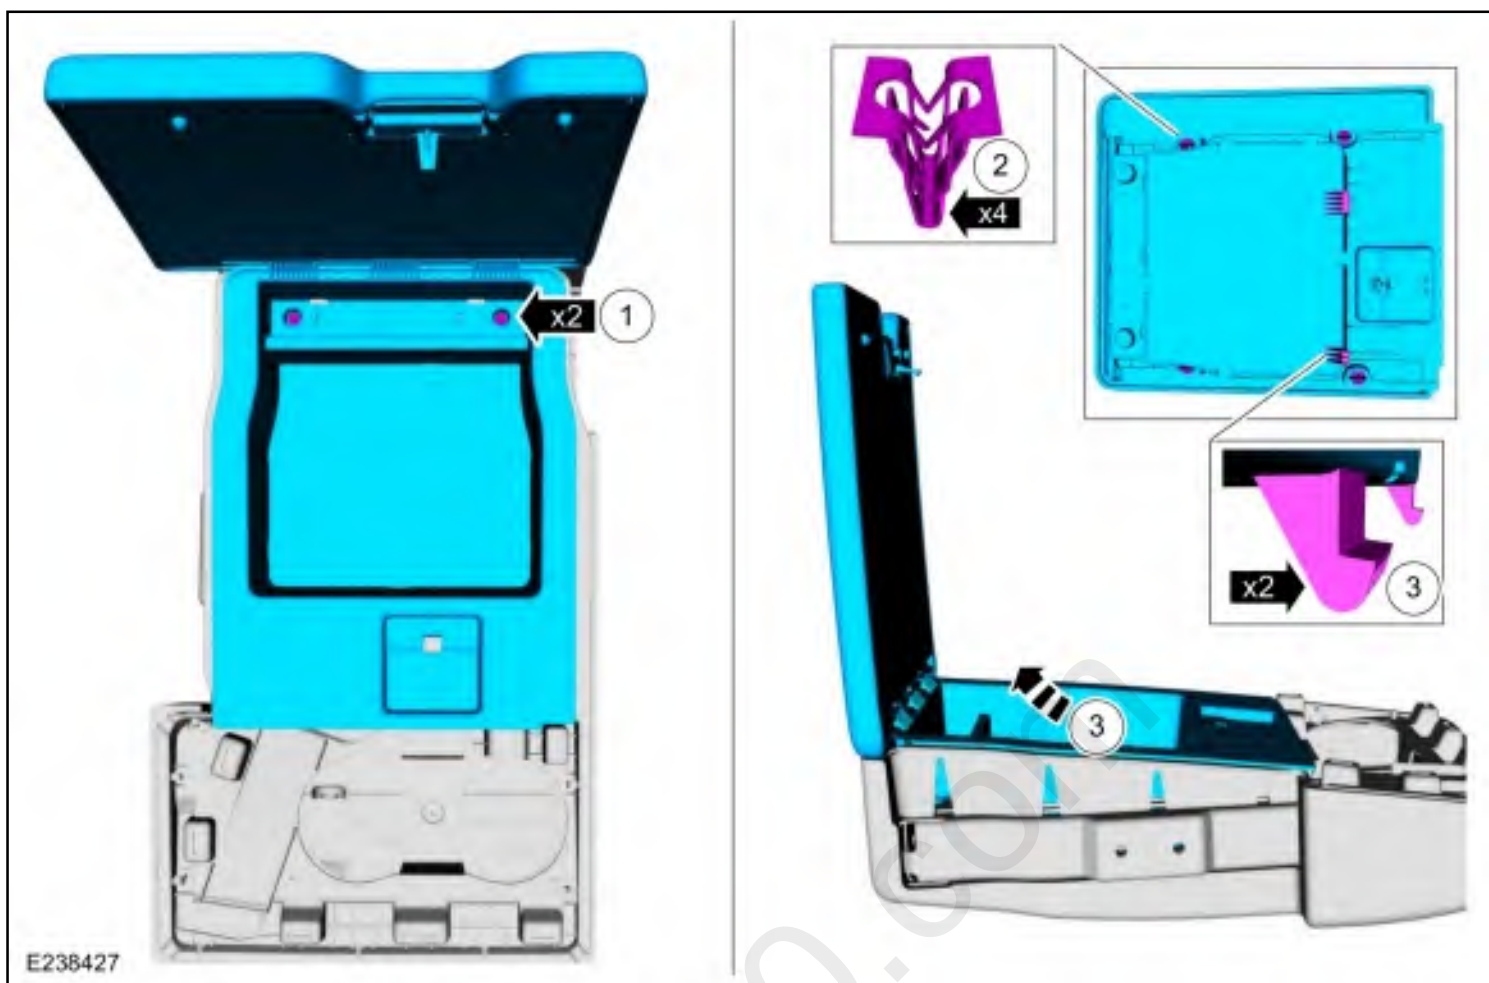

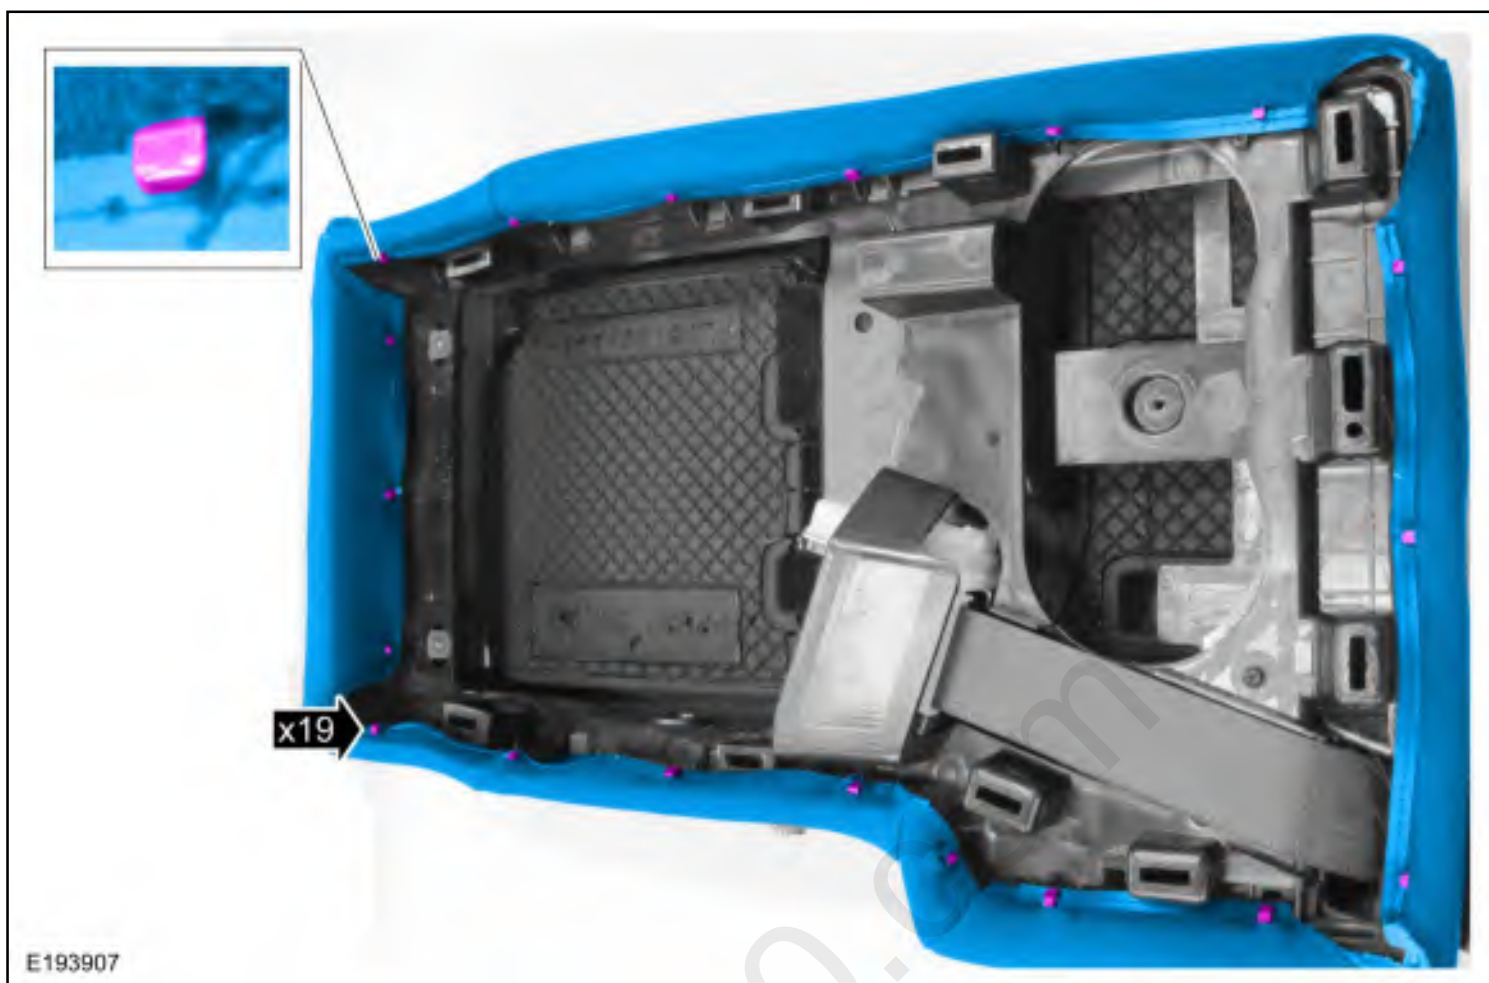

Seats without storage tray

8. Position the backrest cover flap aside.



9. Release the cover from the J-hooks and position the backrest cover aside.




10. **NOTICE:** Use care when separating the seat backrest trim cover from the hook-and-loop strip or the hook-and-loop strip may be torn from the seat backrest foam pad.

NOTE: *Note the position of the safety belt for installation.*

Release the hook-and-loop strip and remove the backrest cover.



E194003



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company