

Rear Door Glass Run and Bracket - SuperCrew

Base Part Number: Base Part Number: 24634

Removal

NOTE: *LH side shown, RH side similar.*

NOTE: *Removal steps in this procedure may contain installation details.*

Aft rear door glass run and bracket

1. Remove the rear door latch.


Refer to: [Rear Door Latch - SuperCrew](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).

2. **NOTE:** *This step is only necessary when installing a new component.*

Remove the rear door latch from the aft rear door glass run and bracket.


1. Remove the screws from the rear door latch.
2. Remove the rear door latch from the aft rear door glass run and bracket.
3. If equipped.

Remove the rear door latch rain shield from the aft rear door glass run and bracket.

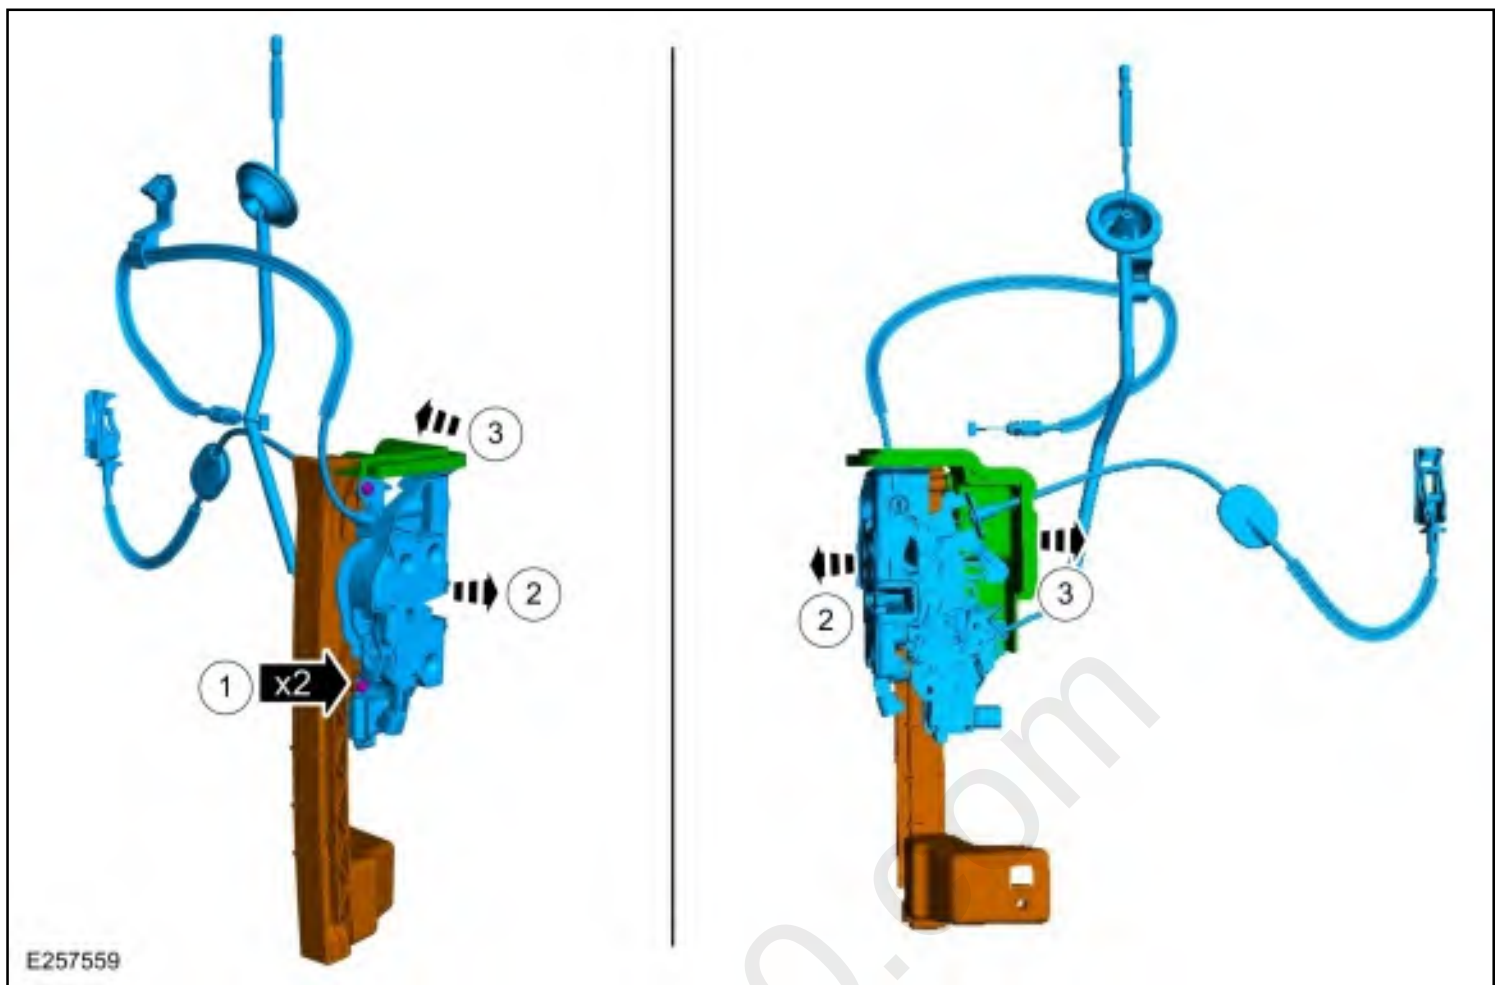

Fore rear door glass run and bracket

3. Remove the rear door trim panel.
Refer to: [Rear Door Trim Panel - SuperCrew](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
4. Remove the rear door speaker.
Torque: 22 lb.in (2.5 Nm)

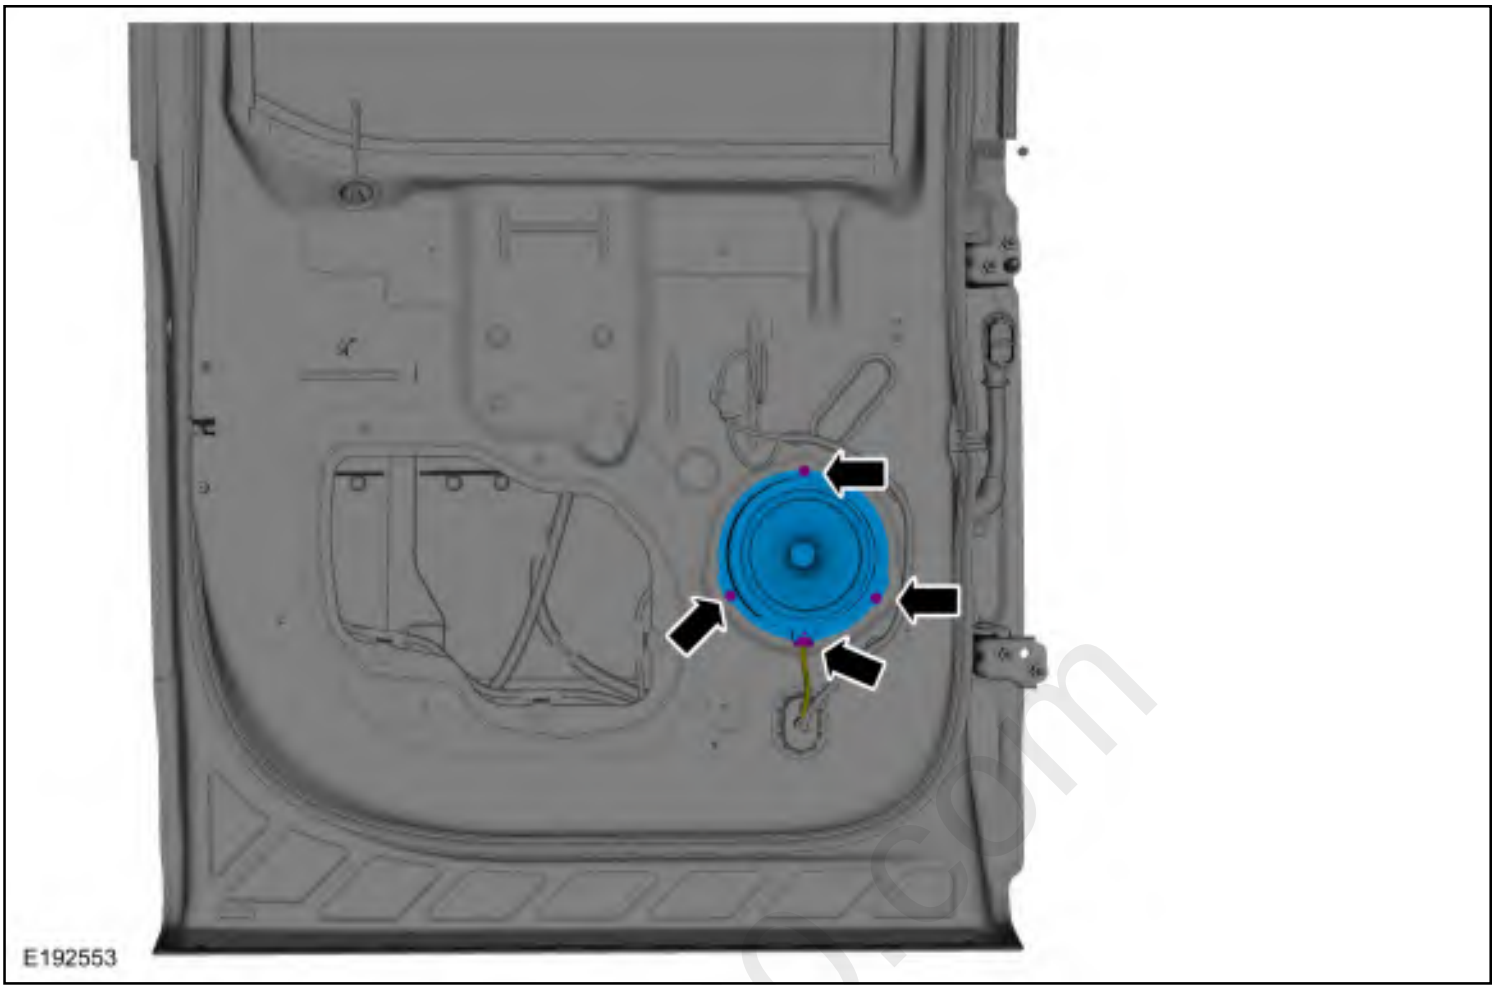


5. Remove the fore rear door glass run and bracket.

1. Remove the fore rear door glass run and bracket bolts.

Torque: 93 lb.in (10.5 Nm)

2. Remove the fore rear door glass run and bracket.

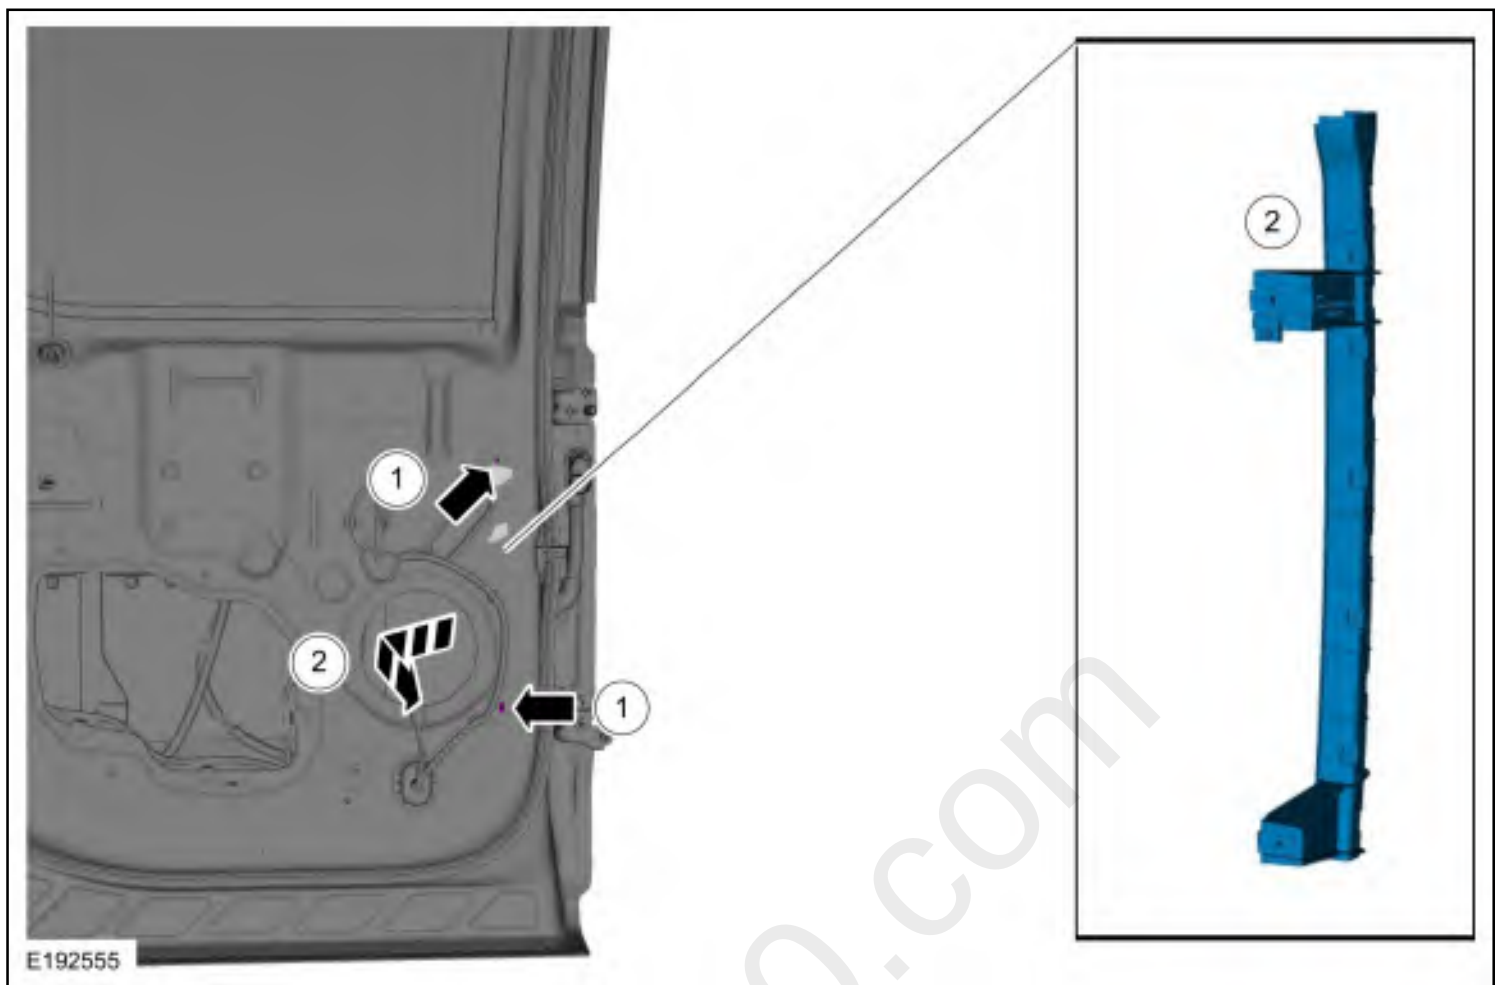

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

