

## Exterior Rear Door Handle - SuperCrew

Base Part Number: Base Part Number: 22404

### Removal

**NOTE:** *LH side shown, RH side similar.*

**NOTE:** *Removal steps in this procedure may contain installation details.*

1. Remove the rear door trim panel.

Refer to: [Rear Door Trim Panel - SuperCrew](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2. Remove the watershield.



E192556



3. Remove the exterior rear door handle access plug.



E192864



4. Remove the exterior rear door handle bolt.  
*Torque: 62 lb.in (7 Nm)*




E192865



5. Remove the exterior rear door handle access plugs.



6. Remove the exterior rear door handle nuts.  
*Torque: 62 lb.in (7 Nm)*

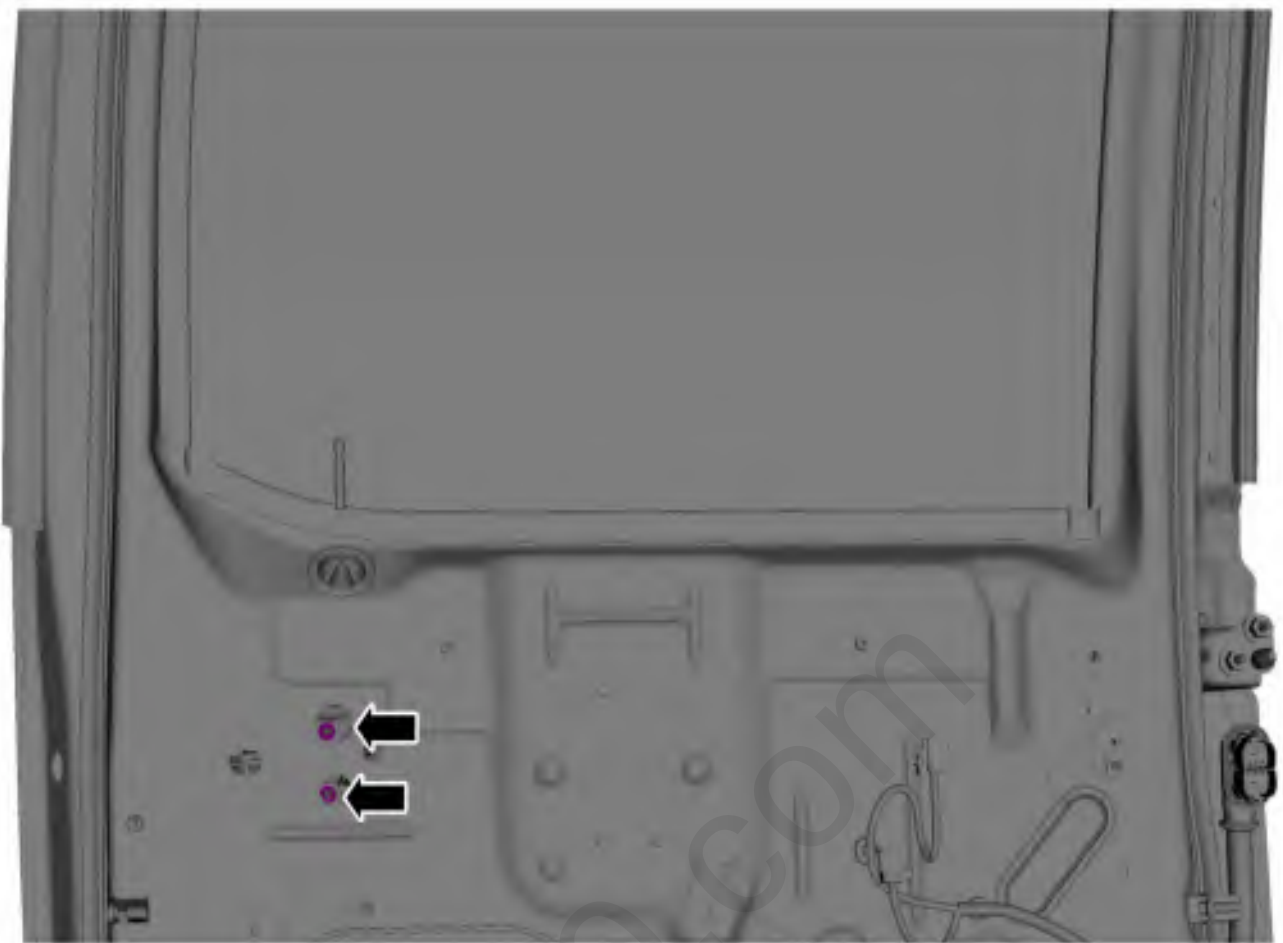


E192733



7. Remove the exterior rear door handle.

1. Position the exterior rear door handle out of the door.
2. Detach the exterior rear door handle cable from the routing tab.
3. Detach the exterior rear door handle cable from the handle retaining bracket.
4. Detach the exterior rear door handle cable end from the handle.

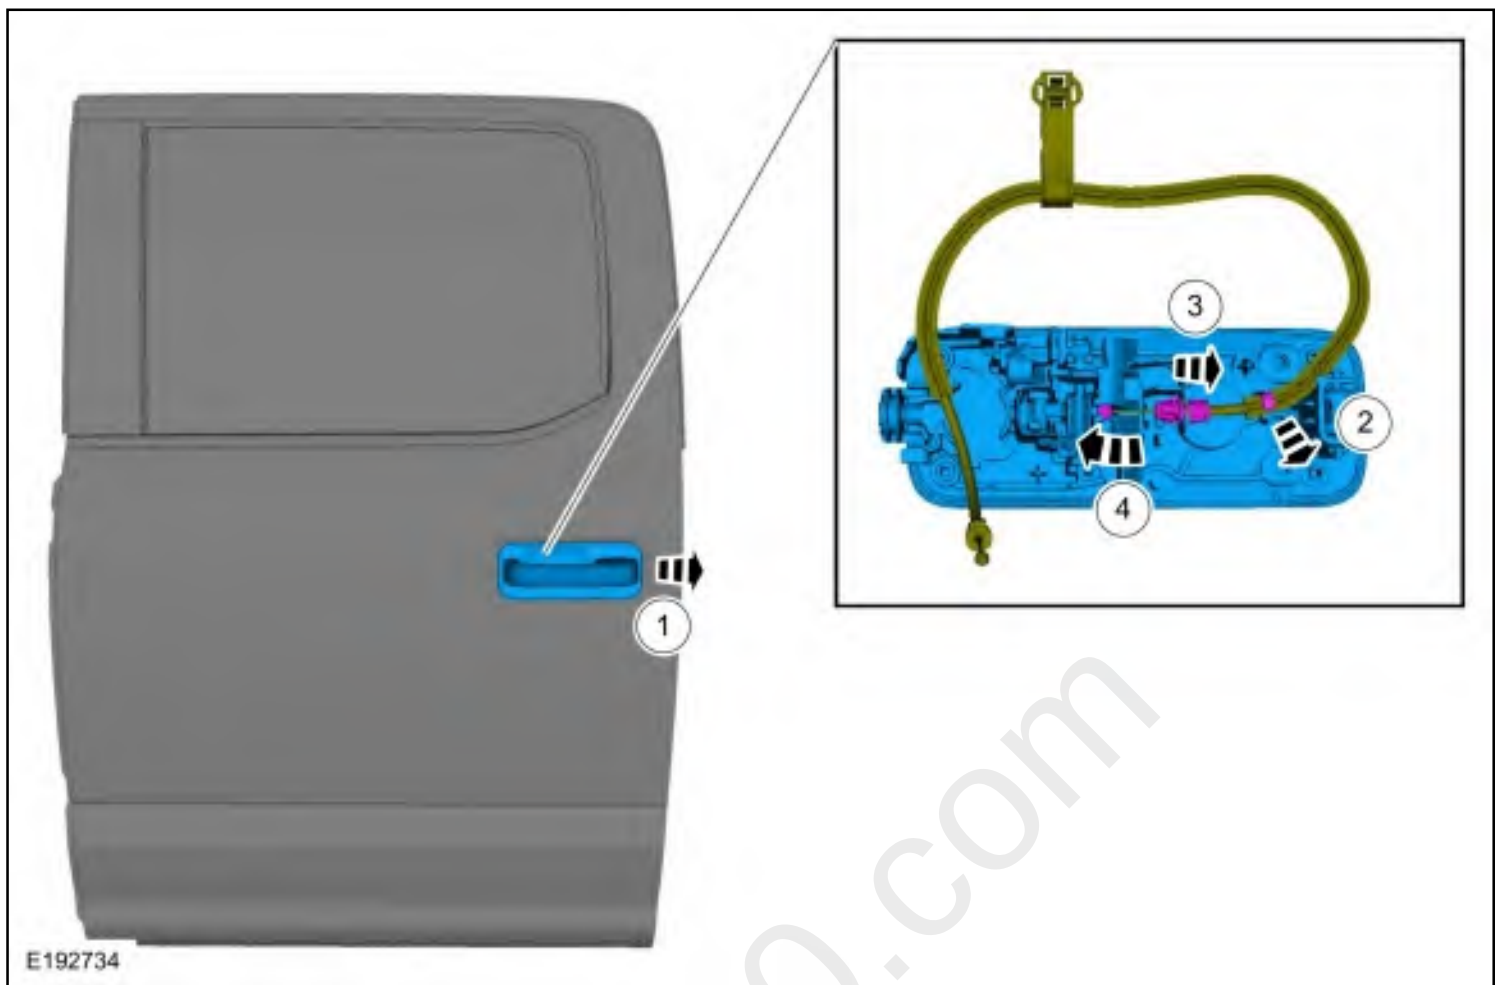

## Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company