


Rear Door Upper Latch - SuperCab

Removal

NOTE: *LH side shown, RH side similar.*


NOTE: *Removal steps in this procedure may contain installation details.*

1. Remove the rear door trim panel.
Refer to: [Rear Door Trim Panel - SuperCab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the rear door upper latch bolts.
Torque: 106 lb.in (12 Nm)

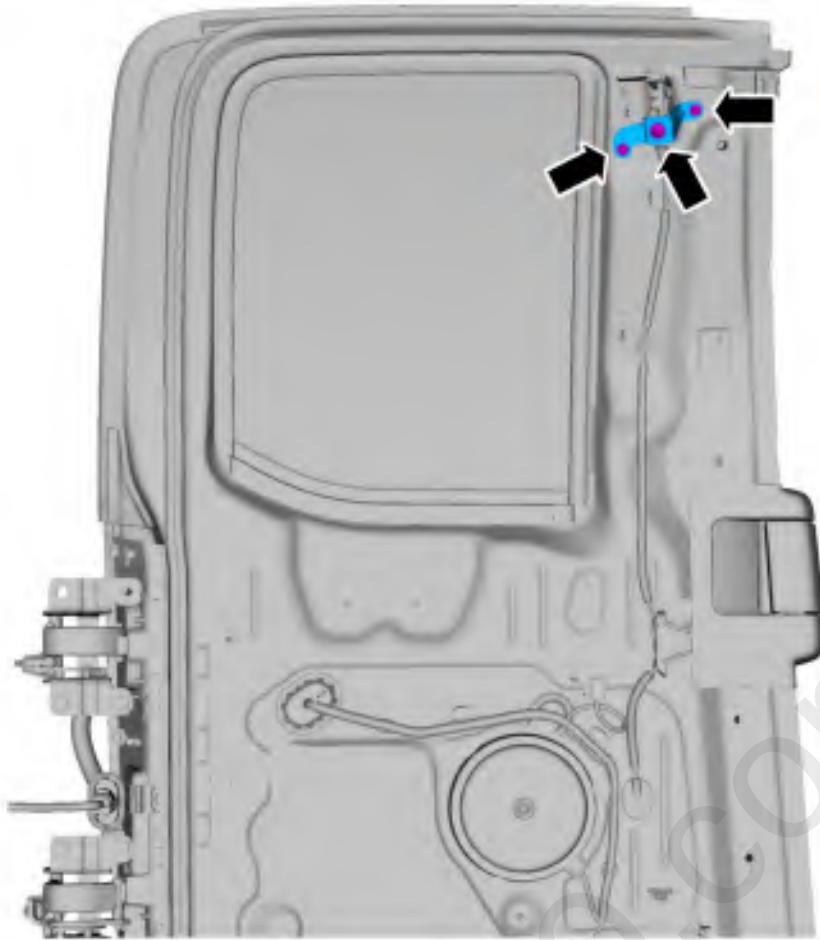

3. Remove the rear door upper latch.

1. Remove the rear door upper latch bolt.
Torque: 106 lb.in (12 Nm)
2. Detach the cable from the retaining bracket.
3. Release the upper cable end from the rear door upper latch.

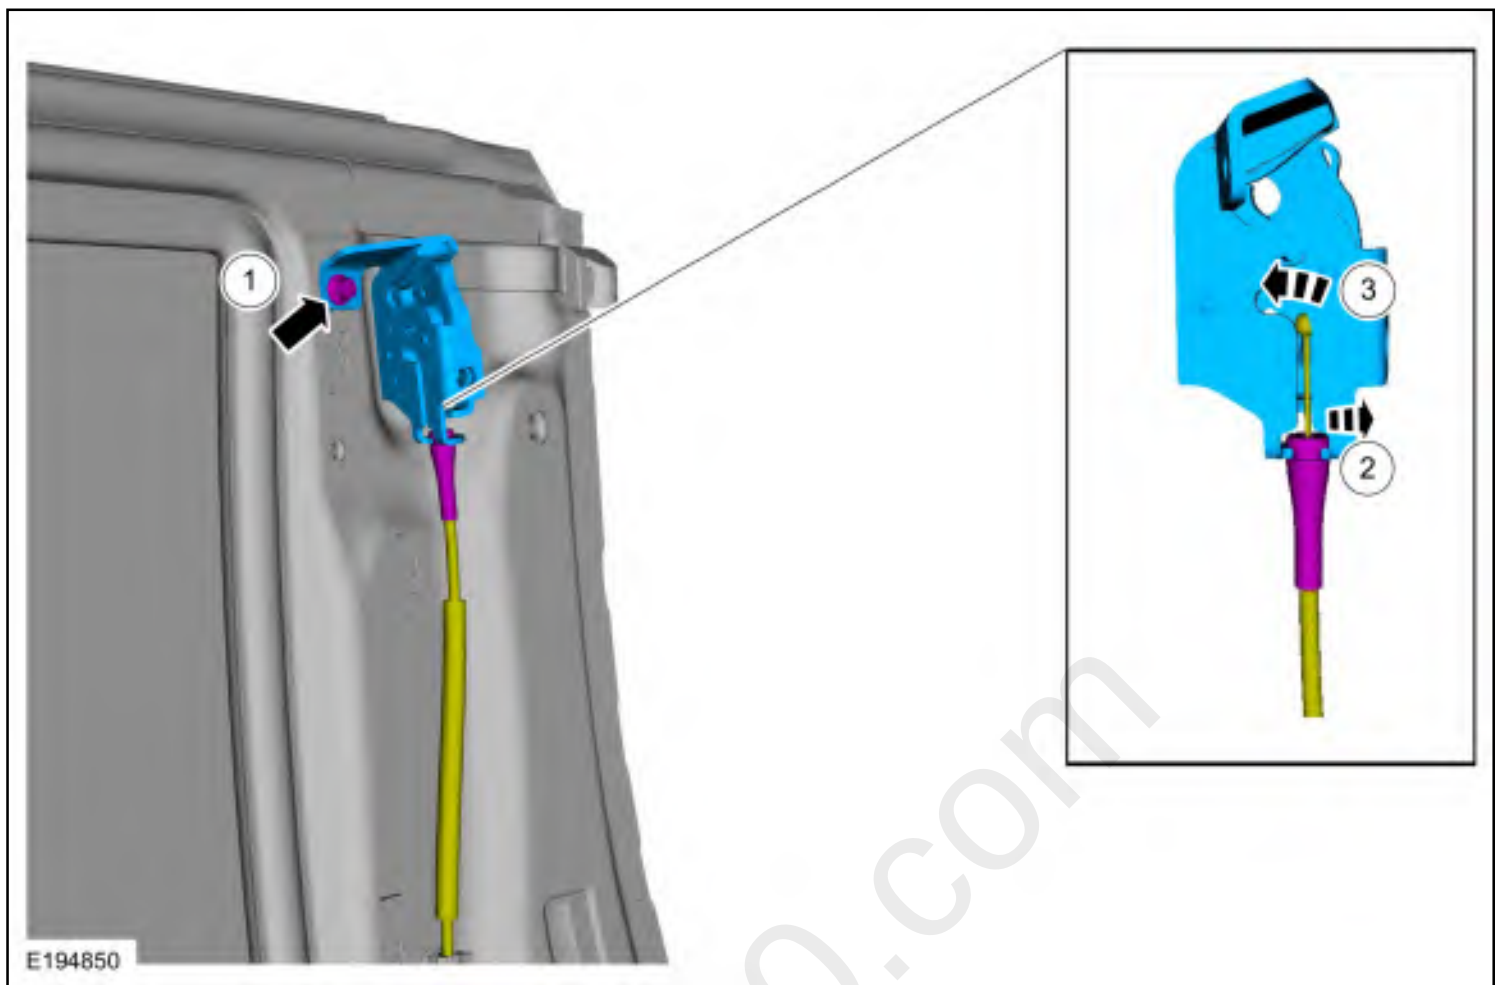

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company