


Rear Bumper

Base Part Number: Base Part Number: 17F838


Removal

NOTE: The towing package equipped rear bumper is shown, the standard bumper is similar.

1. Raise the vehicle on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. Remove the bolt, separate the harness retainer and position the harness over the frame rail.
Torque: 177 lb.in (20 Nm)

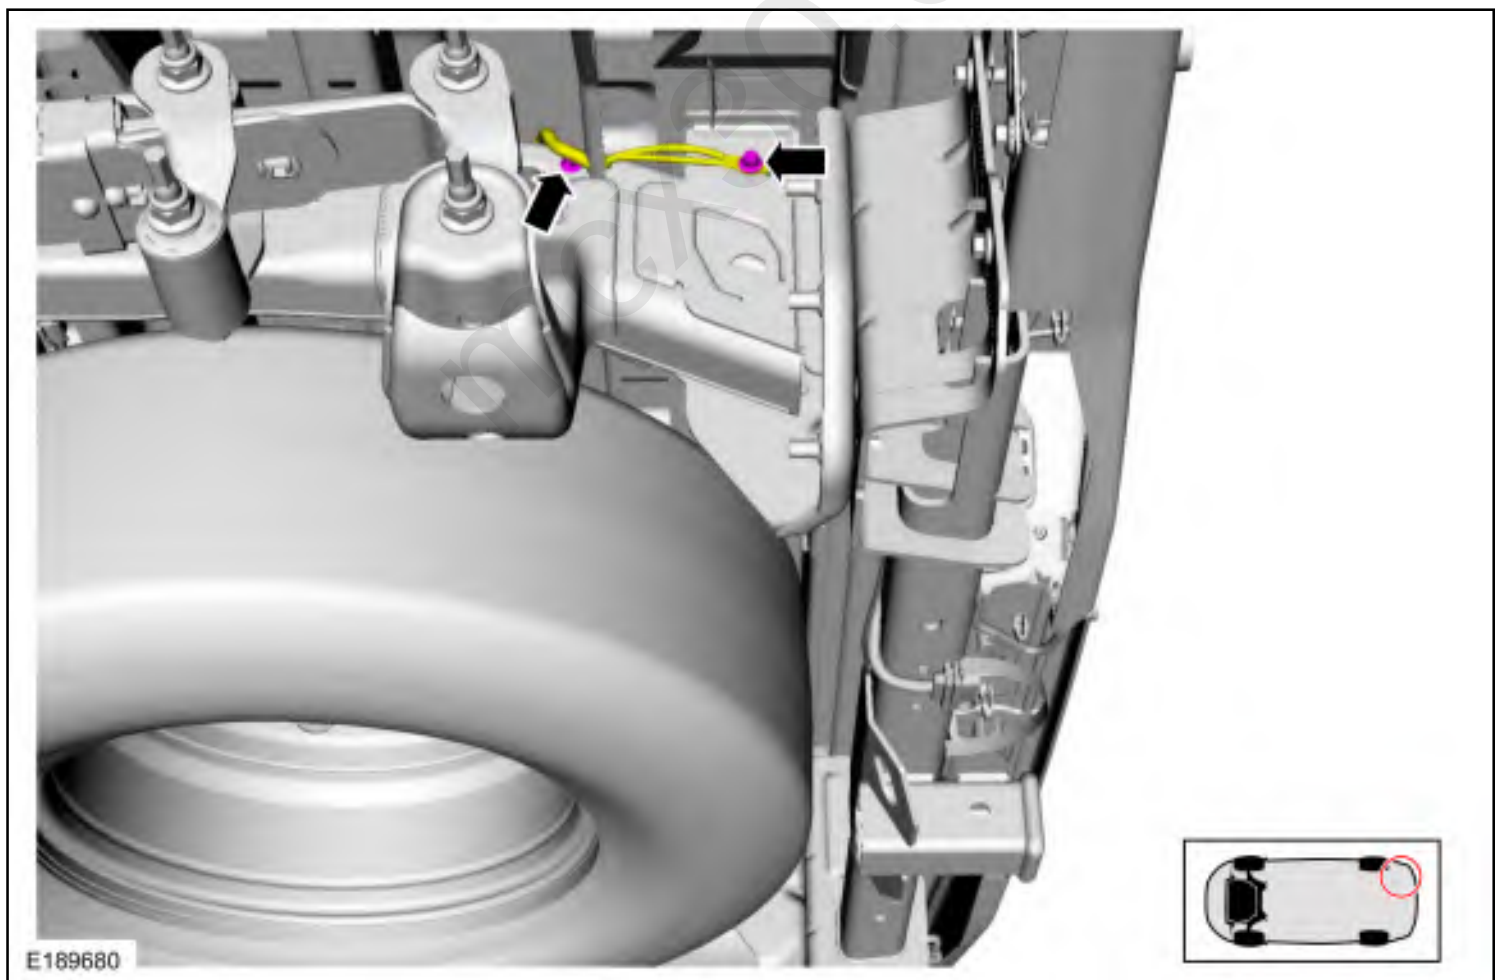

3. Disconnect the rear bumper wiring harness connector.

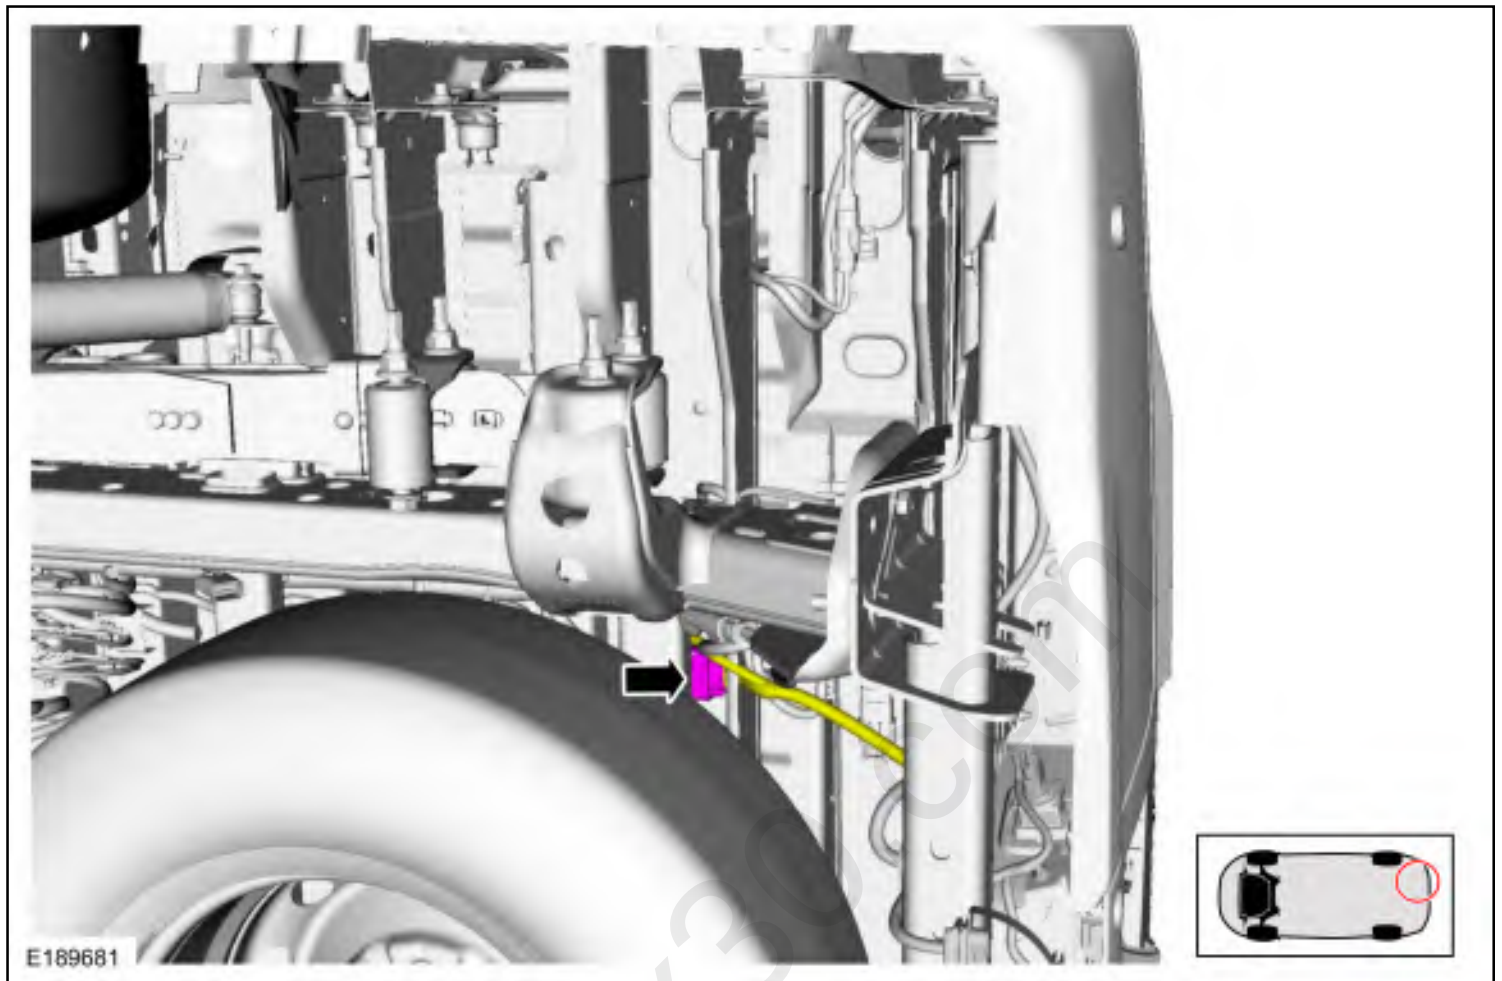


4. Remove the muffler and tailpipe assembly.

5. Partially lower the vehicle.

6. With the help of an assistant, remove the nuts and the rear bumper assembly.

Torque: 129 lb.ft (175 Nm)

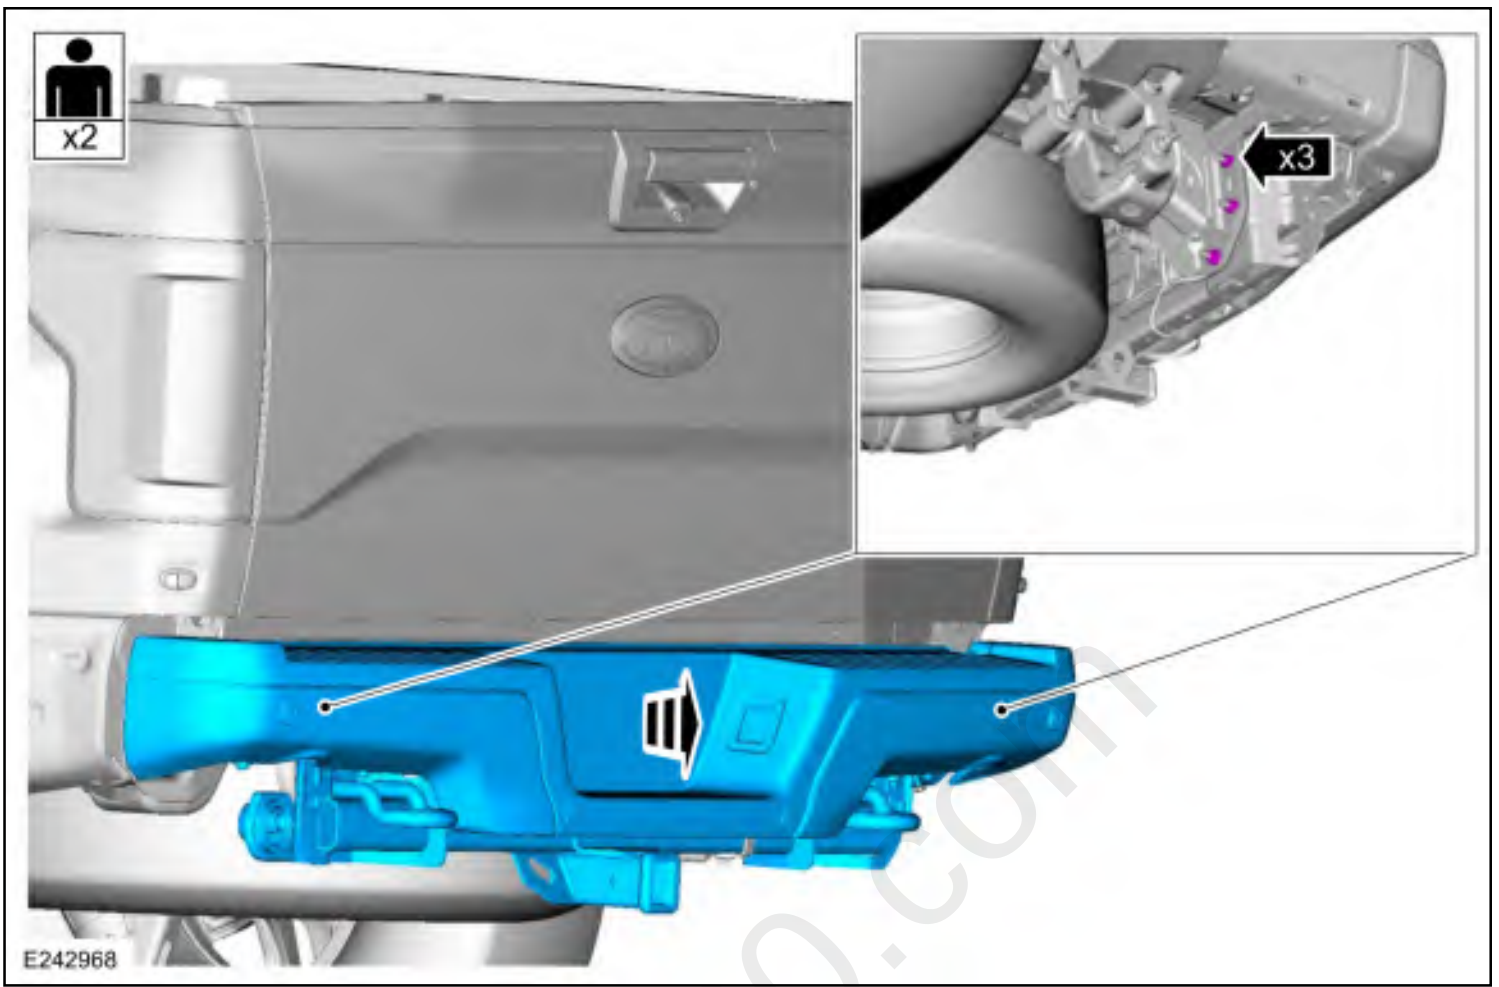

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company