



Adjustable Pedal Indexing

NOTICE: The adjustable pedal system must be indexed whenever the brake pedal assembly or accelerator pedal assembly is installed or damage to the components may result.


1. Disconnect the adjustable pedal motor drive cable from the adjustable brake pedal drive.

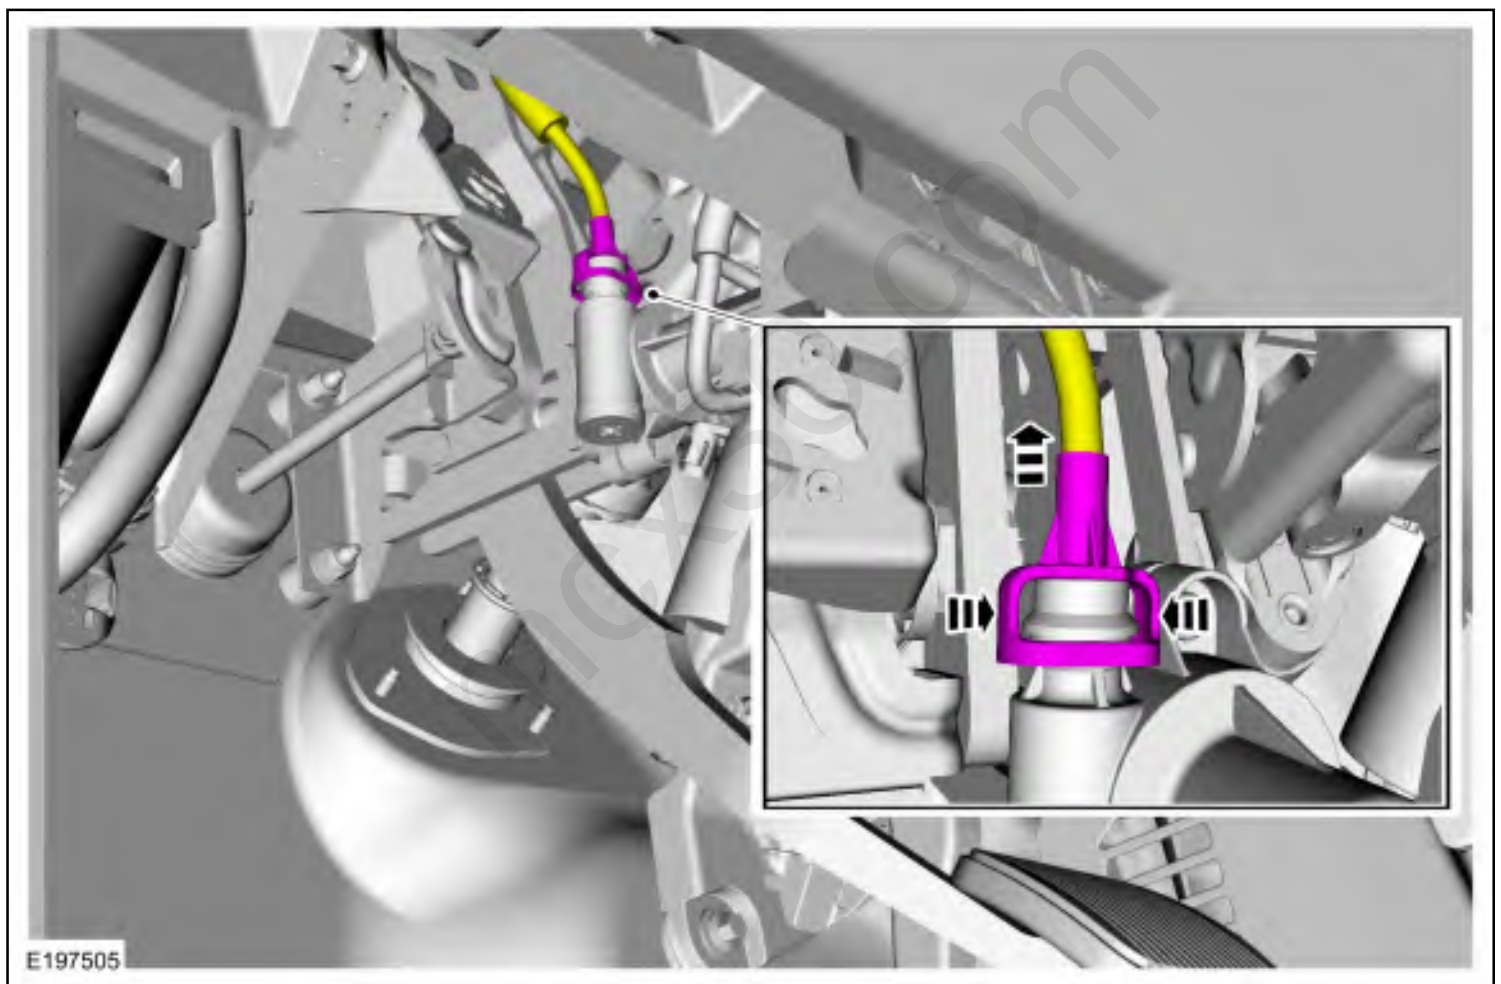


2. Operate the accelerator pedal to the full rearward position.

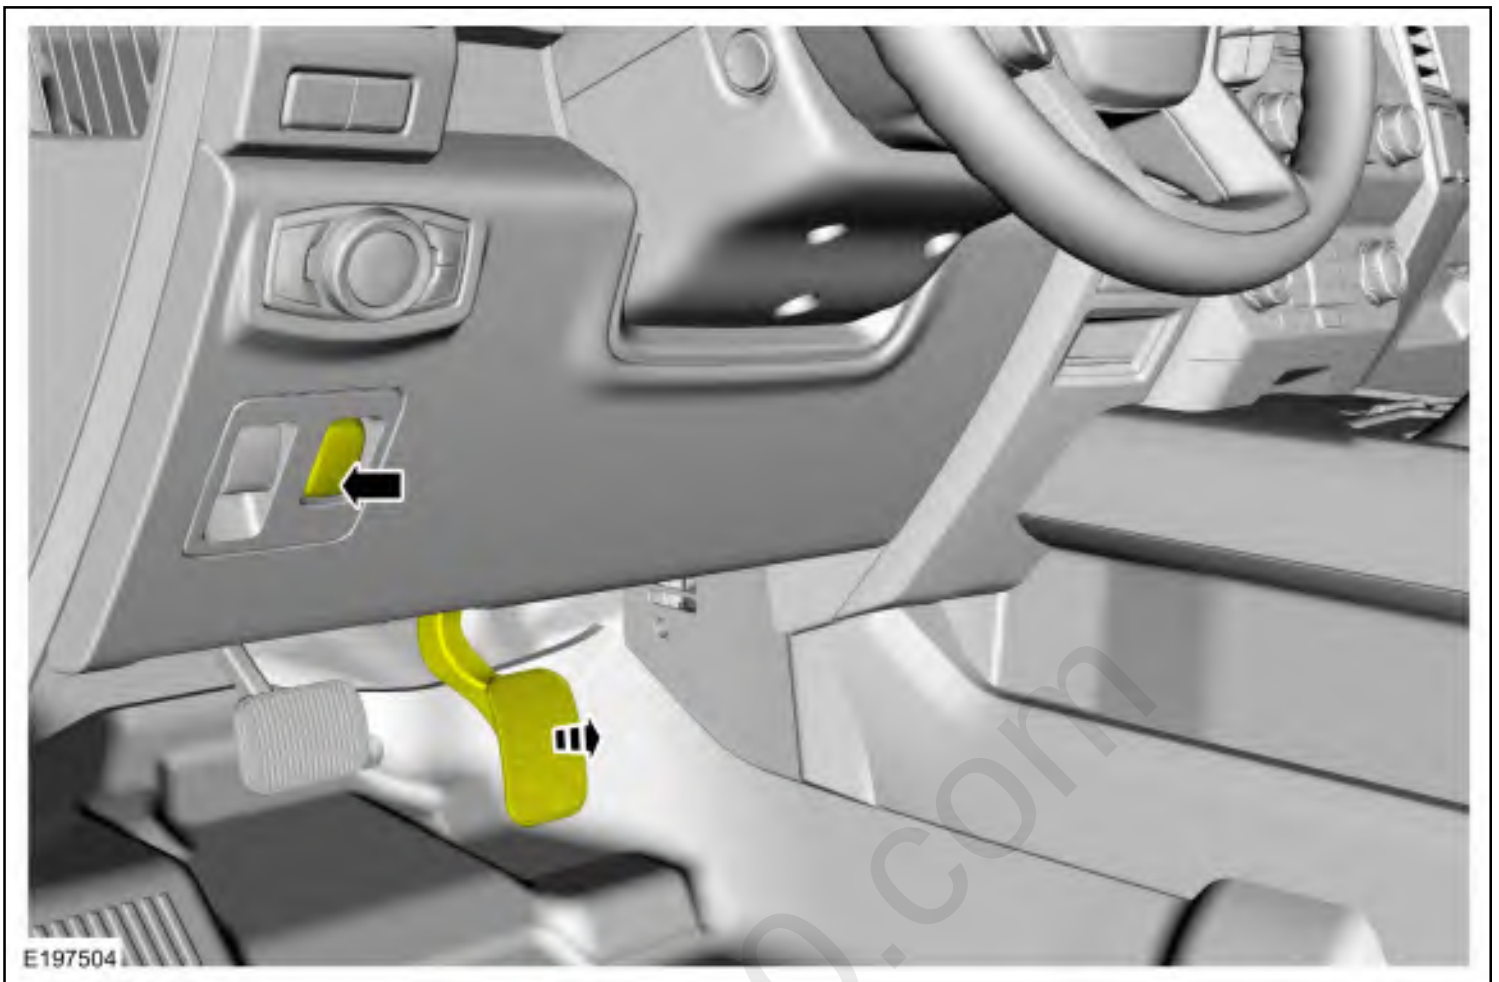


3. Connect the adjustable pedal motor drive cable to the adjustable brake pedal drive.

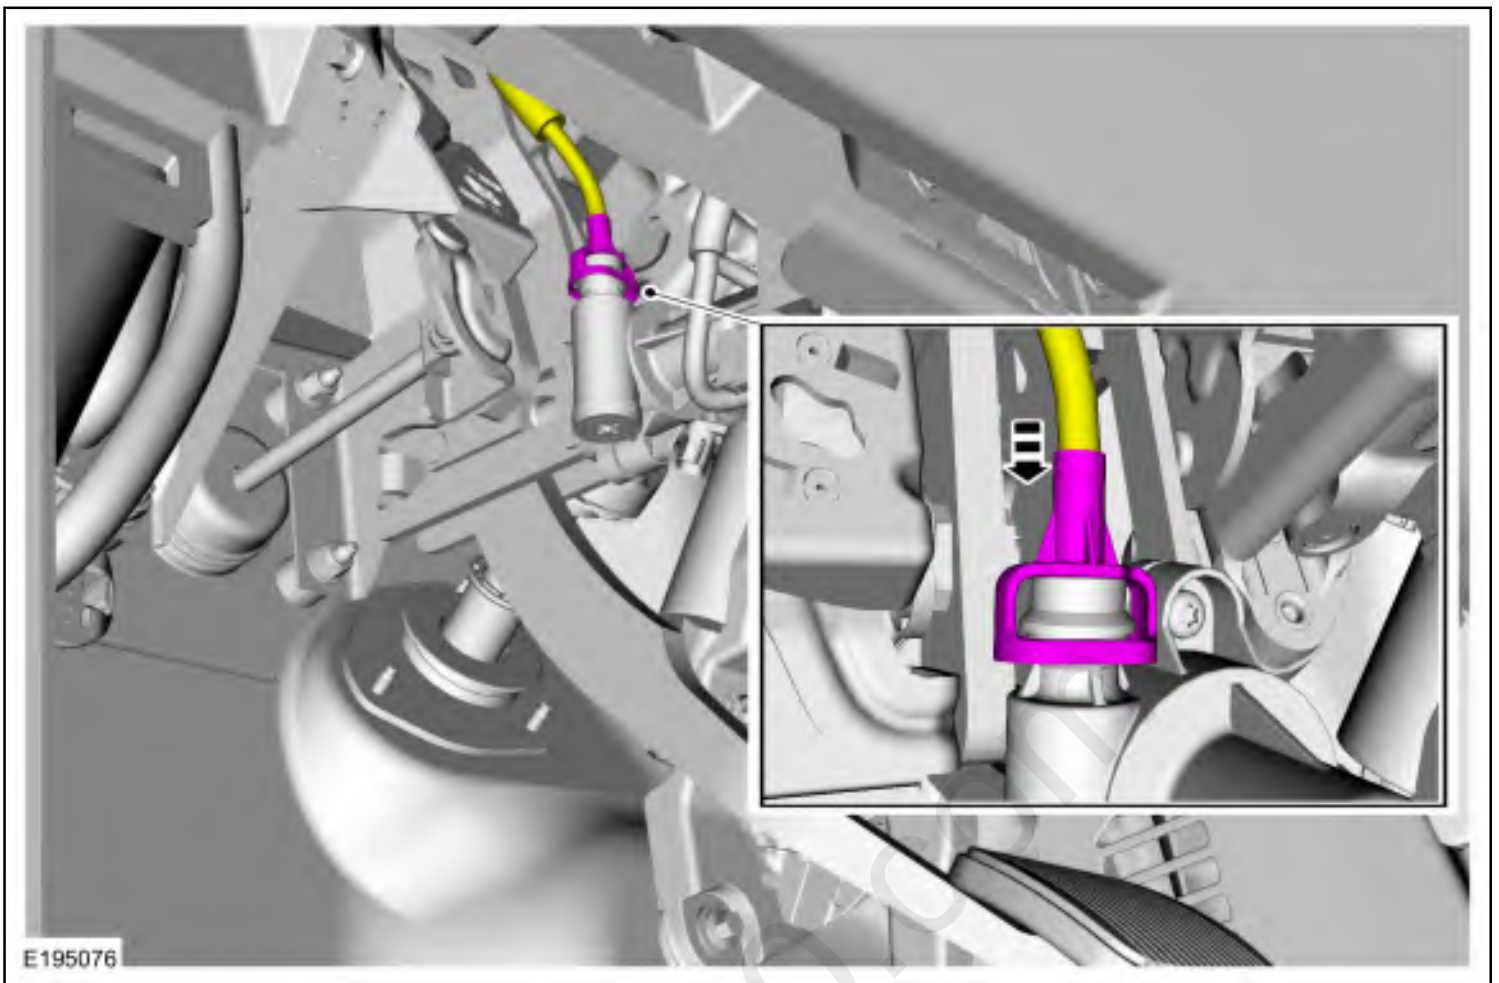


4. Operate the adjustable pedals until the pin is aligned with the witness mark on the brake pedal bracket.

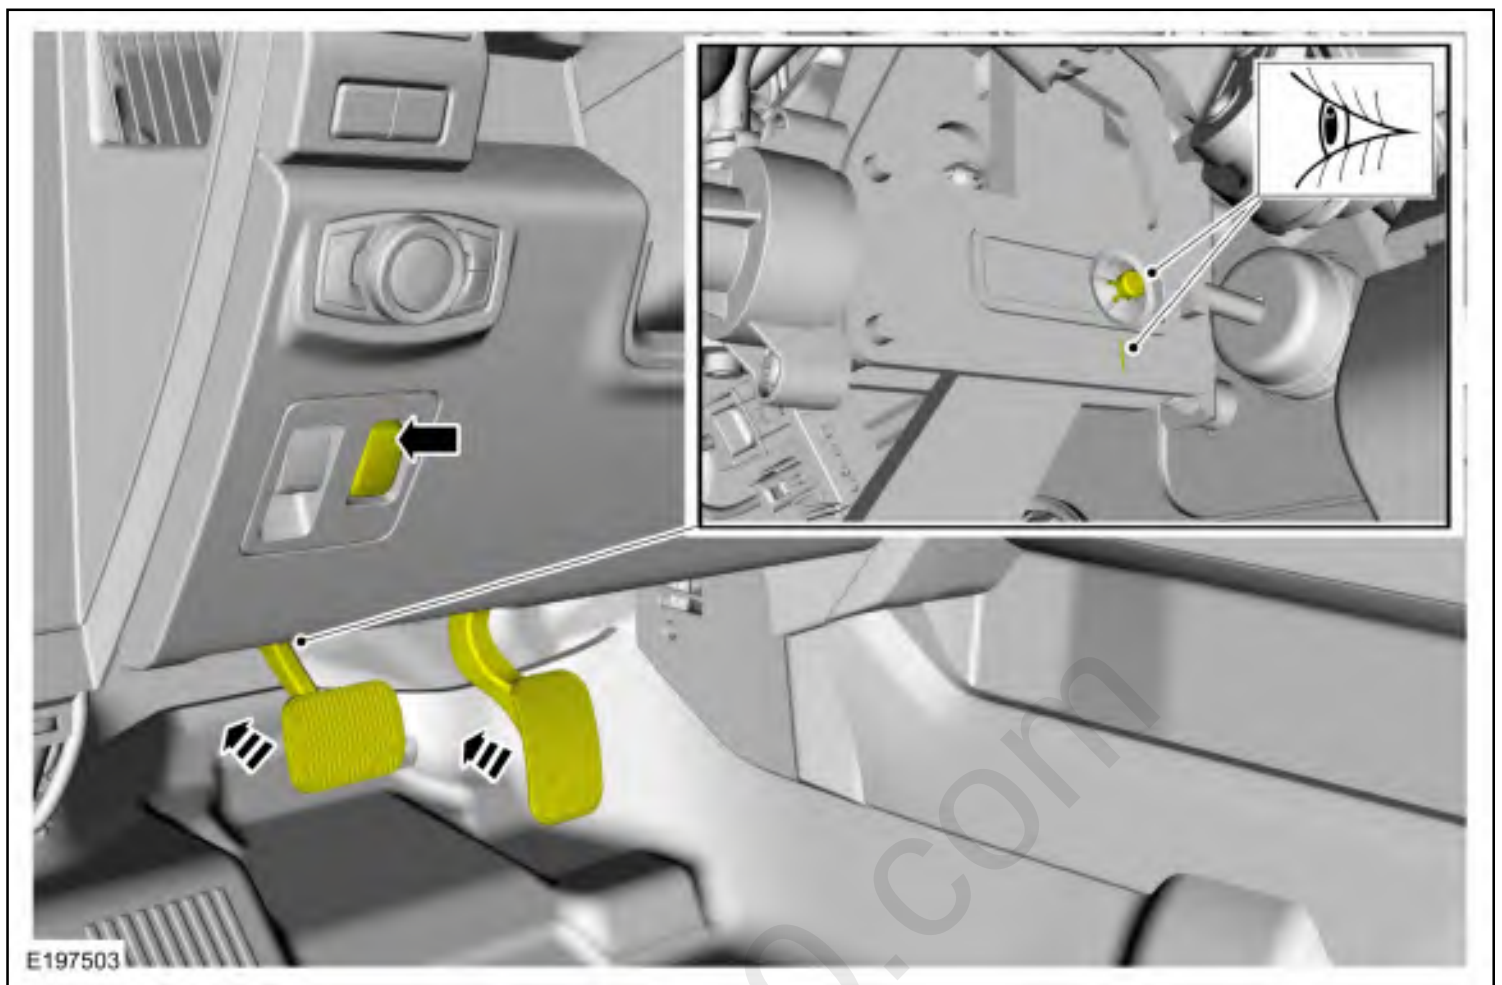


5. Disconnect the adjustable pedal motor drive cable to the adjustable brake pedal drive.

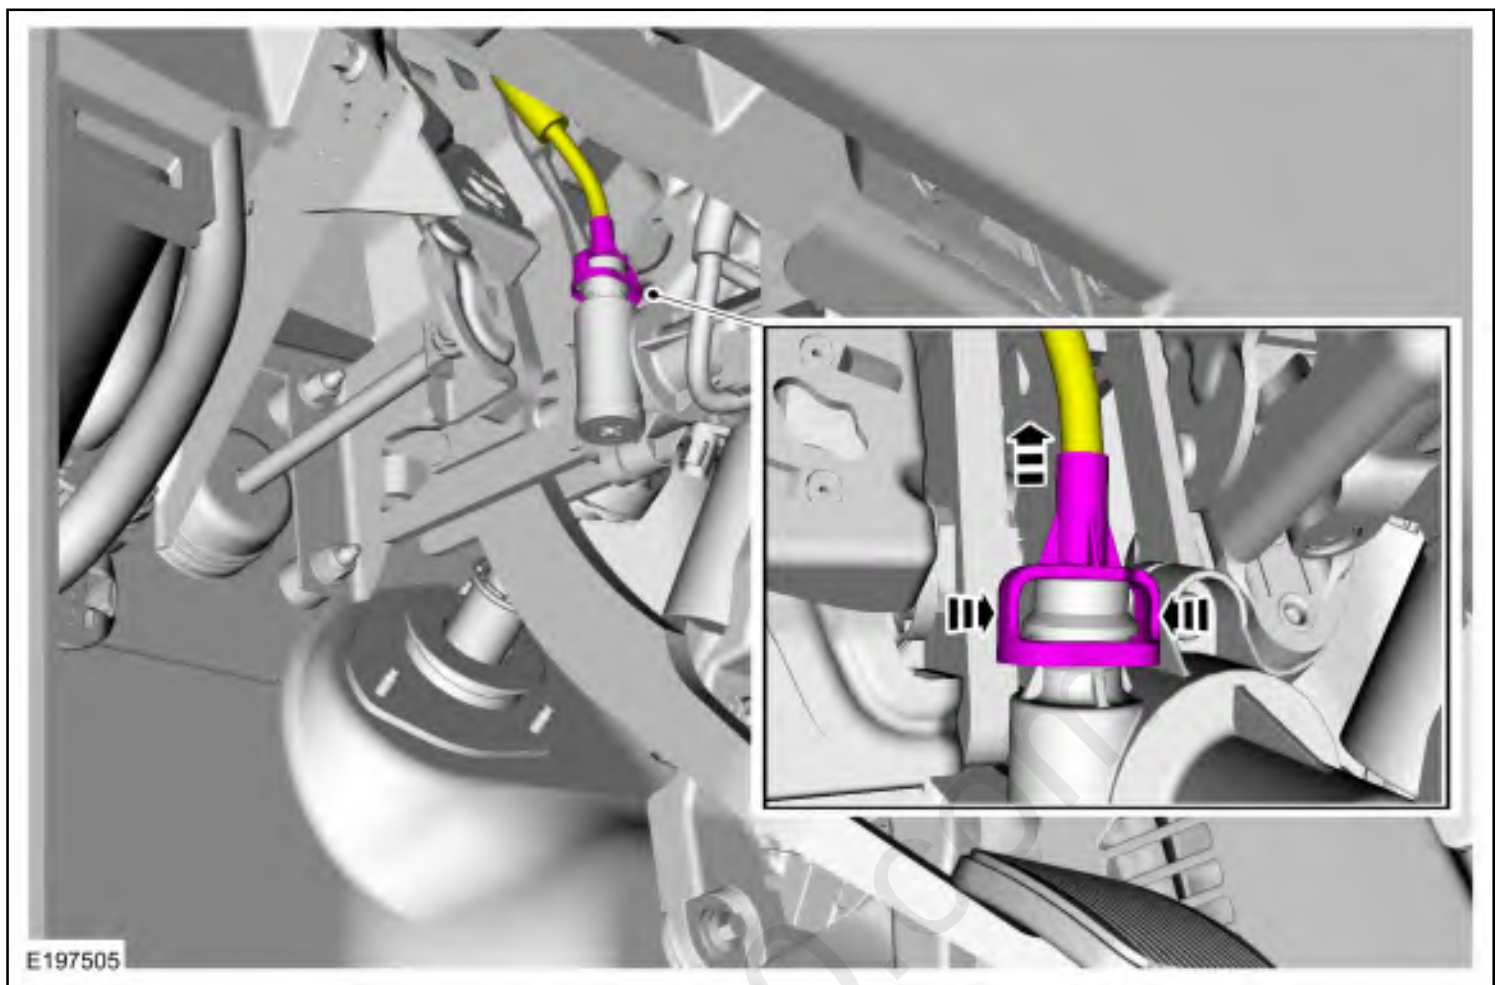

6. Operate the adjustable accelerator pedal forward until there is a 4mm (0.157 in) gap between the screw head and the moving structure of the accelerator pedal.

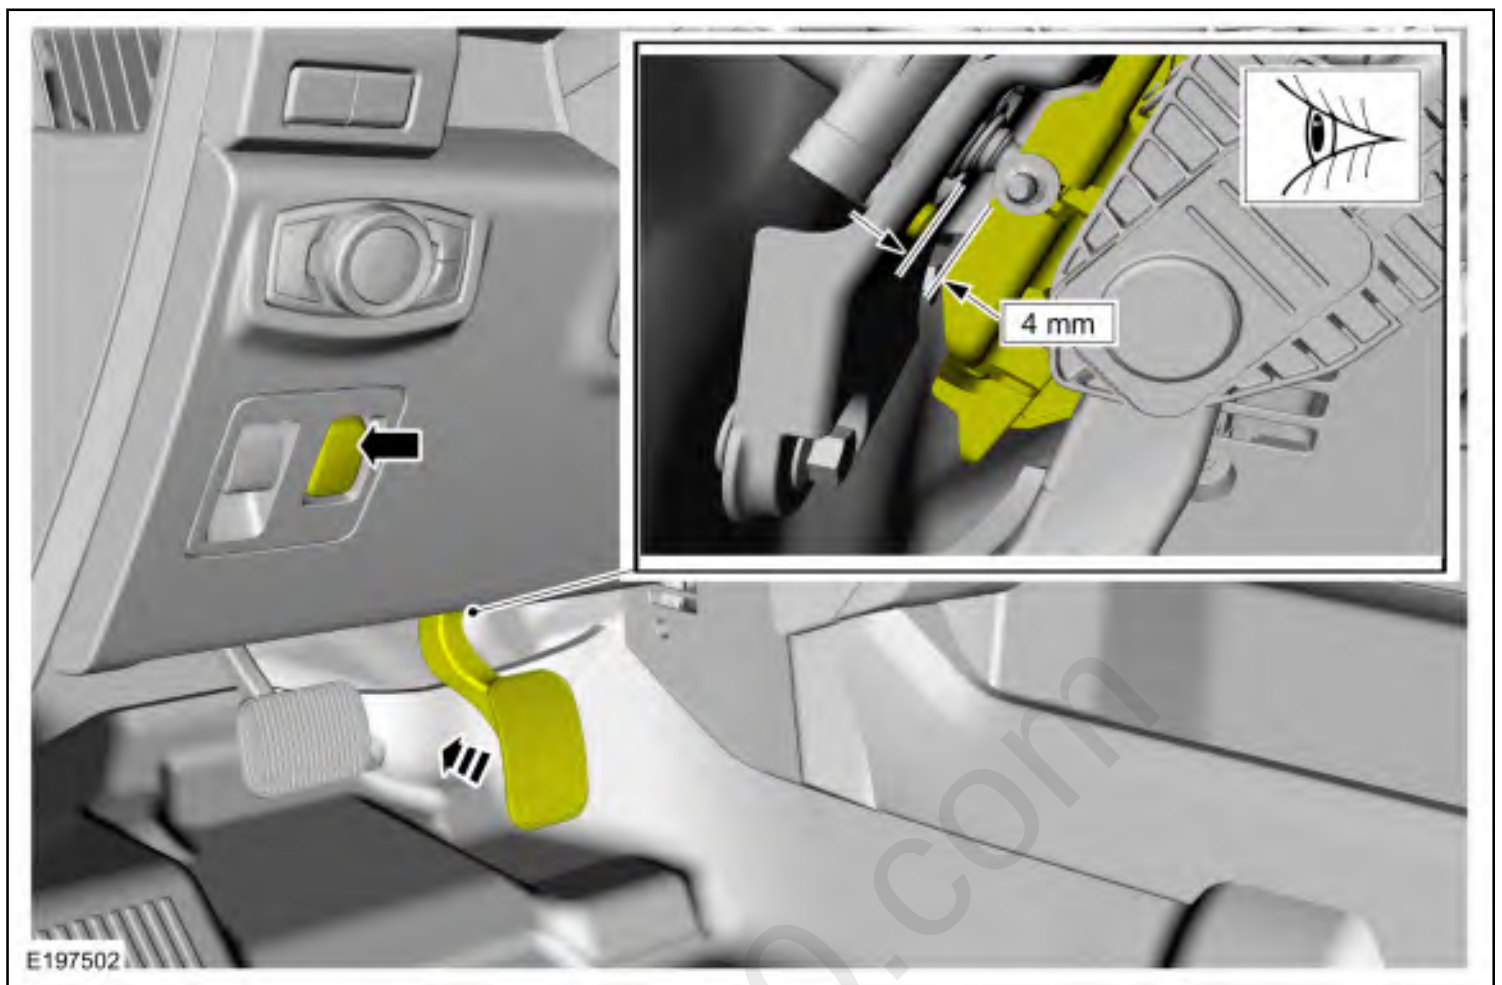

7. Connect the adjustable pedal motor drive cable to the adjustable brake pedal drive.
 - Check that the brake and accelerator pedals can be fully adjusted forward and rearward.

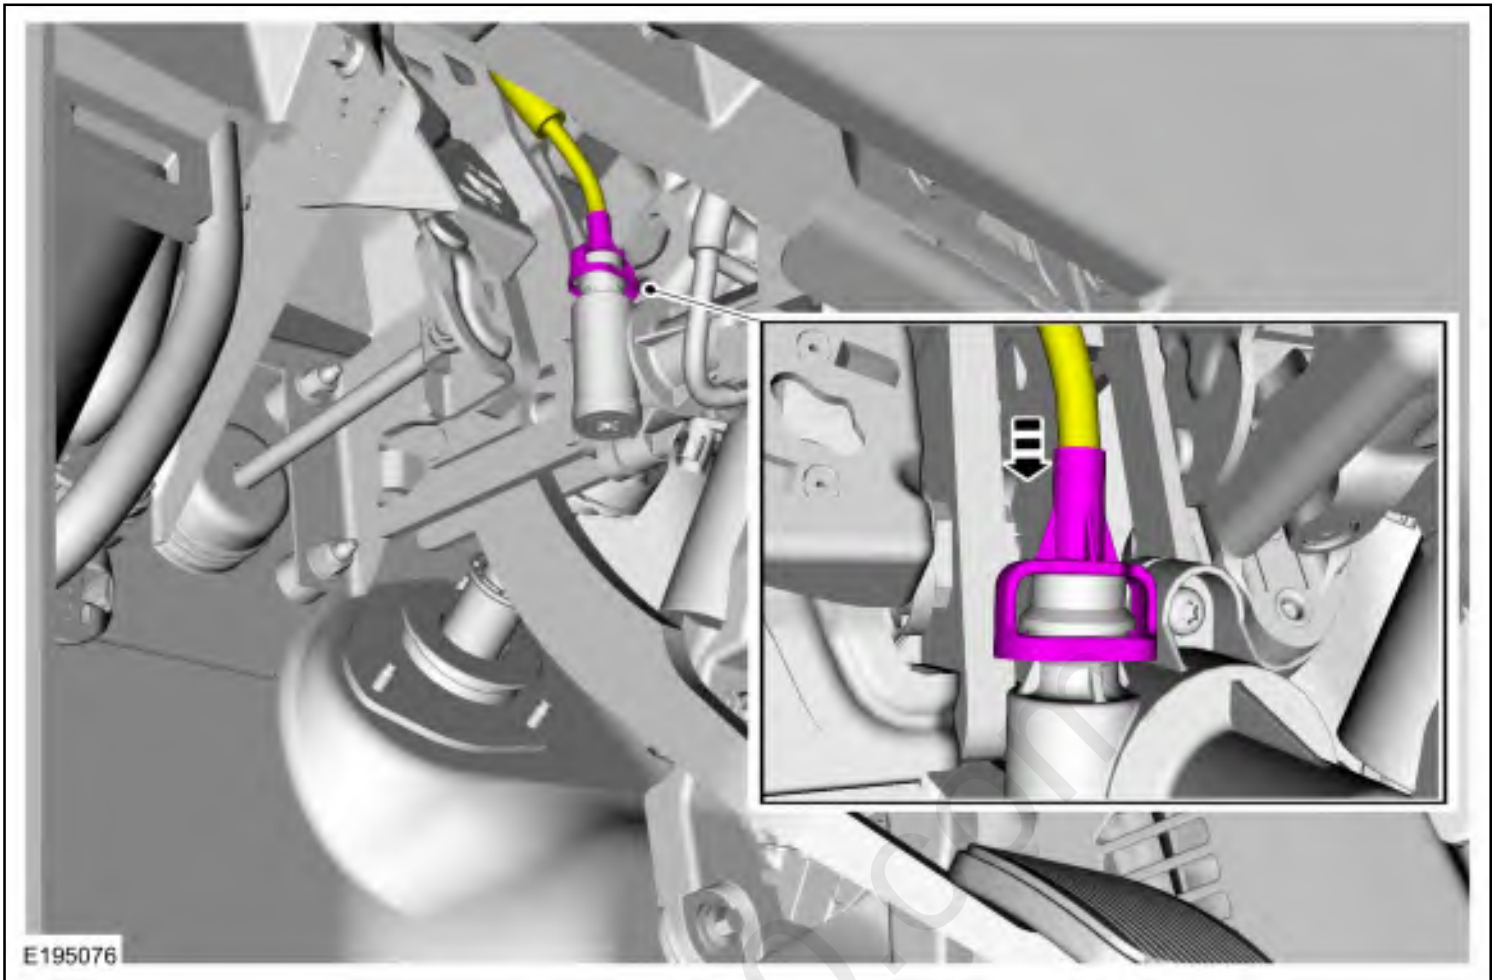

Copyright © 2018 Ford Motor Company