

Accelerator Pedal

Base Part Number: Base Part Number: 9735

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: To prevent setting Diagnostic Trouble Codes (DTCs), make sure the ignition switch is in the OFF position prior to disconnecting the accelerator pedal electrical connector.

NOTE: Vehicles with adjustable pedals, position the drivers seat to the full rearward position and if possible adjust the pedals to the full forward position.

Accelerator Pedal — Fixed


1. Disconnect the accelerator pedal sensor electrical connector. Remove the 3 bolts and the accelerator pedal assembly.
Torque: 155 lb.in (17.5 Nm)

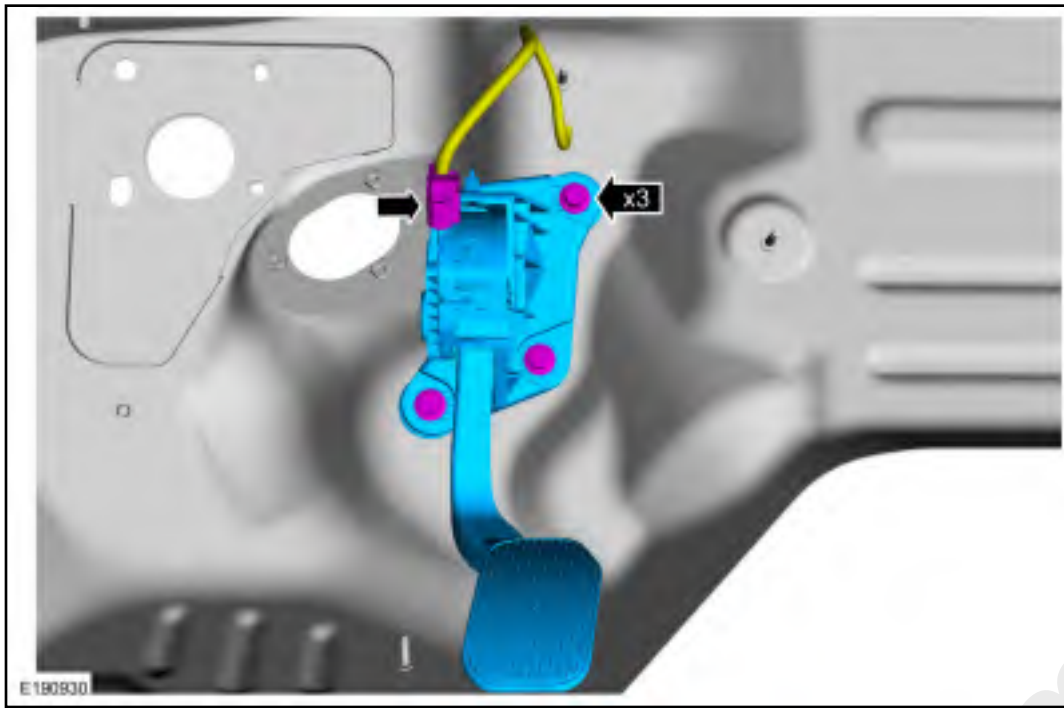

Accelerator Pedal — Adjustable

- Disconnect the 2 accelerator pedal electrical connectors.
- Disconnect the wire harness and accelerator pedal to brake pedal cable pushpins.
- Disconnect the accelerator pedal to brake pedal cable from the brake pedal.
- Remove the 3 bolts and the accelerator pedal assembly.

Torque: 155 lb.in (17.5 Nm)

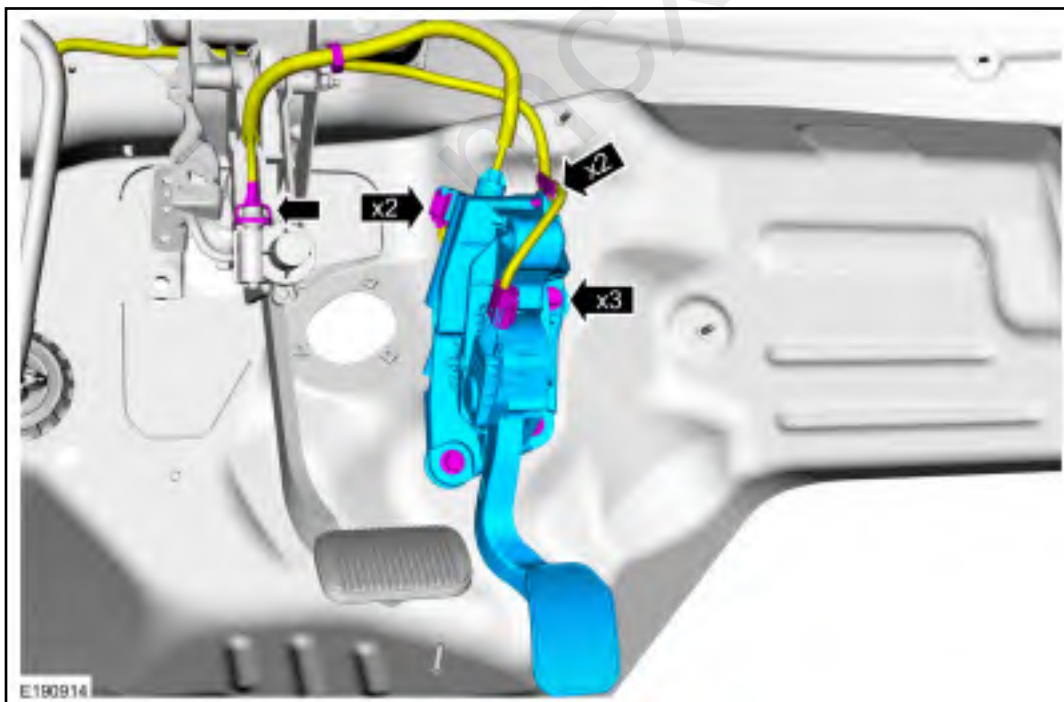

Installation

1. To install, reverse the removal procedure.

2. Carry out the adjustable pedal indexing procedure.

Refer to: [Adjustable Pedal Indexing](#) (206-06 Hydraulic Brake Actuation, General Procedures).

Copyright © 2018 Ford Motor Company

mcx30.com