

Satellite Radio Antenna

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Lower the headliner.

Refer to: [Headliner - Lowering - Regular Cab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Headliner - Lowering - SuperCab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Headliner - Lowering - SuperCrew](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

1. Disconnect the electrical connector.
2. Remove the satellite radio antenna bolt.
Torque: 62 lb.in (7 Nm)
3. Remove the satellite radio antenna retainer.
4. Remove the satellite radio antenna from the roof.

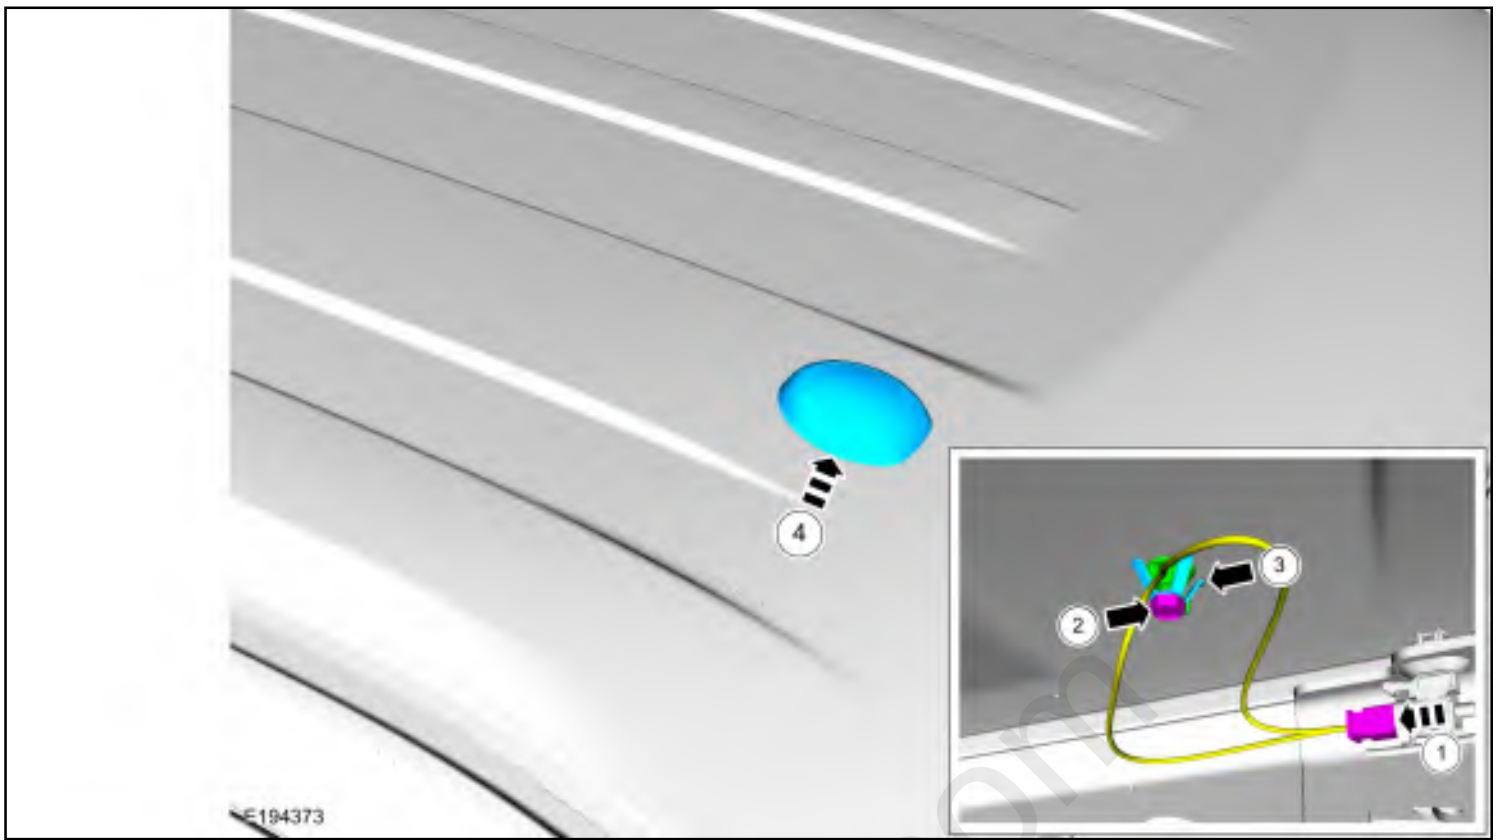

Installation


Existing antenna

1. To install, reverse the removal procedure.

New antenna

2. **NOTE:** *If installing a new satellite radio antenna it is not necessary to remove the bolt from the satellite radio antenna base.*

Install the satellite radio harness through the roof open and push the base down until fully seated.

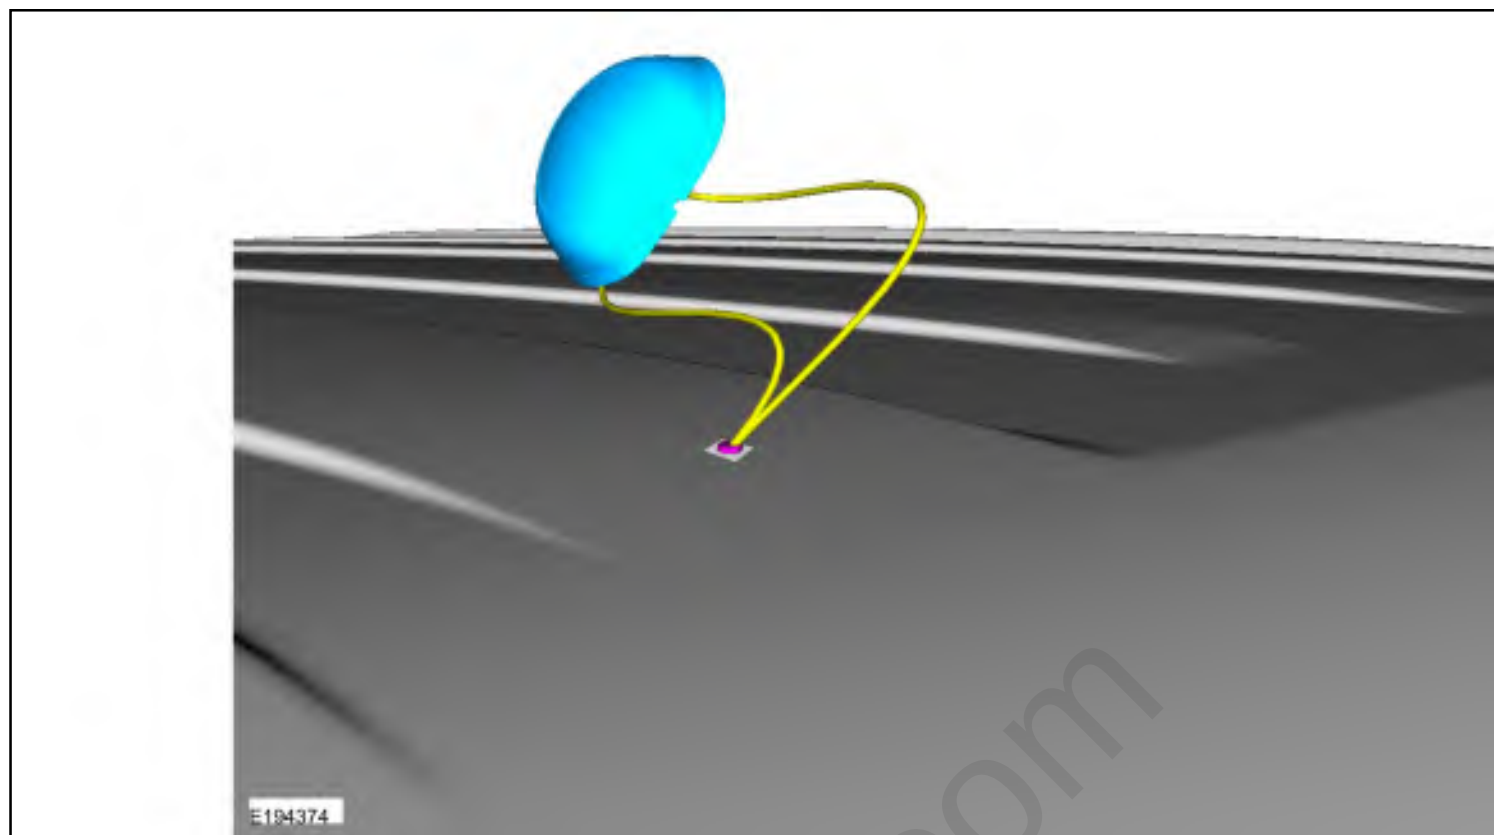

Copyright © 2018 Ford Motor Company