


SYNC Module [APIM] to Universal Serial Bus (USB) Port Cable

Removal


Vehicles with floor console

1. Remove the floor console.
Refer to: [Floor Console](#) (501-12 Instrument Panel and Console, Removal and Installation).
2. Remove the APIM.
Refer to: [SYNC Module \[APIM\]](#) (415-00B Information and Entertainment System - General Information - Vehicles With: SYNC Without Touchscreen, Removal and Installation).
3. Release the USB cable retainers and remove the USB cable following the routing shown.

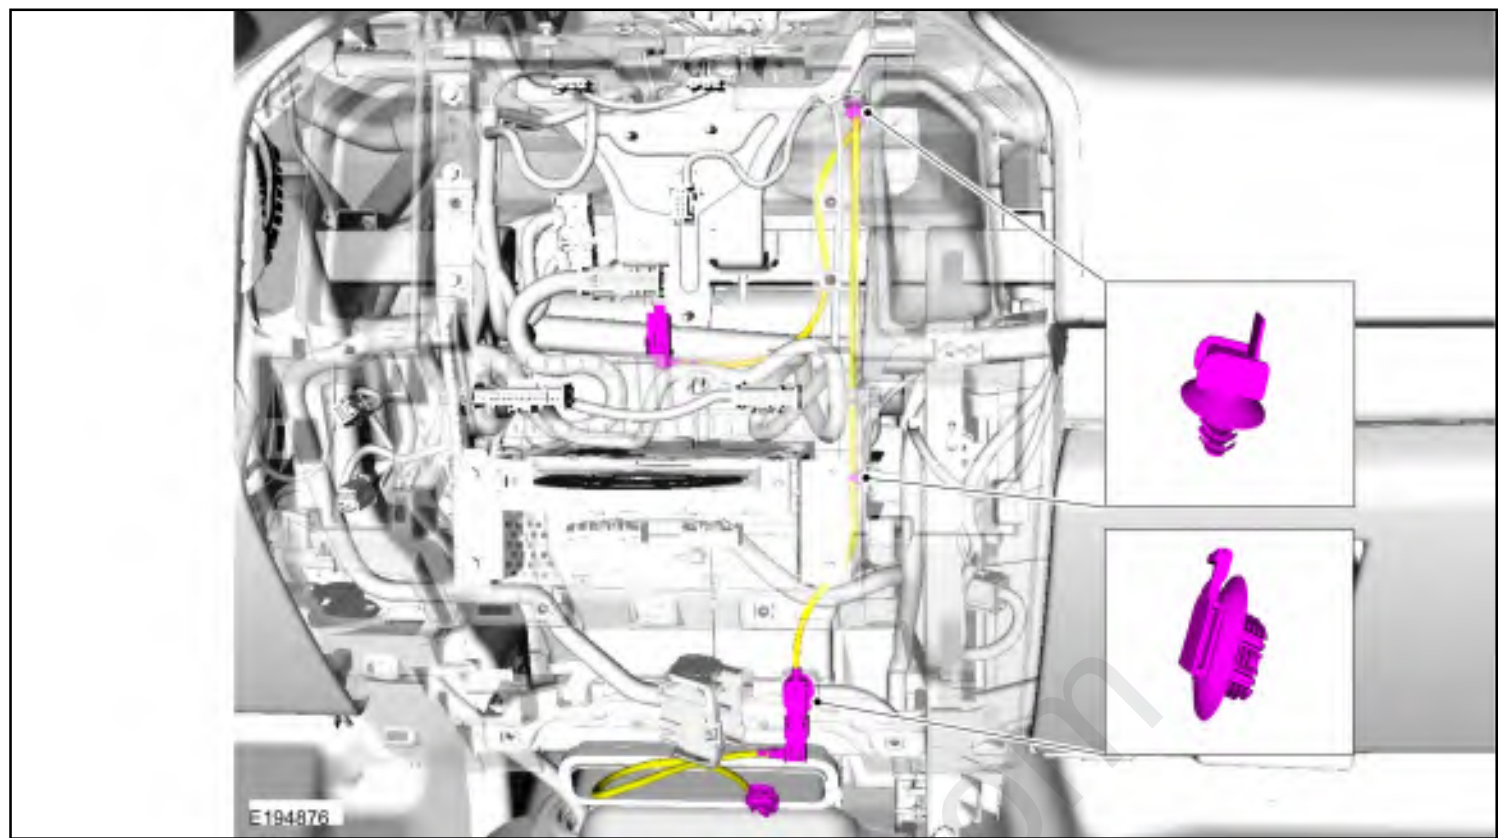

Vehicles without floor console


4. Remove the bolt at the lower instrument panel trim panel.
Torque: 22 lb.in (2.5 Nm)

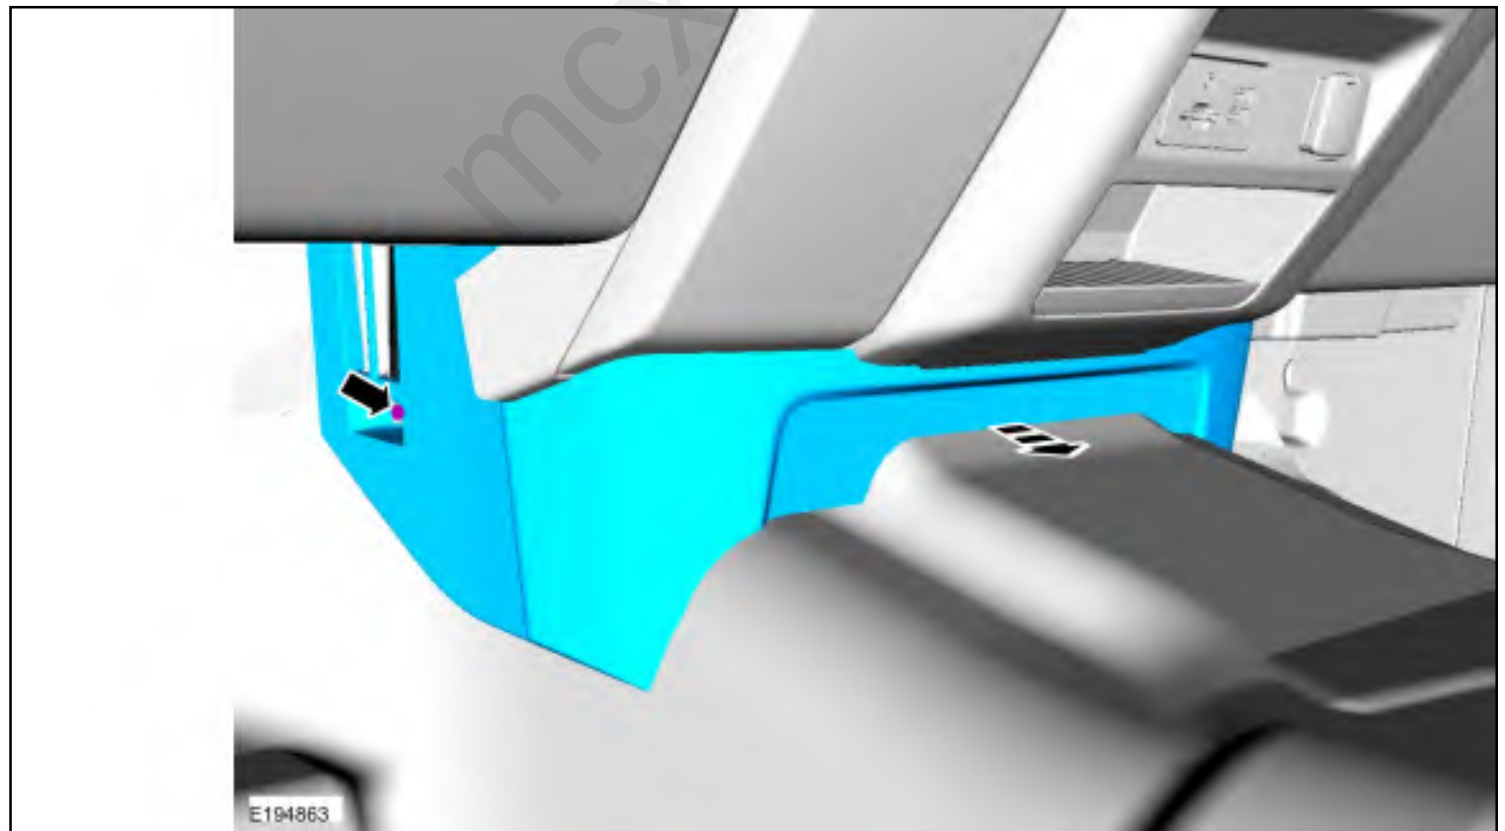

5. Remove the bolts and the lower instrument panel finish panel.

- Disconnect the electrical connectors.


Torque: 48 lb.in (5.4 Nm)

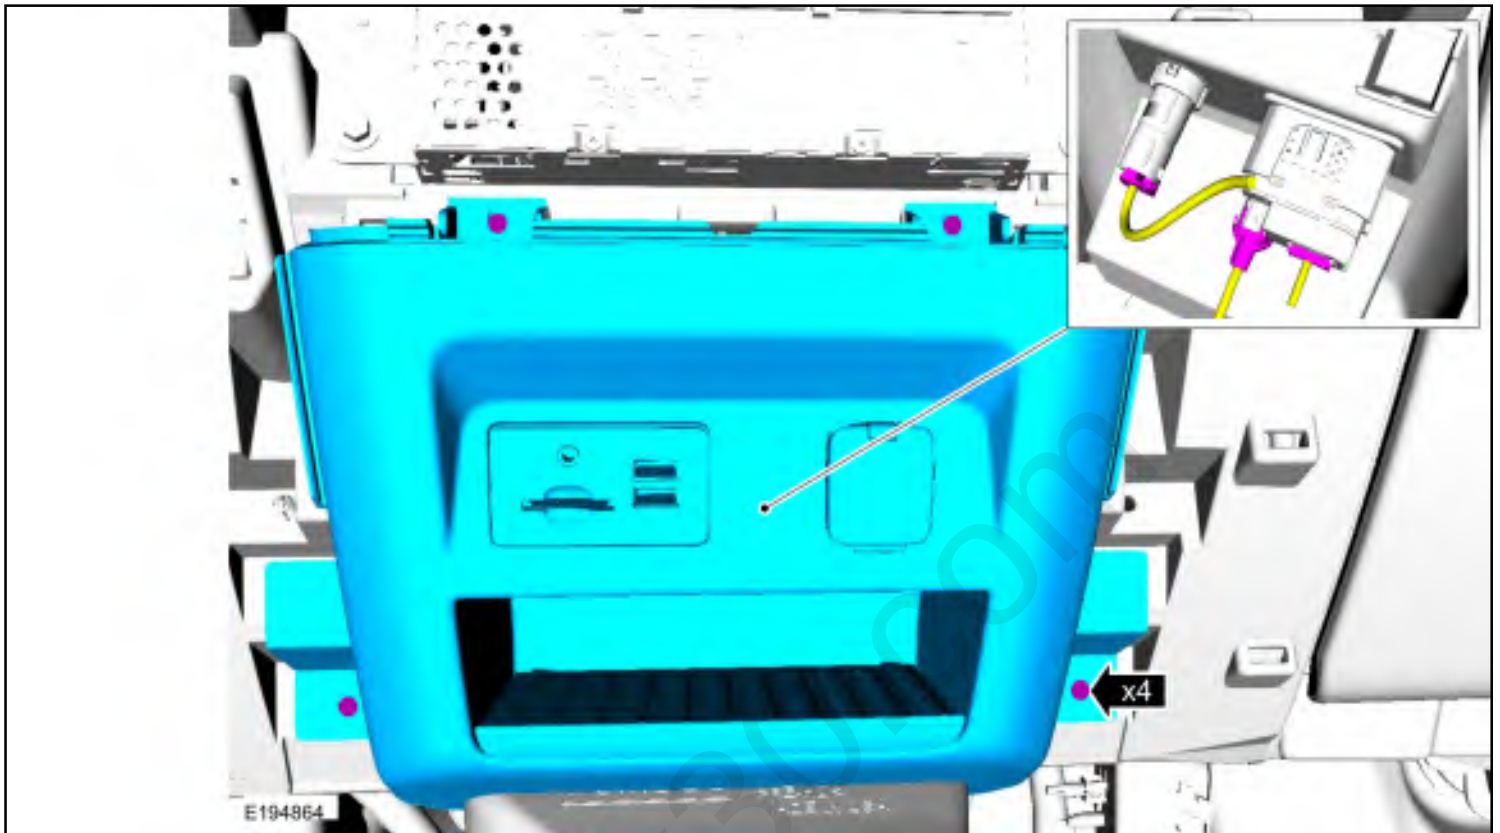

6. Remove the APIM.

Refer to: [SYNC Module \[APIM\]](#) (415-00B Information and Entertainment System - General Information - Vehicles With: SYNC Without Touchscreen, Removal and Installation).

7. Release the USB cable retainers and remove the USB cable following the routing shown.

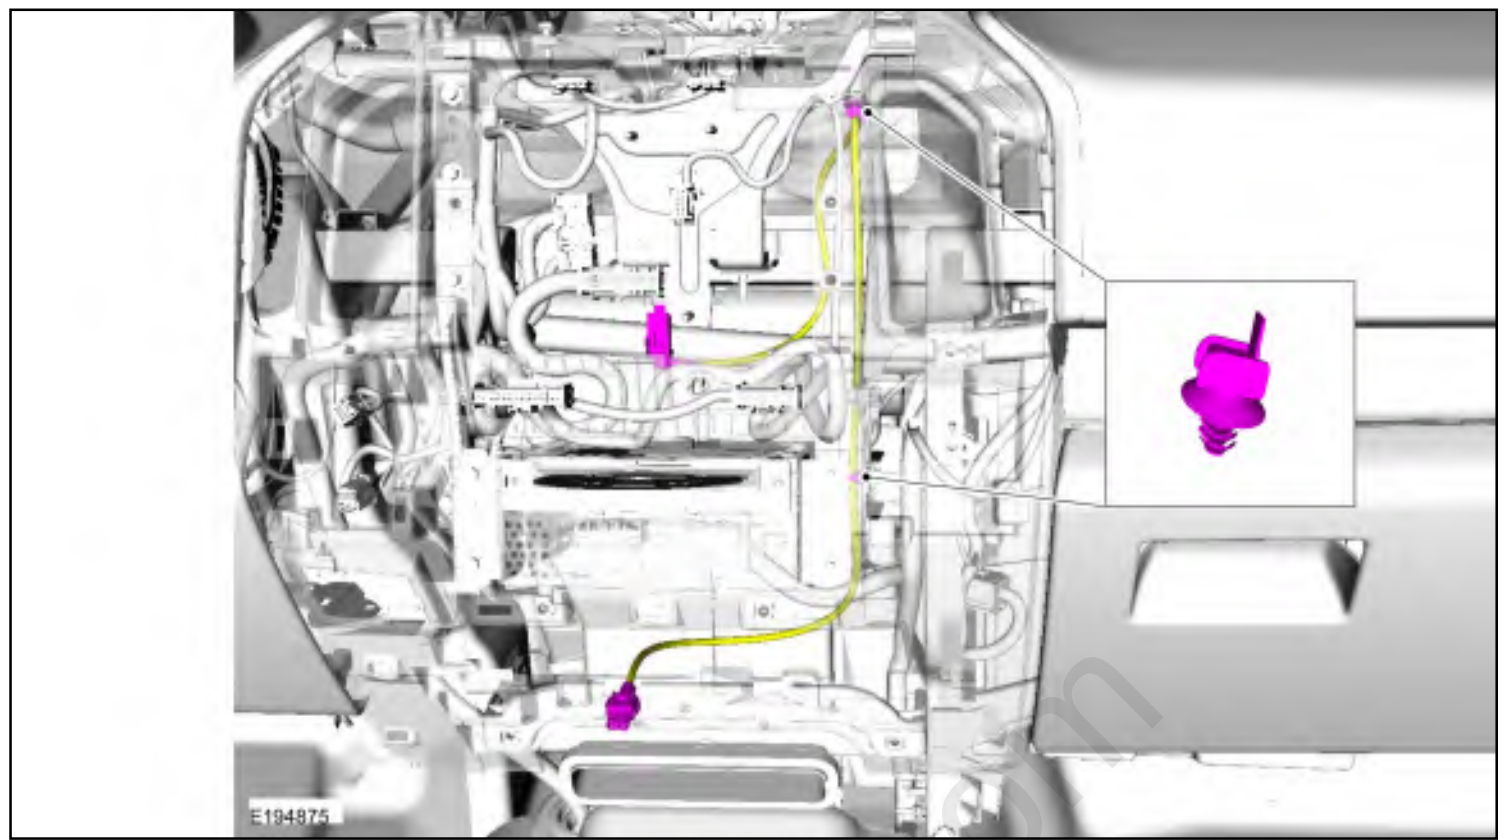

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company