


Wireless Accessory Charging Module (WACM)

Removal


1. **NOTE:** If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.

Using a diagnostic scan tool, begin the PMI process for the WACM following the on-screen instructions.


2. Open the floor console lid.

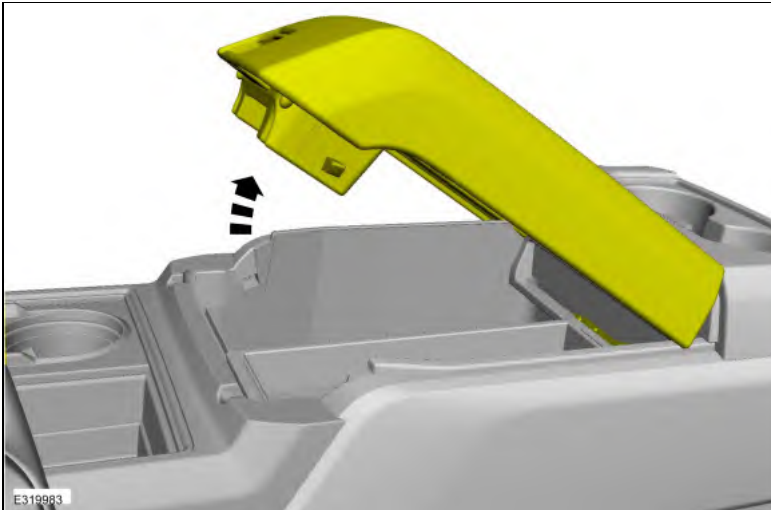


3.
 1. Release the 5 clips working from the rear of the trim panel forward.
 2. Release the 2 clips that attach to the instrument panel by pulling rearward and remove the trim panel.
 3. Disconnect the electrical connectors.

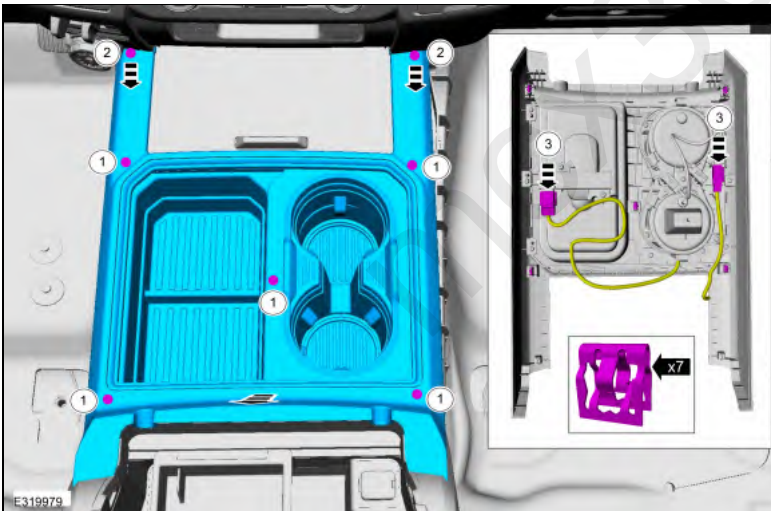

4.
 - Remove the bolts and the storage bin.
 - Disconnect the electrical connectors

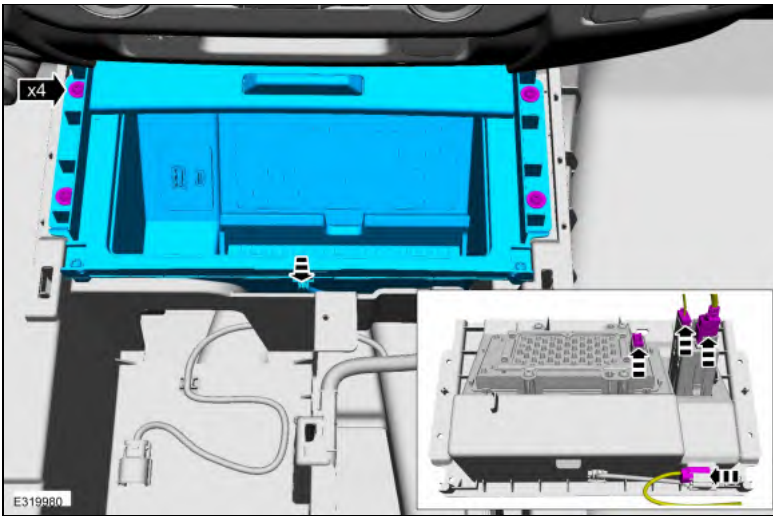

5. Remove the screws and the WACM.

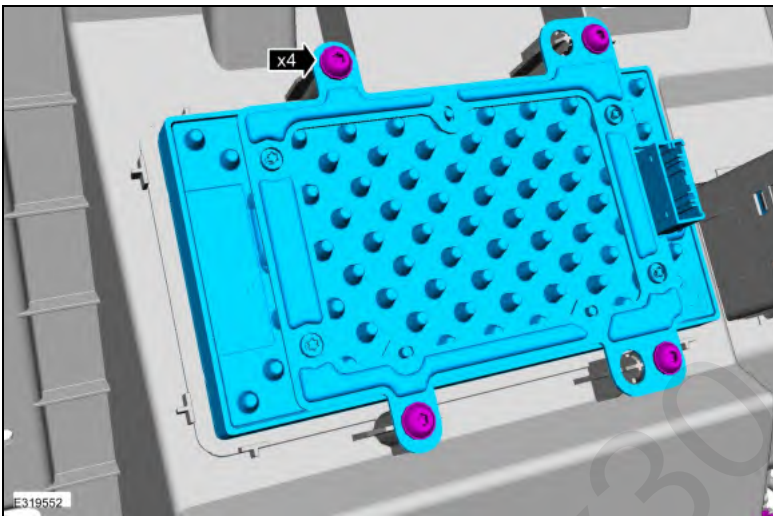

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** This step is only necessary if replacing the WACM. This step is only necessary if replacing the WACM.
Using a diagnostic scan tool, complete the PMI process for the WACM following the on-screen instructions.