

Audio Digital Signal Processing (DSP) Module

Removal

NOTE: Removal steps in this procedure may contain installation details.


All vehicles

1. **NOTE:** If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.

Using a diagnostic scan tool, begin the PMI process for the DSP following the on-screen instructions.

SuperCrew

2.
 1. Lower the LH backrest.
 1. Pull the backrest release strap and release the latch from the striker.
 2. Lower the backrest.

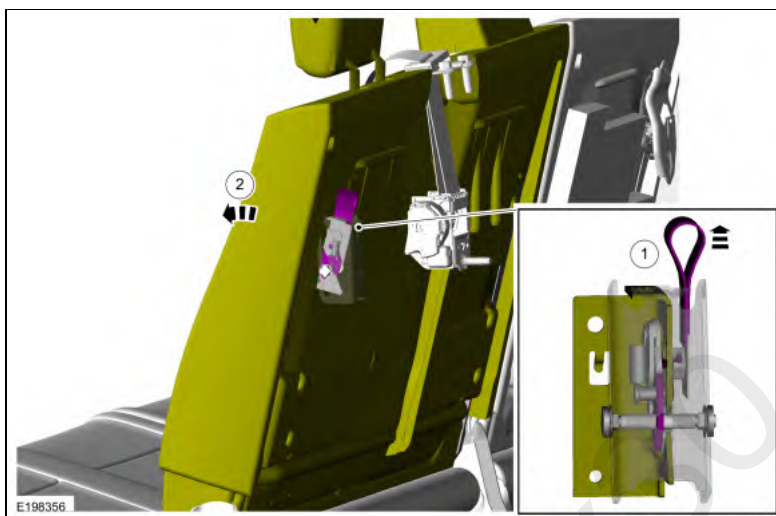


SuperCab

3. **NOTE:** The seat backrest latch is only accessible when the seat cushion is raised.


Fold the LH rear seat backrest down.

1. Raise the seat cushion.
2. Release the backrest latch.
3. Fold the backrest down.

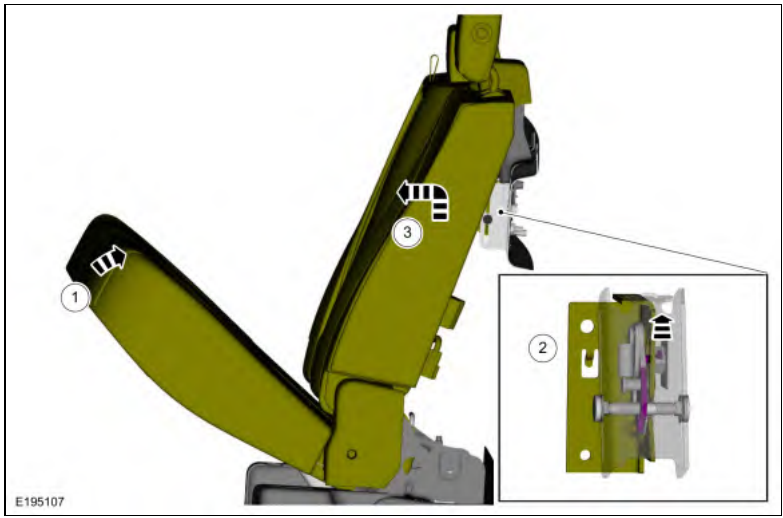


All vehicles


4. Remove the push pin and the wire shield.

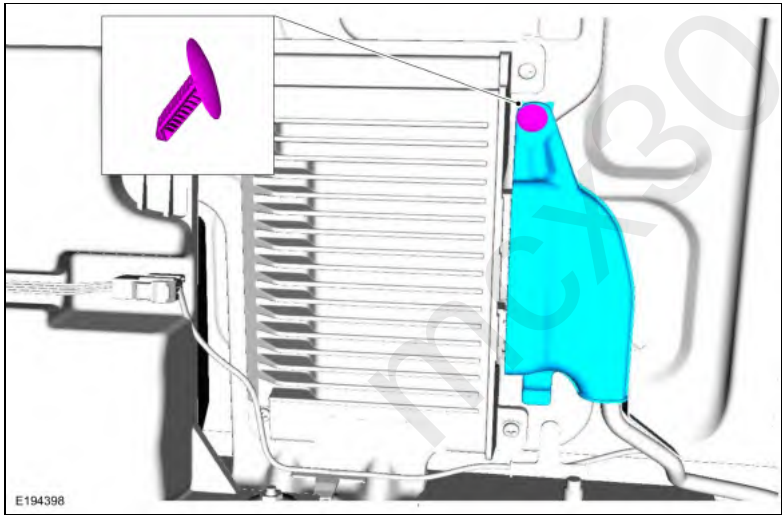

5. Disconnect the electrical connector, separate the wire guide and position the harness aside.

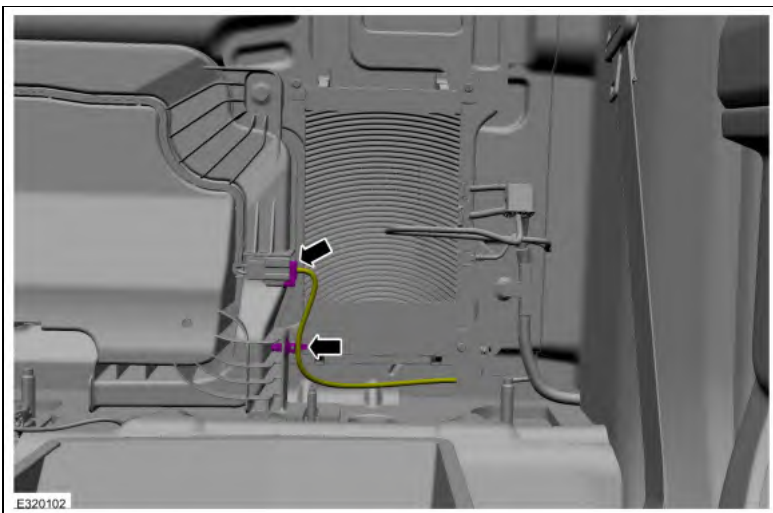


6. Disconnect the electrical connectors.

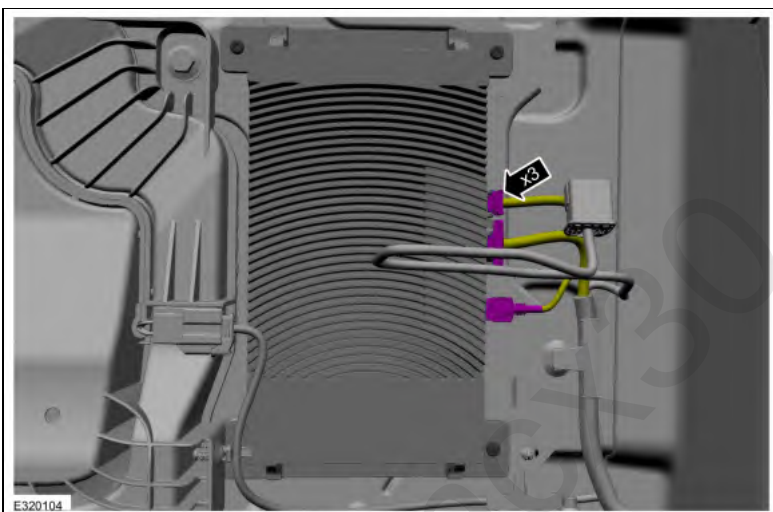

Color	Count
Blue	250
Green	250
Brown	250
Yellow	250
Purple	250
Light Blue	250

7. Remove the 4 screws and the DSP.

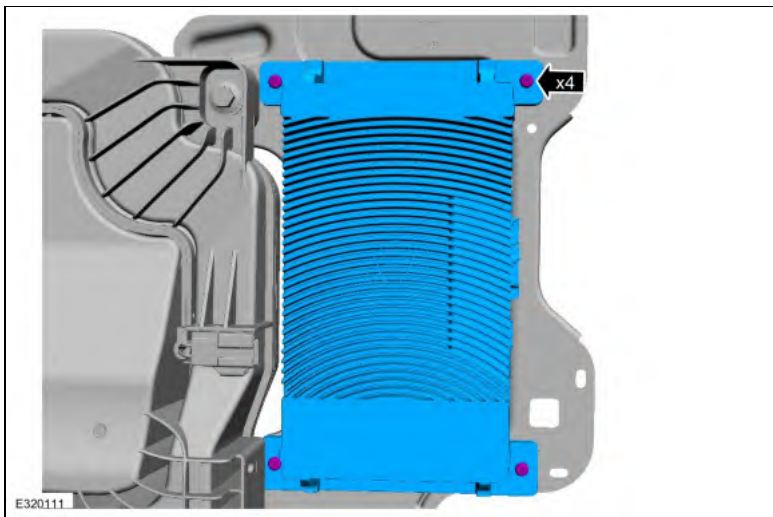

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only required if the component is being replaced.*

Using a diagnostic scan tool, complete the PMI process for the DSP following the on-screen instructions.