


Satellite Radio Antenna


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Lower the headliner.
Refer to: Headliner - Lowering - Regular Cab (501-05 Interior Trim and Oramentation, Removal and Installation).
Refer to: Headliner - Lowering - Super Cab (501-05 Interior Trim and Oramentation, Removal and Installation).
Refer to: Headliner - Lowering - Crew Cab (501-05 Interior Trim and Oramentation, Removal and Installation).
2. Disconnect the electrical connector and separate the wiring guides.

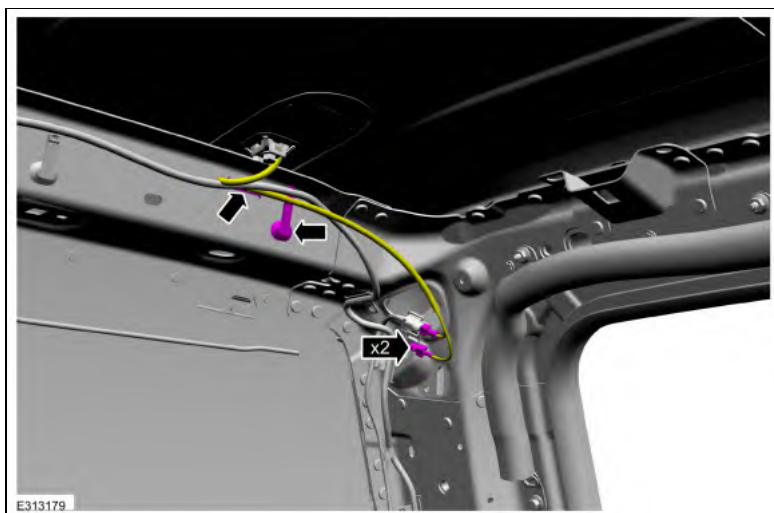

3. Remove the bolt, the antenna retainer, release the tabs and remove the satellite radio antenna.
Torque: 93 lb.in (10.5 Nm)

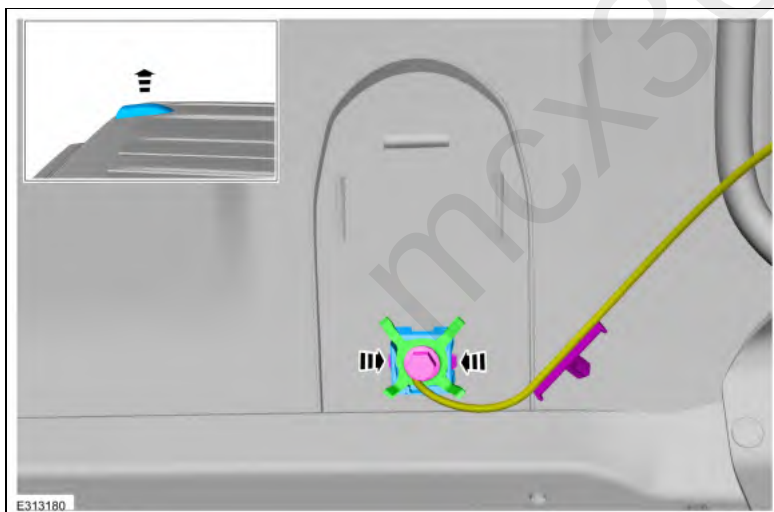

Installation


Existing antenna

1. To install, reverse the removal procedure.


New antenna

2. **NOTE:** If installing a new satellite radio antenna it is not necessary to remove the bolt from the satellite radio base.

Install the satellite radio harness through the roof open and push the base down until fully seated.

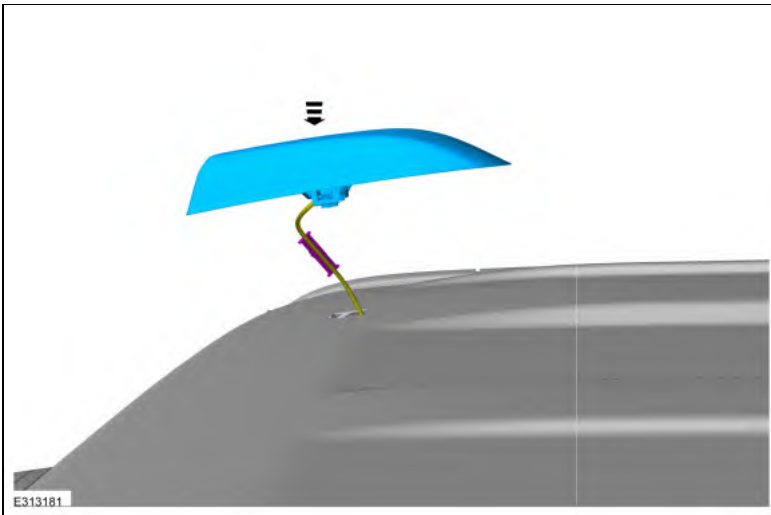

3. Connect the electrical connector and install the wiring guides.

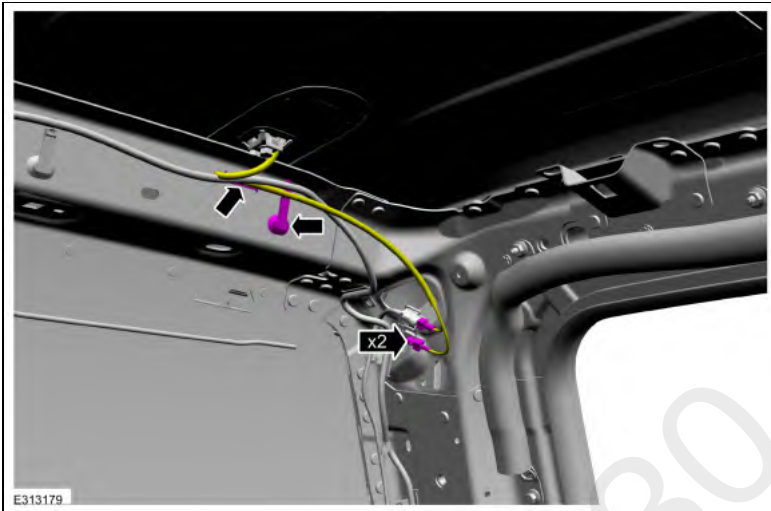

4. Install the headliner.

Refer to: Headliner - Lowering - Regular Cab (501-05 Interior Trim and Ornammentation, Removal and Installation).

Refer to: Headliner - Lowering - Super Cab (501-05 Interior Trim and Ornammentation, Removal and Installation).

Refer to: Headliner - Lowering - Crew Cab (501-05 Interior Trim and Ornammentation, Removal and Installation).