


Telematics Control Unit (TCU) Module Antenna


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Lower the headliner.
Refer to: Headliner - Lowering - Regular Cab (501-05 Interior Trim and Oramentation, Removal and Installation).
Refer to: Headliner - Lowering - Super Cab (501-05 Interior Trim and Oramentation, Removal and Installation).
Refer to: Headliner - Lowering - Crew Cab (501-05 Interior Trim and Oramentation, Removal and Installation).
2. Disconnect the electrical connector and separate the wiring guide.

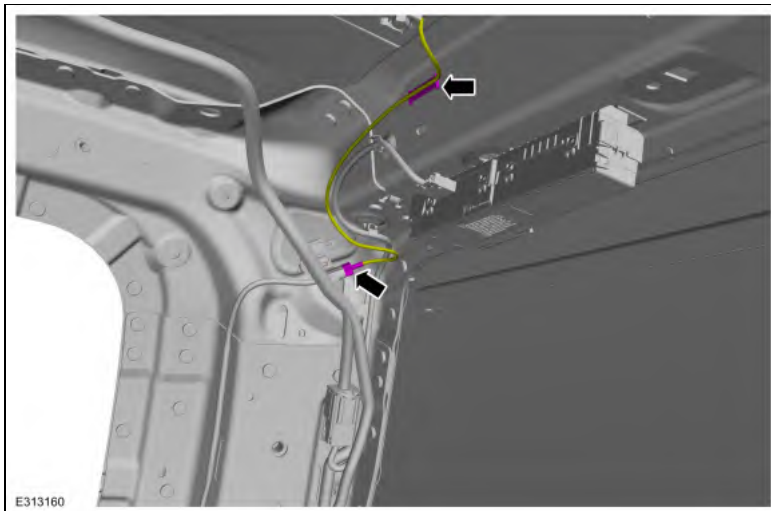

3. Remove the bolt, the antenna retainer, release the tabs and remove the TCU antenna.
Torque: 93 lb.in (10.5 Nm)

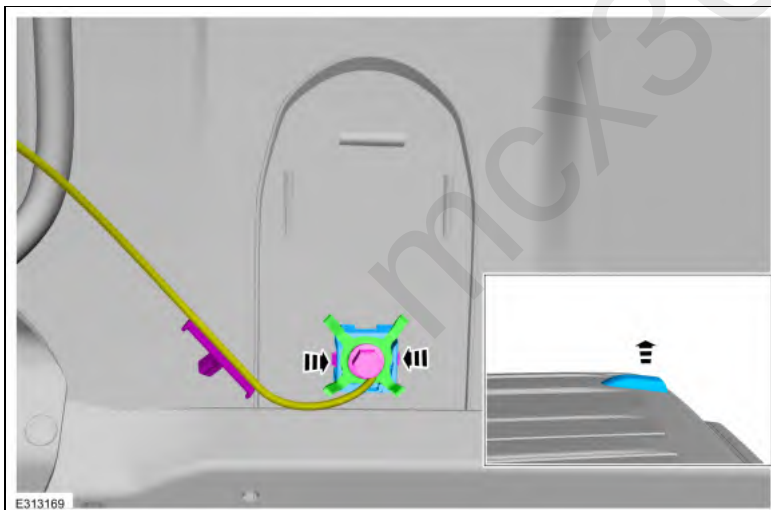

Installation


Existing antenna

1. To install, reverse the removal procedure.


New antenna

2. **NOTE:** If installing a new telematics control unit module antenna it is not necessary to remove the bolt from the telematics control unit module antenna base.

Install the TCU antenna harness through the roof open and push the base down until fully seated.

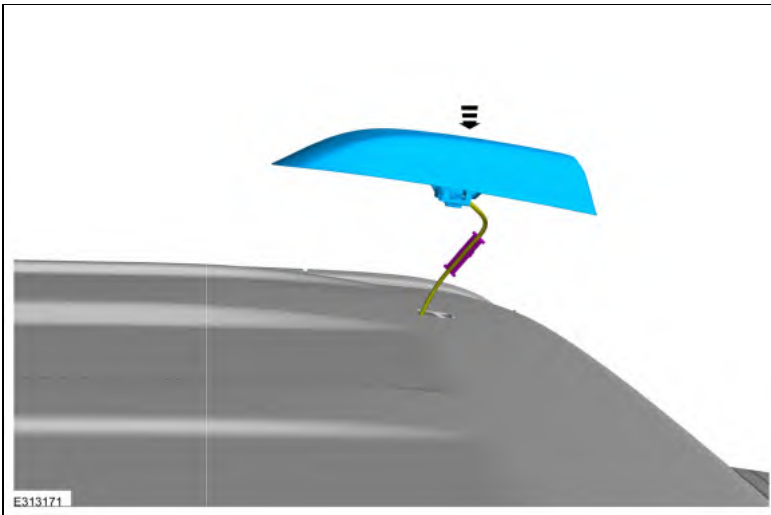

3. Connect the electrical connector and install the wiring guide.

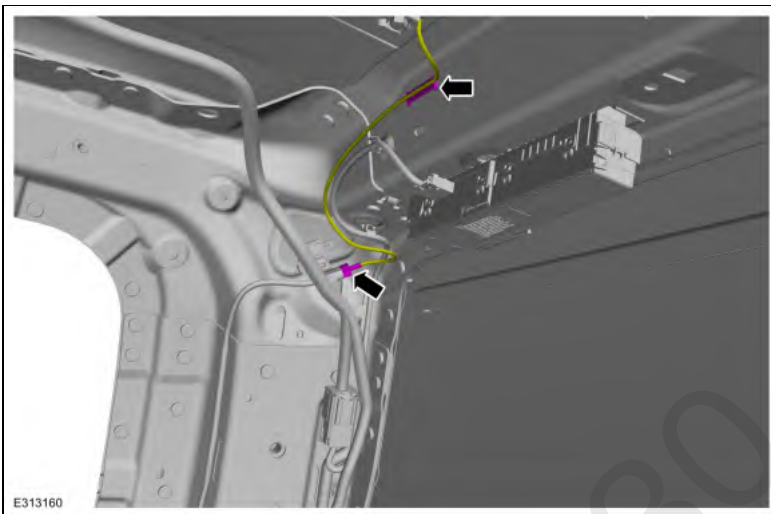

4. Install the headliner.

Refer to: Headliner - Lowering - Regular Cab (501-05 Interior Trim and Ornammentation, Removal and Installation).
 Refer to: Headliner - Lowering - Super Cab (501-05 Interior Trim and Ornammentation, Removal and Installation).
 Refer to: Headliner - Lowering - Crew Cab (501-05 Interior Trim and Ornammentation, Removal and Installation).