

C-Pillar Trim Panel

Special Tool(s) / General Equipment

Pick Hook


Removal

NOTE: LH side shown, RH side similar.


NOTE: Removal steps in this procedure may contain installation details.

1. NOTE: During installation, attach the scuffplate trim panels at the lower B-pillar trim panel first.

Release the clips and remove the rear door scuffplate trim panel.

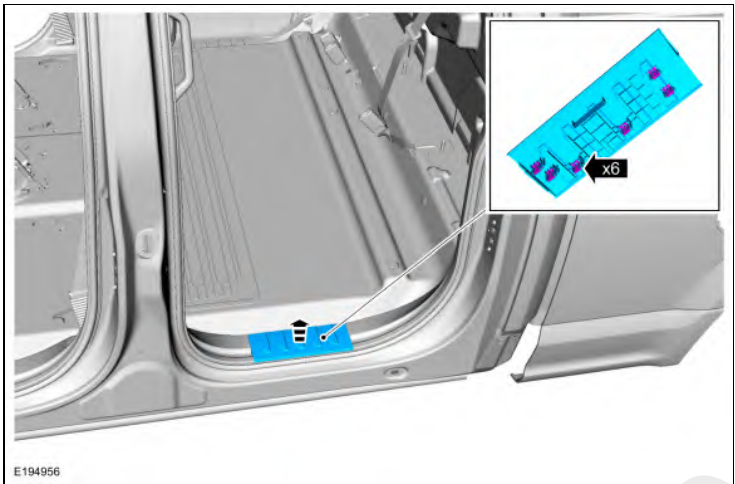

2. Position the rear door weatherstrip aside.

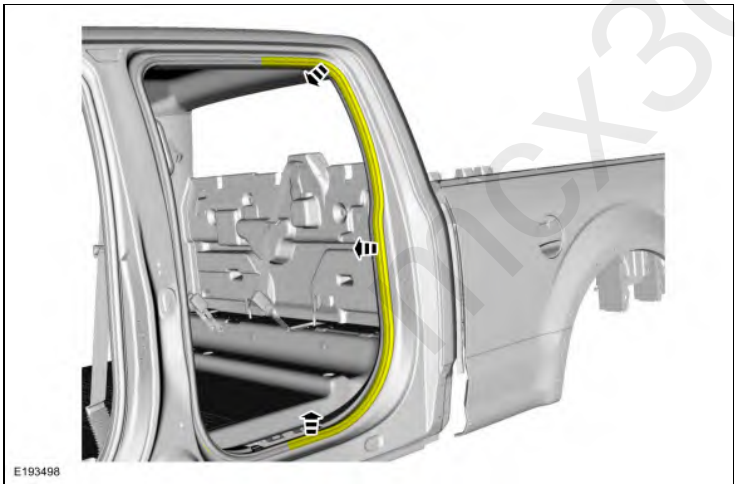


3. Remove the bolt and the position the seatbelt aside.
Torque: 30 lb.ft (40 Nm)




Vehicles with rear under seat storage


4. Raise the rear seat cushion to the folded up position.

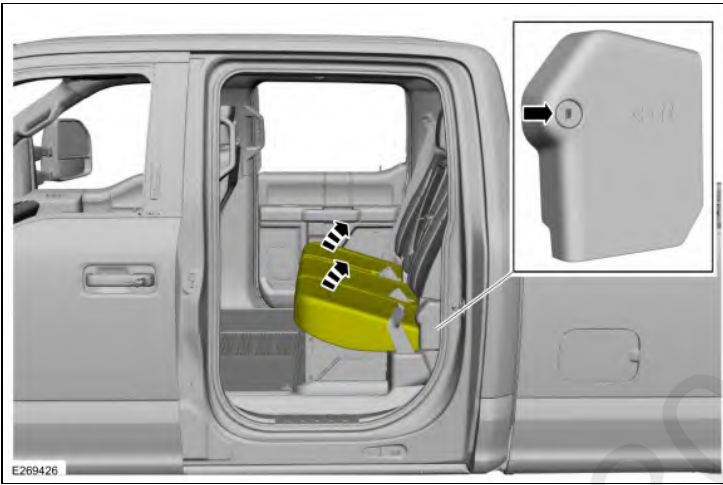


5. Remove the retainer from the outboard cushion side shield.

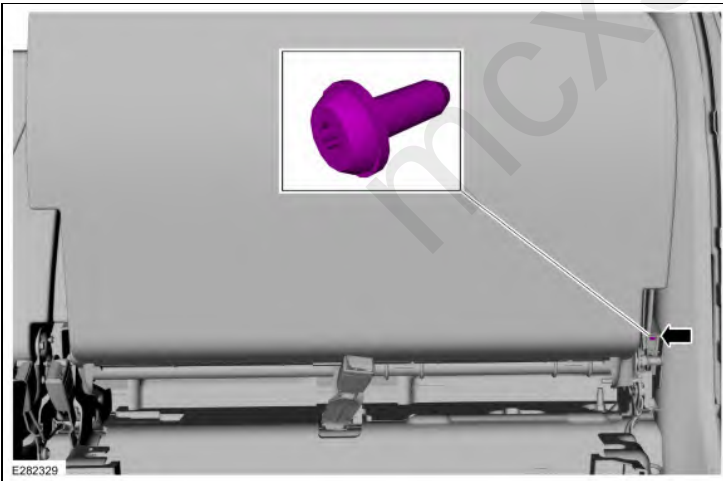

6. Lower the rear seat cushion to the folded down position.
 1. Pull the release strap.
 2. Lower the rear seat cushion to the folded down position.

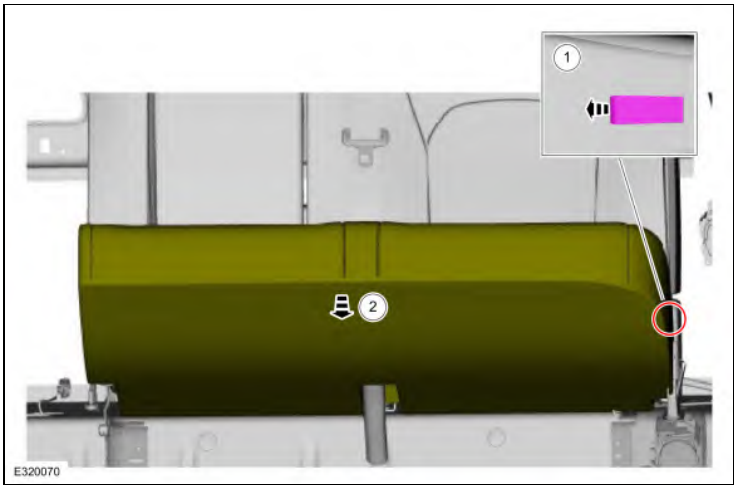


7. Remove the rear seat side shield.
- 1. Remove the screw.
 - 2. Release the retainers.
- Use the General Equipment: Pick Hook

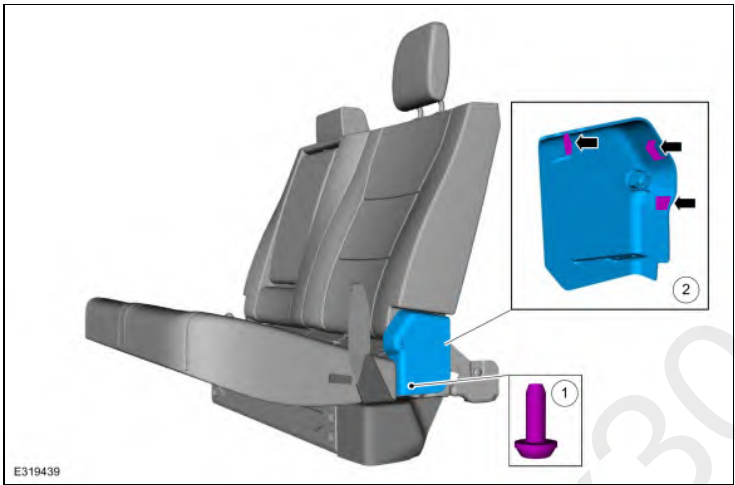

Vehicles without rear under seat storage

8. Remove the retainer and the outboard cushion side shield.

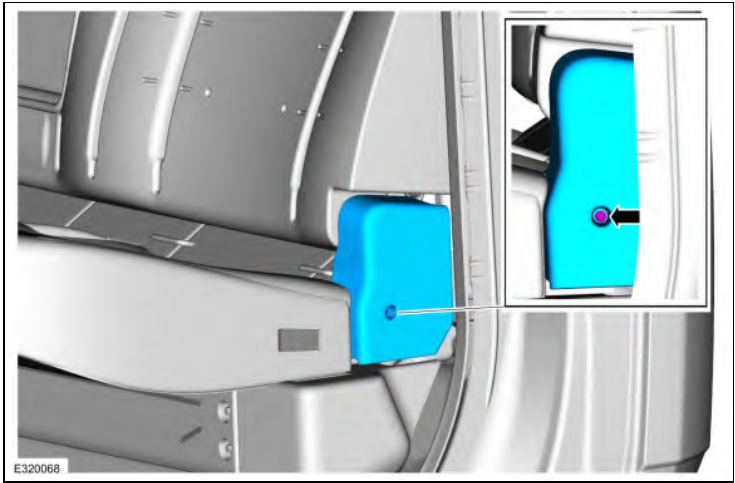


All vehicles

9. **NOTICE:** If the tether clip is damaged during removal, a new clip must be be installed prior to installation of the trim panel.

NOTE: During installation, install the clip by the scuffplate trim panel first and work upward on the trim panel to connect the other clips.

Remove the C-pillar trim panel.

1. Release the clips.
2. Release the tether clip.

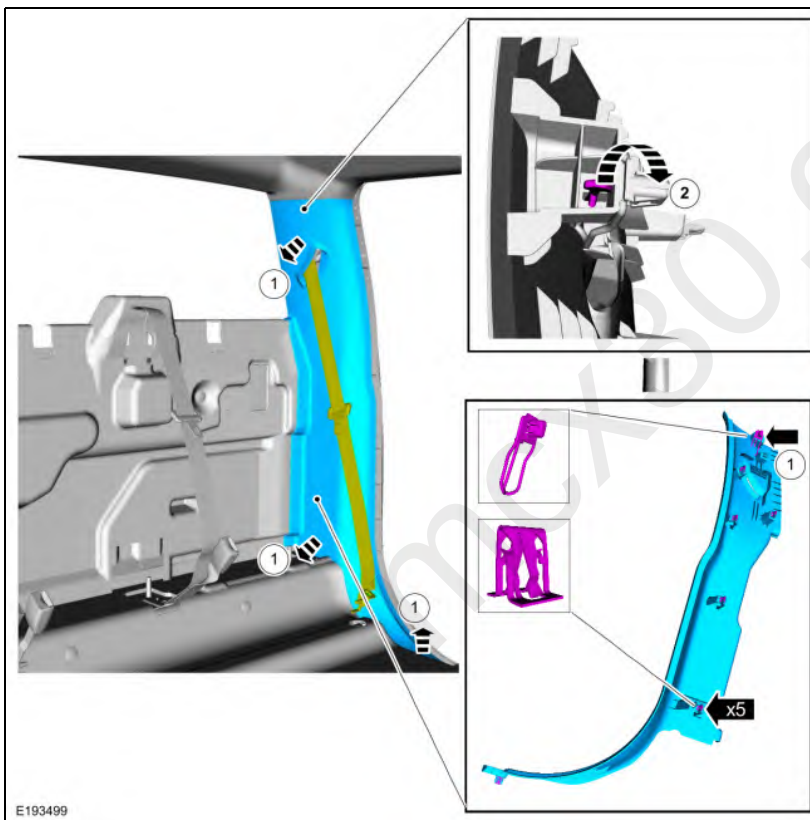

Installation

1. **NOTE:** During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

To install, reverse the removal procedure.

2. Check the seatbelt system for correct operation.
Refer to: Seatbelt Systems (501-20A Seatbelt Systems, Diagnosis and Testing).

