


Rear Door Trim Panel - Super Cab

Removal


NOTE: LH side shown, RH side similar.

NOTE: Removal steps in this procedure may contain installation details.

1.
Remove the rear door upper trim panel.
 1. Remove the D-ring trim cover.
 2. Remove the D-ring bolt and position the seatbelt aside.
Torque: 30 lb.ft (40 Nm)
 3. Release the clips.

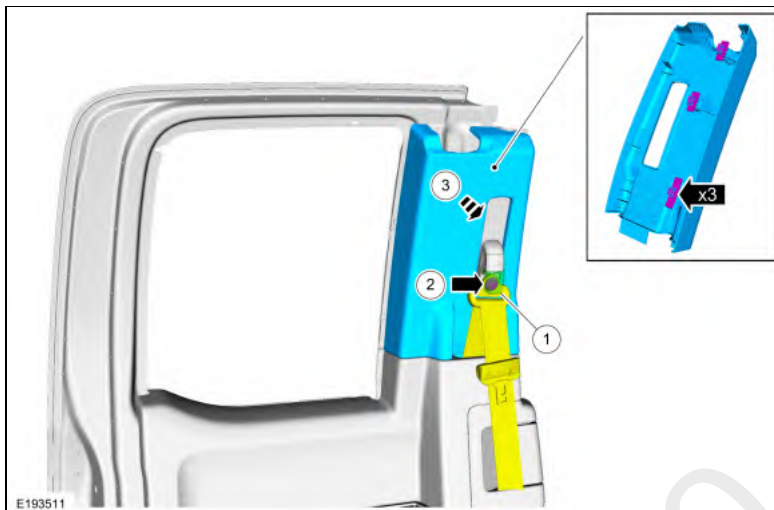


2. Release the tabs and remove the interior door handle cover.

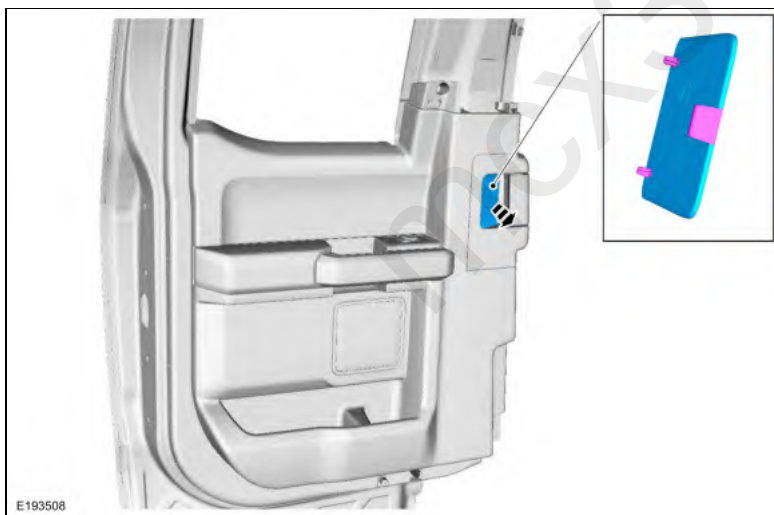


3. Remove the interior door handle bolts.



4. Remove the grab handle cover.
1. **NOTICE:** Use care when releasing the clips or damage to the rear tab may occur.
Release the clips.
 2. Slide cover forward and disengage the rear tab.

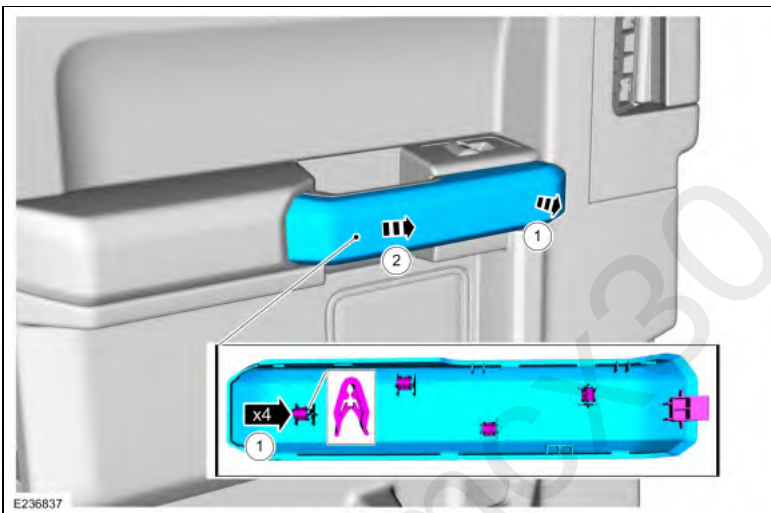


5. Remove the door trim panel bolts.

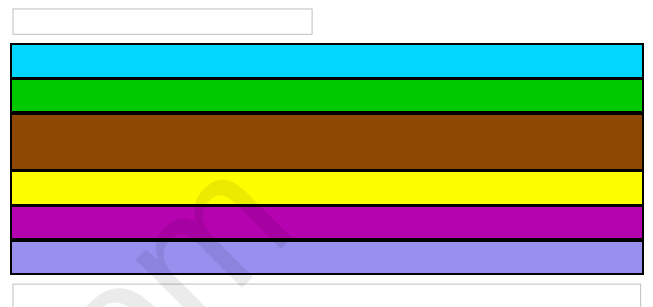

6. Remove the rear door trim panel lower screws.



7. Remove the rear door lower trim panel.
1. Release the clips.
 2. Position the interior door handle assembly aside.
 3. If equipped.
Disconnect the power window switch electrical connector.

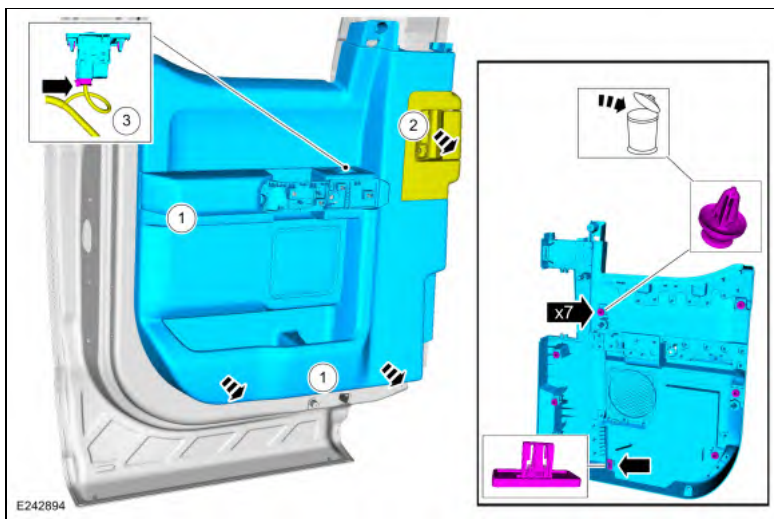

Installation

1. To install, reverse the removal procedure.