



Front Center Seat Backrest Cover - Crew Cab/Super Cab

Removal


1. Remove the front center seat backrest.
Refer to: Front Center Seat Backrest - Crew Cab/Super Cab (501-10A Front Seats, Removal and Installation).
2. Remove the front center seatbelt guide.
 1. Remove the screws.
 2. Position the front center seatbelt aside.

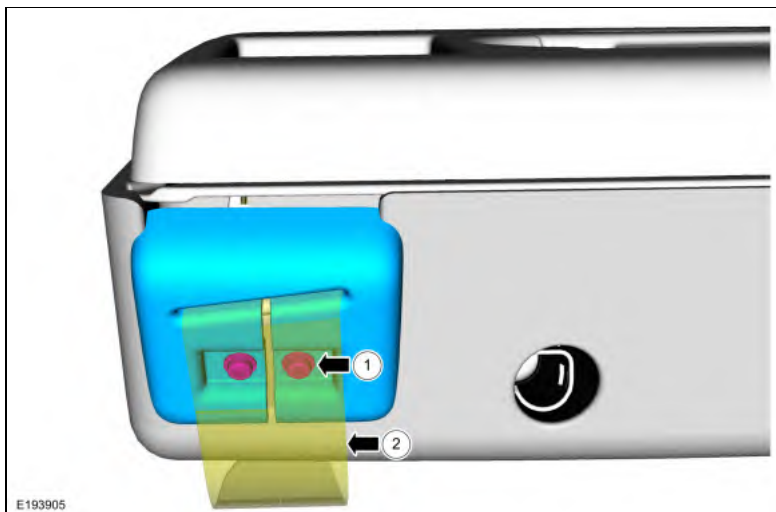

3. Remove the front center seat cup holder insert.

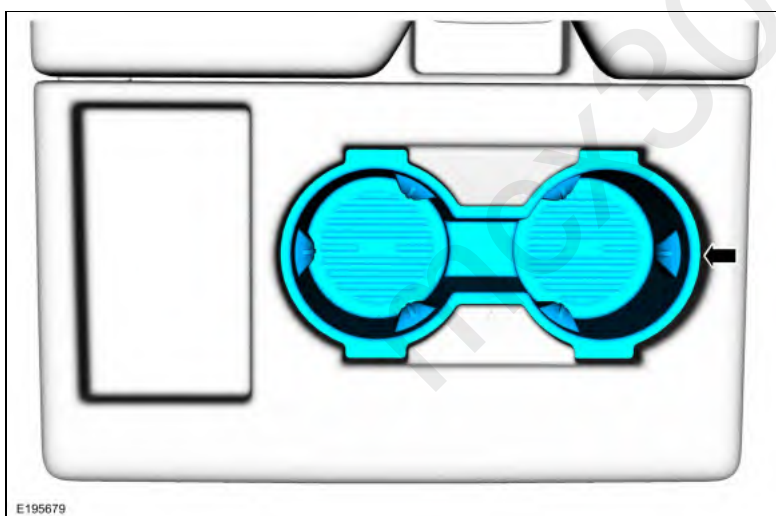


4. Remove the screw, release the retaining clips and remove the cup holder.

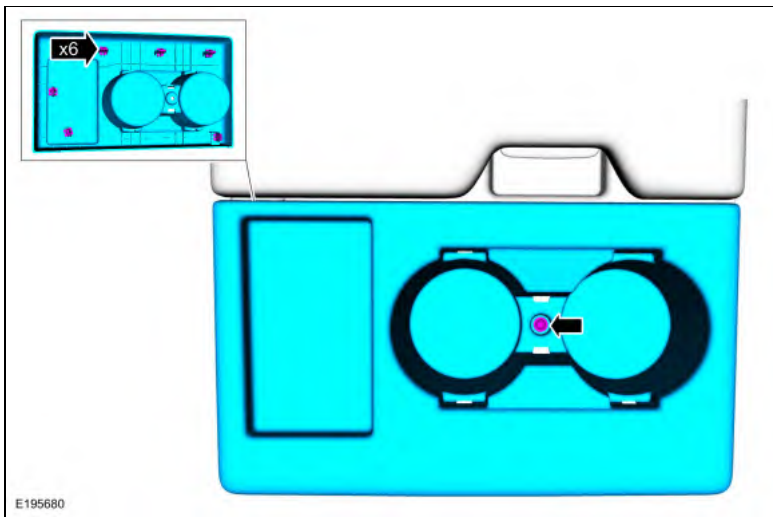


Seats with storage tray



5. Remove the insert.

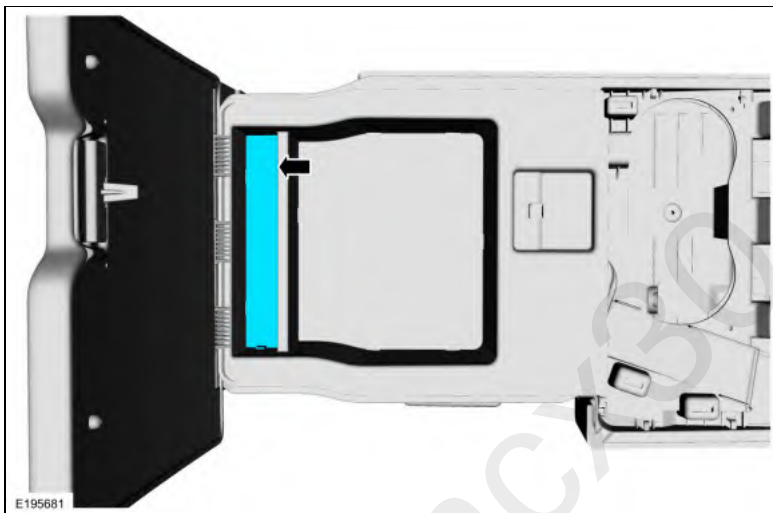

6. Remove the front center seat armrest storage tray.
 1. Remove the screws.
 2. Release the retainers.
 3. Remove the front center seat storage tray.


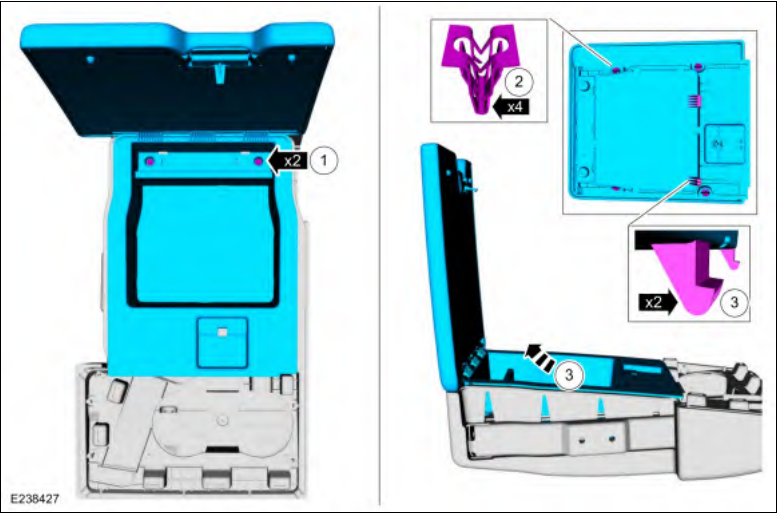


7. Release the cover from the J-hooks and remove the backrest cover.

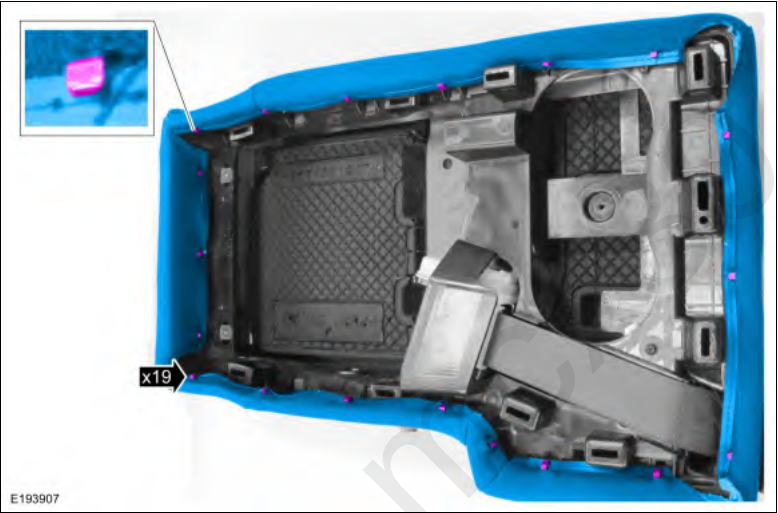


Seats without storage tray

8. Position the front center seat backrest cover flap aside.

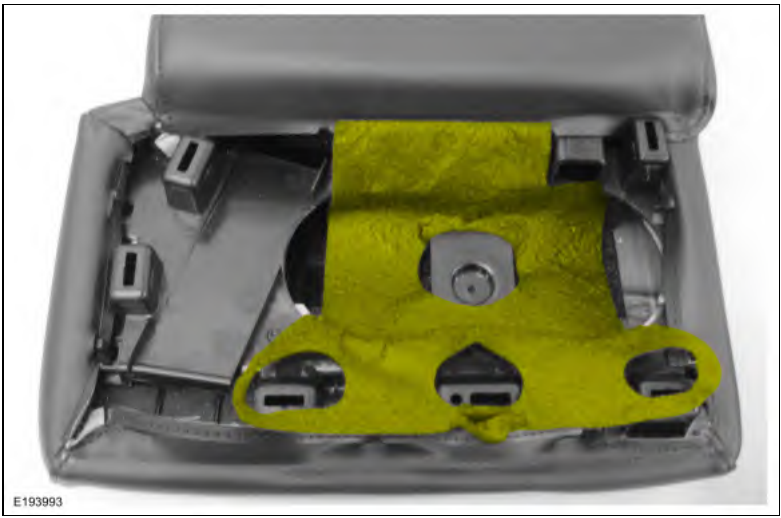

9. Release the cover from the J-hooks and position the backrest cover aside.



10. **NOTICE:** Use care when separating the front center seat backrest trim cover from the hook-and-loop strip or the hook-and-loop strip may be torn from the front center seat backrest foam.

NOTE: Note the position of the seatbelt for installation.

Release the hook-and-loop strip and remove the front center seat backrest cover.



Installation

- 1. To install, reverse the removal procedure.

mcx30.com