


Front Seat Cushion Adjuster - Vehicles With: Multi-Contour Seats


Removal

NOTE: Driver seat shown, passenger seat similar.

1. Remove the front seat cushion cover and foam as an assembly.
Refer to: Front Seat Cushion Cover (501-10A Front Seats, Removal and Installation).
2. Detach the front seat backrest cover lower J-clip(s).

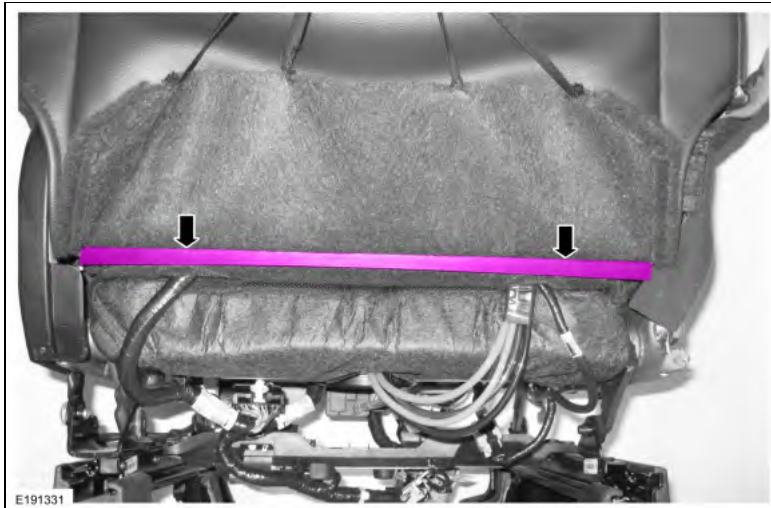


3. Detach the hook-and-loop retainer and position the front seat backrest cover strap aside.

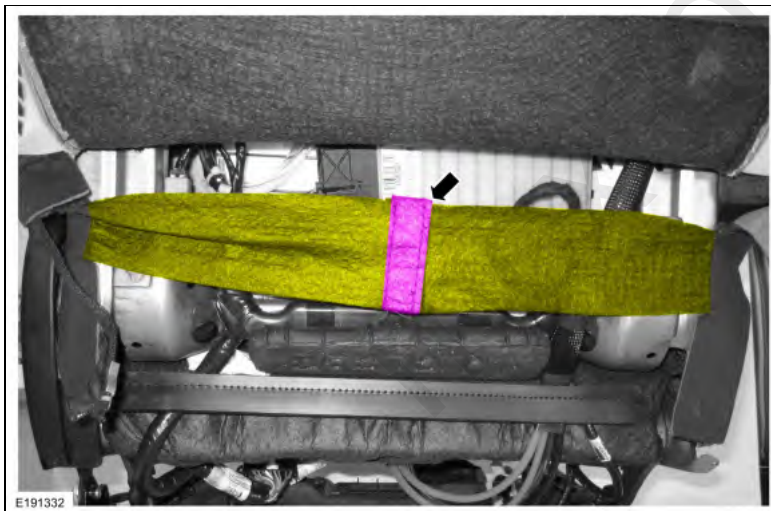


4. **NOTE:** To install, gradually alternate the left and right front seat backrest cover zippers to prevent damage to the front seat backrest cover.


1. Unzip the front seat backrest cover zippers.
2. Position the front seat backrest cover upward.
3. Detach the front seat backrest cover J-clips from the front seat lumbar wire.

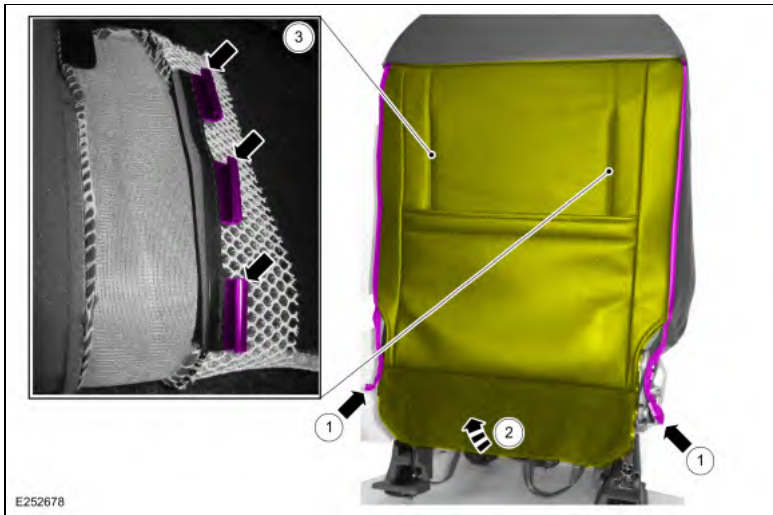


5. Disengage the multi-contour seat cushion hose retainer, release the locking tab and disconnect the hose coupling assembly (Red) from the SCMG.

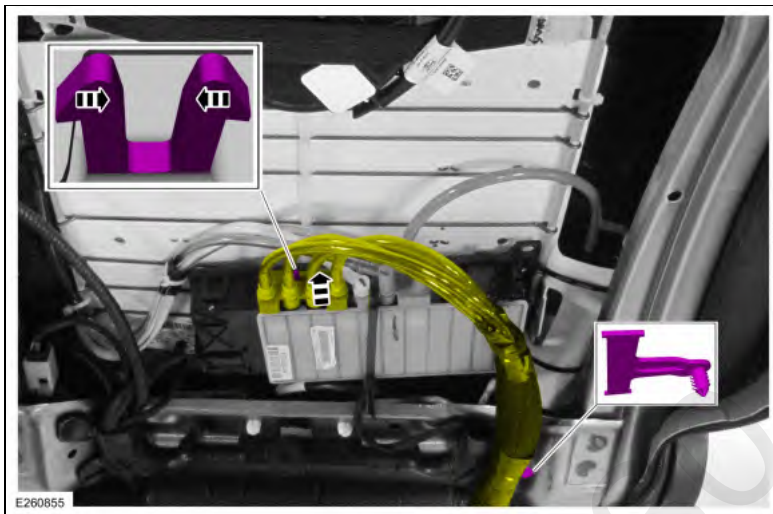

6. Feed the multi-contour seat hose assembly out through the front seat backrest cover opening.

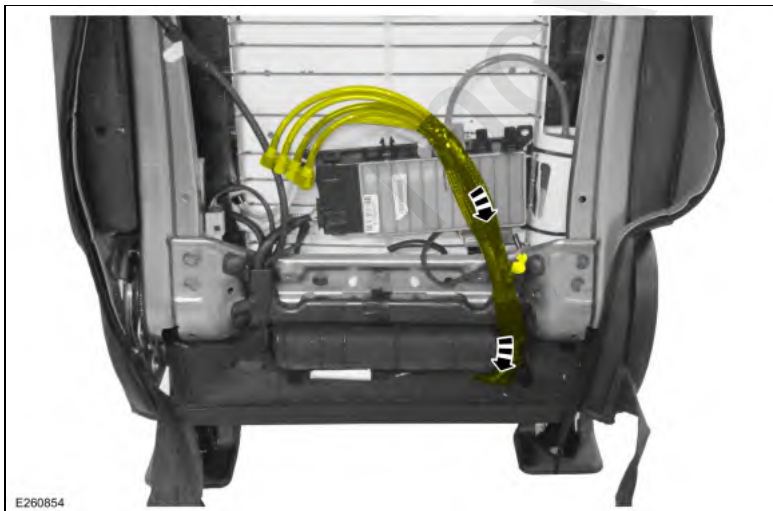

7. Remove the pin-type retainers and the front seat cushion adjuster.

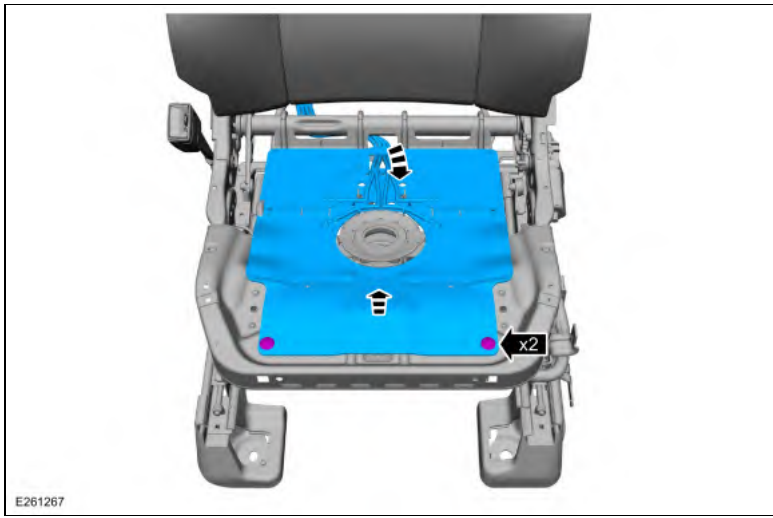

Installation

1. To install reverse the removal procedure.

mcx30.com