


Front Seat Power Lumbar Assembly - Vehicles With: Multi-Contour Seats


Removal

NOTE: Driver seat shown, passenger seat similar.


1. Remove the SCMG or SCMH.
Refer to: Driver Multi-Contour Seat Module [SCMG] (501-10A Front Seats, Removal and Installation).
2. Remove the front seat backrest blower motor.
Refer to: Front Seat Backrest Blower Motor (501-10A Front Seats, Removal and Installation).
3. Release the front seat backrest wiring harness from the front seat power lumbar spring and position the front seat wire harness aside.

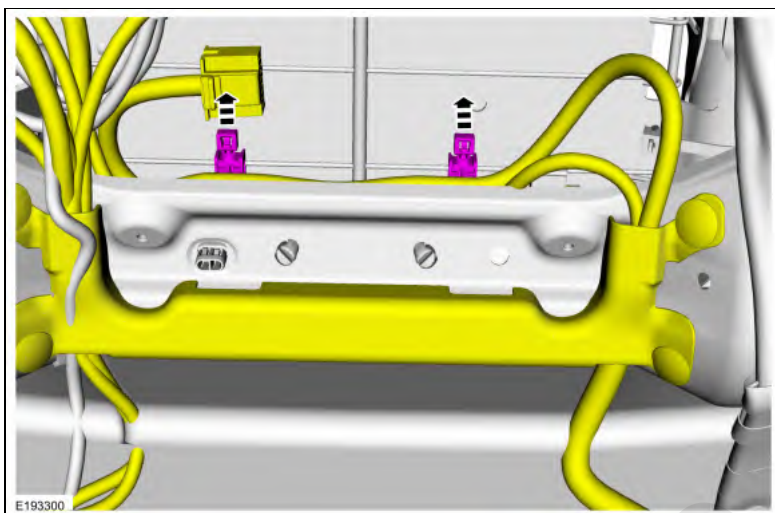

4. Disconnect the front seat power lumbar pump electrical connector and release the connector from the front seat power lumbar spring.

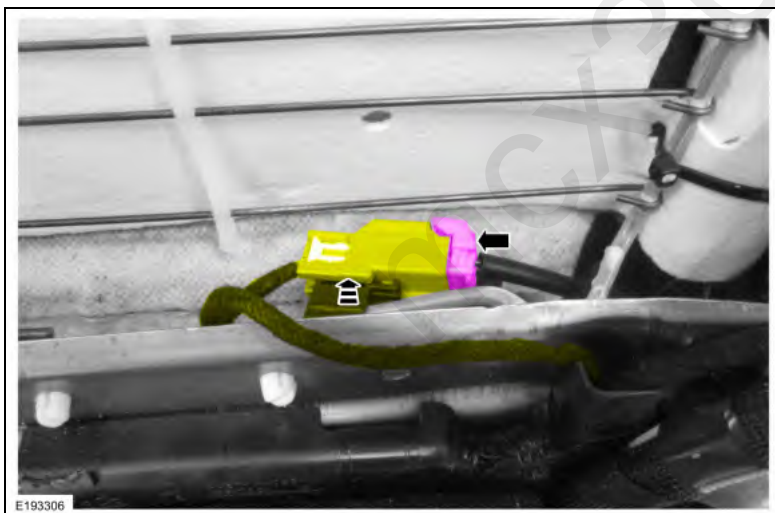

5. Remove the front seat power lumbar assembly.
 1. Release the lower retainers.
 2. Position the front seat backrest foam to access the front seat power lumbar assembly pin-type retainer.
 3. Remove the pin-type retainer.
 4. Release the upper J-hooks.

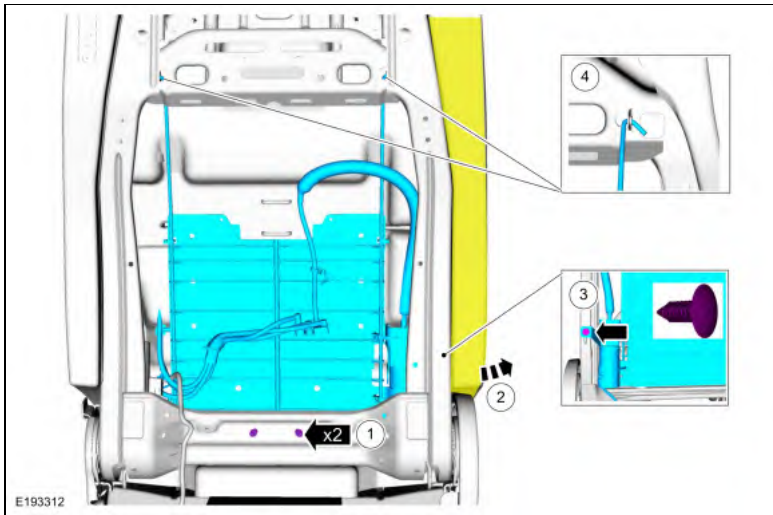

Installation

1. To install, reverse the removal procedure.

mcx30.com