

Removal and Installation

Materials

Name	Specification
Refrigerant Oil	WSH-M1C231-B
Refrigerant Oil	WSS-M2C300-A2

Removal

All vehicles

1. Refer to: [Air Conditioning \(A/C\) System Recovery, Evacuation and Charging](#) (412-00 Climate Control System - General Information, General Procedures).

1.6L/2.0L

2. Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).


All vehicles

NOTE: Removal steps in this procedure may contain installation details.

3.  NOTICE: Make sure that all openings are sealed.


Torque:

- 1. 10 Nm
- 2. 15 Nm

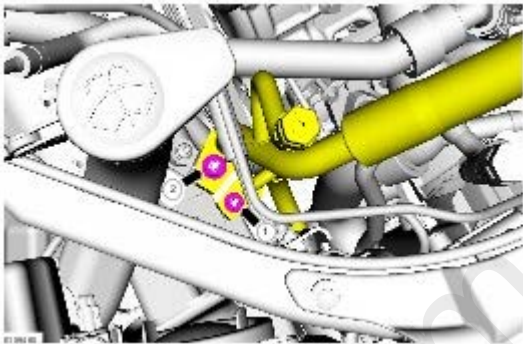


4. Torque:

- 1. 2 Nm
- 2. 12 Nm

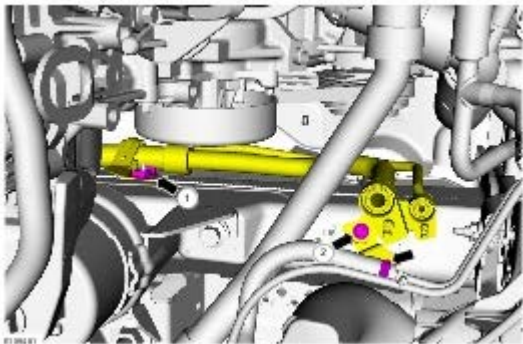


5. NOTE: If equipped

Torque: 15 Nm

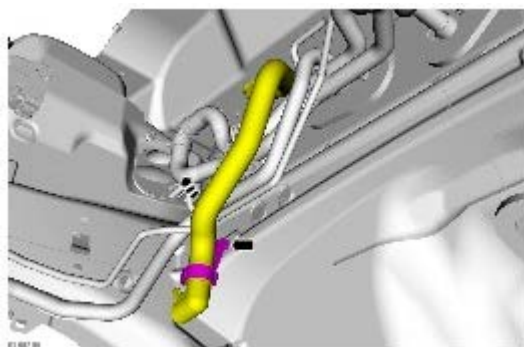

6.  **NOTICE:** Make sure that all openings are sealed.

Torque: 15 Nm

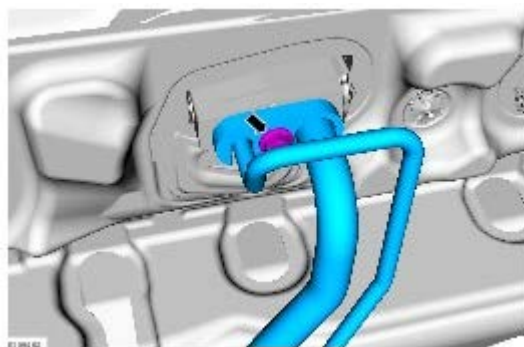

Installation

1.  **NOTICE:** Only use the specified material to lubricate the seals.

- **NOTE:** vehicles with R134A

To install, reverse the removal procedure.

Material: [WSH-M1C231-B \(Refrigerant Oil\)](#)

- **NOTE:** vehicles with R1234YF

To install, reverse the removal procedure.

Material: [WSS-M2C300-A2 \(Refrigerant Oil\)](#)

2. Refer to: [Refrigerant Oil Adding](#) (412-00 Climate Control System - General Information, General Procedures).