


Remove the 3 retainers and ABS. Discard the retainers.

Torque

: 44 lb.in (5 Nm)

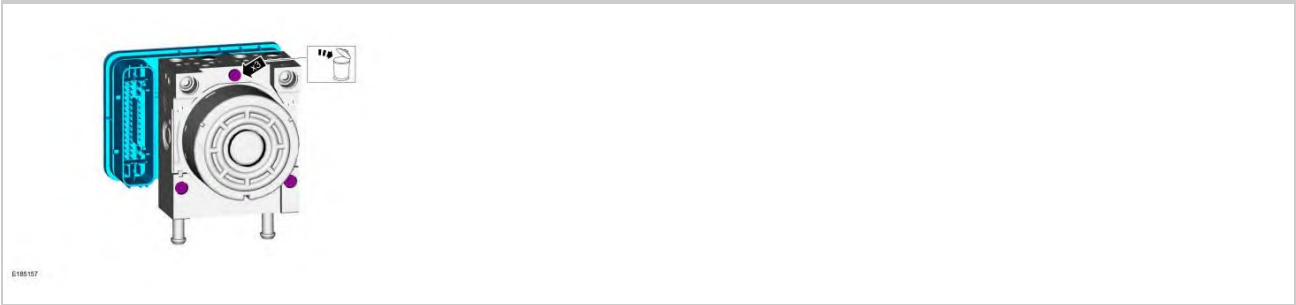

REMOVAL AND INSTALLATION > ANTI-LOCK BRAKE SYSTEM (ABS) MODULE > INSTALLATION

1.

To install, reverse the removal procedure.



NOTE: This step is necessary when installing a new HCU or ABS module.

2.

Using a diagnostic scan tool, begin the PMI process for the ABS module following the on-screen instructions.

3.

If a new HCU/ ABS module was installed, carryout the IVD initialization using the scan tool and following the diagnostic scan tool on-screen instructions.

REMOVAL AND INSTALLATION > HYDRAULIC CONTROL UNIT (HCU) > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.



NOTE: This step is necessary when installing a new HCU or ABS module.



NOTE: The PMI process must begin with the current ABS module installed. If the current ABS module does not respond to the diagnostic scan tool, the tool may prompt