


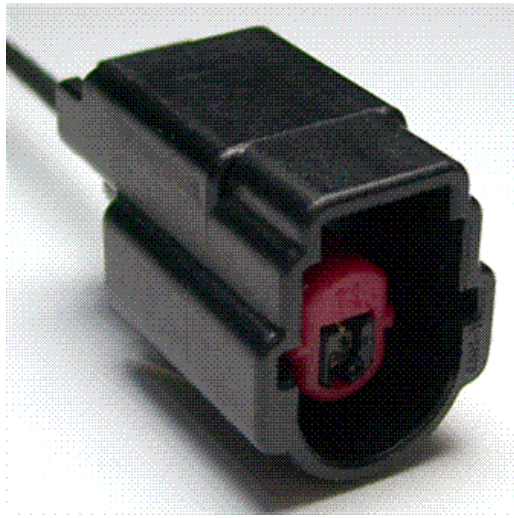

Pin material:

Tin (greased)

Cavities:

1

Vehicle Uses

Capacitor - Ignition/Radio

CONNECTOR VIEWS > CONNECTOR END VIEW C175B - POWERTRAIN CONTROL MODULE (PCM)

Connector: C175B

Description

POWERTRAIN CONTROL MODULE (PCM)

Color

Harness


14290

Base Part

part# N/A

Service Pigtail

Not Available

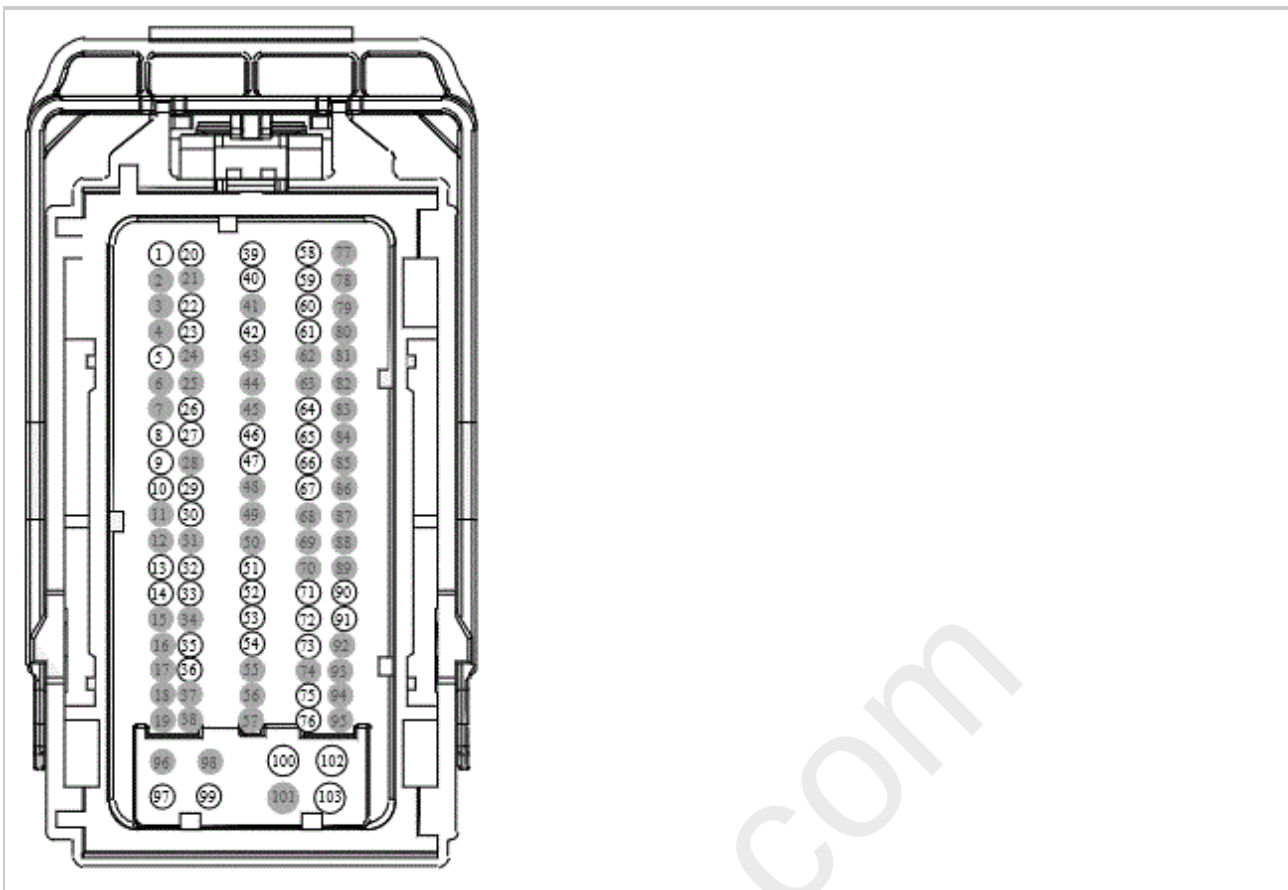

Check for Terminal Part Numbers

Pin	Circuit	Gauge	Circuit Function	Qualifier
1	CDC54 (WH-GN)	20	CTRL MOD. - POWERTRAIN # STARTER MOTOR CONTROL SENSE (SMCS)	
2	*	*	Not Used	
3	*	*	Not Used	
4	*	*	Not Used	
5	GD113 (BK-YE)	18	GROUND - COWL TOP RIGHT	
6	*	*	Not Used	

7	*	*	Not Used
8	CE904 (GN-VT)	22	SWITCH - CLUTCH PEDAL POSITION # TOP OF TRAVEL (CPP-TT)
9	CE903 (BU-OG)	22	SWITCH - CLUTCH PEDAL POSITION # BOTTOM OF TRAVEL (CPP-BT)
10	CEC01 (WH-BU)	20	CTRL MOD. - COOLING FAN CONTROL HIGH (FC)
11	*	*	Not Used
12	*	*	Not Used
13	CDC10 (BU-OG)	20	CTRL MOD. - POWERTRAIN # GENERATOR REGULATOR CONTROL (GENRC)
14	VE225 (YE-OG)	22	CTRL MOD. - POWERTRAIN # FUEL PUMP MODULE COMMAND (FPC)
14	*	*	Not Used
15	*	*	Not Used
15	CH302 (WH-BN)	20	CTRL MOD. - POWERTRAIN # A/C CLUTCH CONTROL RELAY / WOT AC CUTOFF (ACCR)
16	*	*	Not Used
17	*	*	Not Used
17	CEC02 (GN-BU)	20	CTRL MOD. - COOLING FAN CONTROL LOW (FC)

18	*	*	Not Used
19	*	*	Not Used
20	CE302 (YE-BU)	20	CTRL MOD. - POWERTRAIN # POWERTRAIN CONTROL RELAY (PCMRC)
21	*	*	Not Used
22	CET42 (GN-VT)	22	SWITCH - TRANSMISSION SELECT SHIFT # DOWN (SST)
23	CET43 (GY)	22	SWITCH - TRANSMISSION SELECT SHIFT # UP (SST)
24	*	*	Not Used
25	*	*	Not Used
26	CDC15 (VT)	20	GENERATOR (ALTERNATOR) # LOAD INPUT (GENLI)
27	VE518 (BN-WH)	22	MONITOR - FUEL PUMP (FPM)
28	*	*	Not Used
29	LE230 (BN-BU)	22	CTRL MOD. - POWERTRAIN # FUEL TANK PRESSURE TRANSDUCER REF. VOLT. (VREF)
30	RE407 (YE-VT)	20	CTRL MOD. - POWERTRAIN # SIGNAL RETURN COWL (C-SIGRTN) (SIGRTN-C)
31	*	*	Not Used
32	CET47 (BU)	20	SWITCH - REVERSE (RS)

33	VH433 (VT-OG)	22	TRANSDUCER - A/C PRESSURE (ACPT) +
34	*	*	Not Used
35	RE136 (VT-GN)	22	CTRL MOD. - POWERTRAIN # ACCELERATOR PEDAL POSITION SENSOR 1 (APPRTN1)
36	LE136 (GN-OG)	22	CTRL MOD. - POWERTRAIN # ACCELERATOR PEDAL POSITION SENSOR 1 (APPVREF1)
37	*	*	Not Used
38	*	*	Not Used
39	CE114 (GN-BU)	18	CTRL MOD. - POWERTRAIN # CANISTER VENT SOLENOID (CANV)
40	LE137 (BU-GY)	22	CTRL MOD. - POWERTRAIN # ACCELERATOR PEDAL POSITION SENSOR 2 (APPVREF2)
41	*	*	Not Used
42	CPK34 (BN-VT)	20	CTRL MOD. - KEYLESS VEHICLE # SWITCH START/STOP 1 +
43	*	*	Not Used
44	*	*	Not Used
45	*	*	Not Used
46	VE922 (VT-GN)	22	TRANSDUCER - FUEL TANK PRESSURE (FTP)

47	VH407 (YE-GN)	20	SENSOR - AMBIENT TEMP.
48	*	*	Not Used
49	*	*	Not Used
49	CE621 (YE-GY)	22	RELAY - MOTOR ELECTRONICS COOLING PUMP
50	*	*	Not Used
51	RE406 (GY-VT)	22	CTRL MOD. - POWERTRAIN # SIGNAL RETURN TRANSMISSION (SIGRTN)
52	LE423 (GN-VT)	22	CTRL MOD. - POWERTRAIN # VOLTAGE REFERENCE ENGINE (VREF) (E-VREF) (VREF1)
53	VDC61 (VT-GN)	20	SENSOR - BATTERY MONITORING SYSTEM # ALTERNATOR
54	RE320 (BU)	20	CTRL MOD. - POWERTRAIN # MASS AIRFLOW SEN. LH BANK OR 1ST BANK (SIGRTN)
55	*	*	Not Used
56	*	*	Not Used
57	*	*	Not Used
58	CDC12 (YE)	20	CTRL MOD. - POWERTRAIN # STARTER MOTOR CONTROL (SMC)
59	RE137 (YE-GN)	22	CTRL MOD. - POWERTRAIN # ACCELERATOR PEDAL POSITION SENSOR 2 (APPRTN2)

60	VE702 (BU-WH)	22	SENSOR - ACCELERATOR PEDAL POSITION # 2 (APP2)
61	VE701 (YE-OG)	22	SENSOR - ACCELERATOR PEDAL POSITION # 1 (APP1)
62	*	*	Not Used
63	*	*	Not Used
64	CBB60 (YE-VT)	20	FUSE - 60 OR CIRCUIT BREAKER (ISP-R)
65	CE261 (GY-OG)	22	CTRL MOD. - POWERTRAIN # FUEL PUMP ON (FUEL_PUMP_ON) (IES)
66	CES09 (VT-OG)	22	SWITCH - BRAKE PEDAL # SPEED CONTROL DEACTIVATION (BPS) +
67	CCB08 (VT-WH)	22	SWITCH - BRAKE ON/OFF (BPP) NORMAL OPEN
68	*	*	Not Used
69	*	*	Not Used
70	*	*	Not Used
71	RE731 (WH-OG)	18	SENSOR - HEATED OXYGEN POST CAT. 1ST OR UNIQUE (SIGRTN)
72	VE731 (YE-GN)	18	SENSOR - HEATED OXYGEN POST CAT. 1ST OR UNIQUE (HO2S12)
73	VE807 (YE-VT)	20	SENSOR - MASS AIRFLOW LH BANK OR 1ST BANK OR UNIQUE (MAF)