


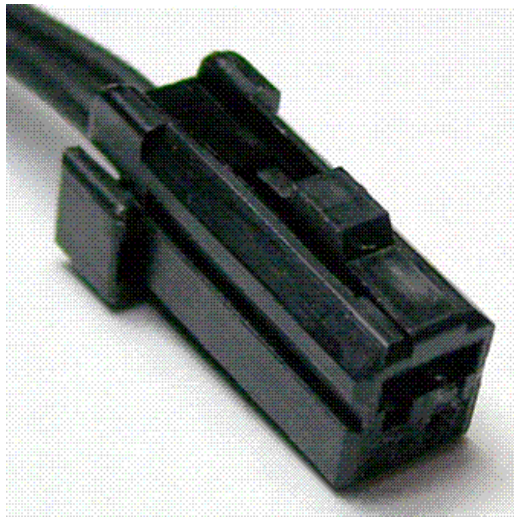

2

Vehicle Uses

Mirror - Vanity

Sensor - Speed

Switch - Brake Deactivation

Switch - Brake Pedal Position

Switch - Brake Pressure

Switch - Park Brake

Switch - Speed Control

Switch - Speed Control Deactivation

Switch - Stop Lamp

Switch - Visor

CONNECTOR VIEWS > CONNECTOR END VIEW C310A - RESTRAINTS CONTROL MODULE (RCM)

Connector:C310A

Description

RESTRAINTS CONTROL MODULE (RCM)

Color

BK

Harness


14401

Base Part

part# N/A

Service Pigtail

Not Available

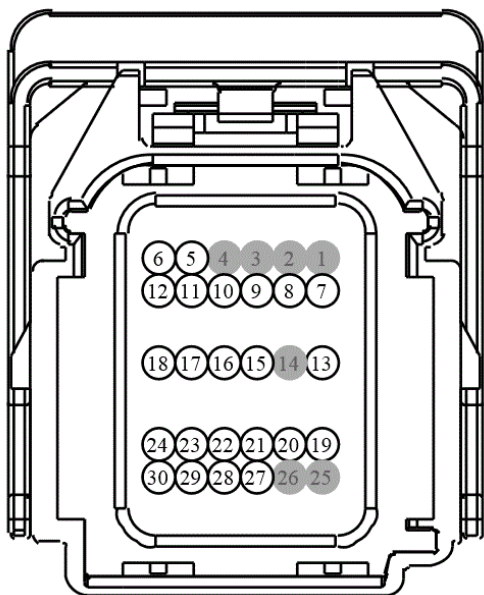

Pin	Circuit	Gauge	Circuit Function	Qualifier
1	*	*	Not Used	
2	*	*	Not Used	
3	*	*	Not Used	
4	*	*	Not Used	
5	CR169 (VT)	22	CTRL MOD. - AIR BAG PASSENGER KNEE +	
6	RR169 (GY-VT)	22	CTRL MOD. - AIR BAG PASSENGER KNEE -	
7	CR139 (VT-WH)	22	CTRL MOD. - AIR BAG DRIVER KNEE +	
8	RR139 (YE)	22	CTRL MOD. - AIR BAG DRIVER KNEE -	
9	RR144 (VT-GN)	22	CTRL MOD. - AIR BAG FRONT PASSENGER ADAPTIVE VENTING -	

10	CR144 (GY-OG)	22	CTRL MOD. - AIR BAG FRONT PASSENGER ADAPTIVE VENTING +
11	CR168 (WH-GN)	20	CTRL MOD. - PYROTECHNIC STEERING COLUMN +
12	RR168 (VT-WH)	20	CTRL MOD. - PYROTECHNIC STEERING COLUMN -
13	CR116 (GN-WH)	22	CTRL MOD. - INDICATOR PASSENGER AIR BAG DEACTIVATE +
14	*	*	Not Used
15	RR130 (GN-BU)	22	CTRL MOD. - SENSOR IMPACT FRONT 2ND
16	VR214 (WH-BU)	22	SENSOR - IMPACT FRONT 2ND
17	VR213 (VT-GN)	22	SENSOR - IMPACT FRONT 1ST
18	RR129 (YE-GY)	22	CTRL MOD. - SENSOR IMPACT FRONT 1ST -
19	CBP35 (YE-GY)	22	FUSE - 35 OR CIRCUIT BREAKER
20	RR116 (BN-GN)	22	CTRL MOD. - INDICATOR PASSENGER AIR BAG DEACTIVATE -
21	RR102 (WH)	22	CTRL MOD. - AIR BAG DRIVER 2 -
22	CR102 (BU)	22	CTRL MOD. - AIR BAG DRIVER 2 +
23	CR104	22	CTRL MOD. - AIR BAG FRONT PASSENGER 2 +