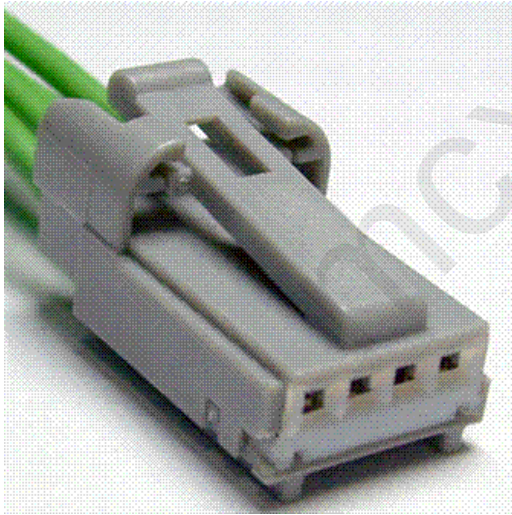


Pin	Circuit	Gauge	Circuit Function	Qualifier
1	CBP23 (BN-YE)	22	FUSE - 23 OR CIRCUIT BREAKER	
2	*	*	Not Used	
3	VDN09 (WH-GN)	22	CTRL MOD. - LIN BUS # DRIVER OR LEFT HAND DOOR MODULE	
4	RPW03 (BU-GN)	22	CTRL MOD. - POWER WINDOW SWITCH DRIVER RETURN	

Available Pigtail Kits	
Pigtail Kit Part Number WPT-1013 	Service Part Number: 9U2Z-14S411-TA Gauge: 18 Pin material: Silver Cavities: 4 Vehicle Uses Module - Auto Lamps Sensor - Sunload

CONNECTOR VIEWS > CONNECTOR END VIEW C541 - FRONT DOOR LOCK SWITCH LH

Connector:C541

Description

FRONT DOOR LOCK SWITCH LH

Color

BK

Harness


14631

Base Part #

part# N/A

Service Pigtail

See Below

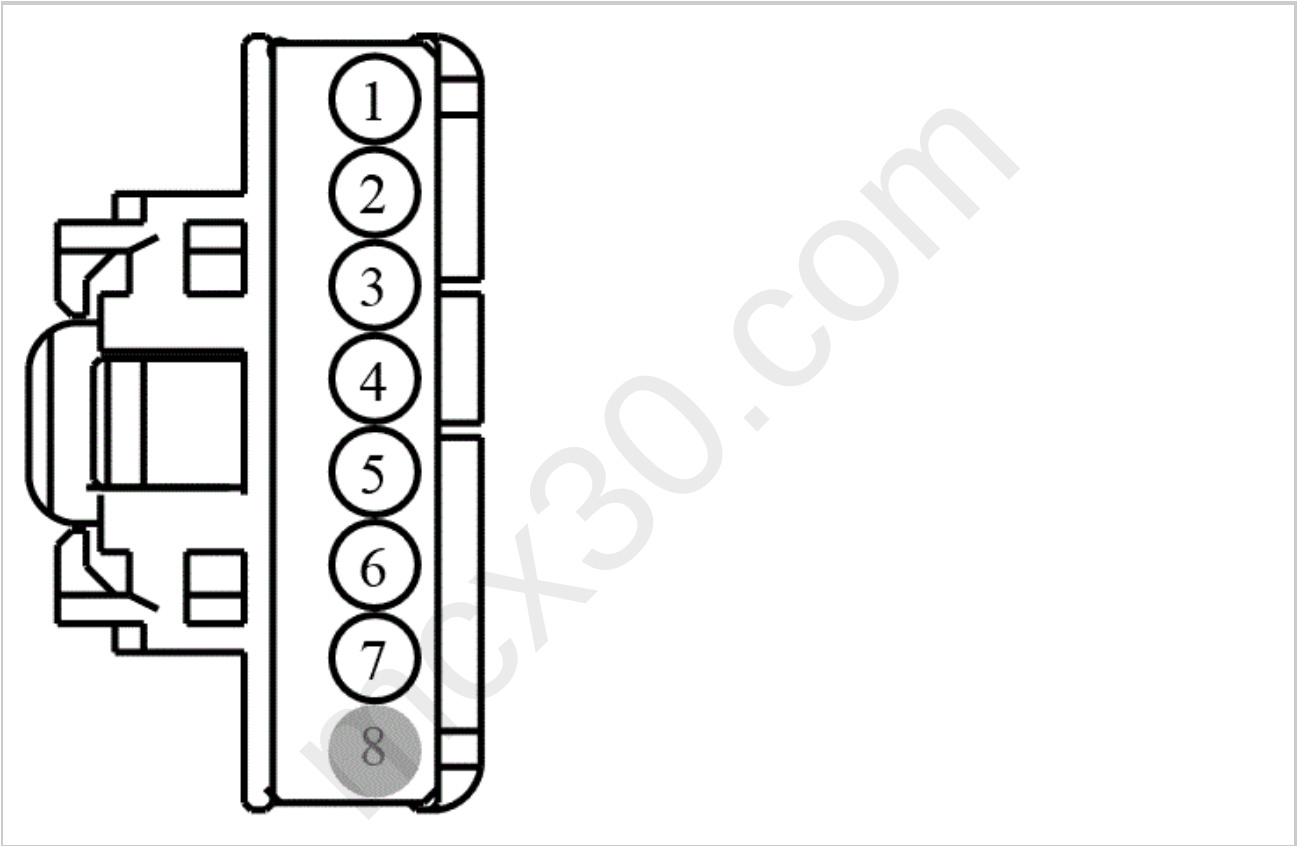

Check for Terminal Part Numbers


Pin	Circuit	Gauge	Circuit Function	Qualifier
1	CPK23 (YE-VT)	22	SWITCH - HANDLE UNLOCK DRIVER	
2	CPK19 (BU-GN)	22	SWITCH - LOCK DRIVER	

3	RPW03 (BU-GN)	22	CTRL MOD. - POWER WINDOW SWITCH DRIVER RETURN
4	CPL77 (BU)	26	CTRL MOD. - DOOR LOCK # SWITCH TRIM DOOR LOCK DRIVER ILLUMINATION
5	CPS15 (VT-WH)	22	SWITCH - MEMORY DRIVER P1
6	CPS16 (YE-VT)	22	SWITCH - MEMORY DRIVER P2
7	CPS17 (BU-OG)	22	SWITCH - MEMORY DRIVER P3
8	*	*	Not Used

Available Pigtail Kits

Pigtail Kit Part Number

WPT-1219

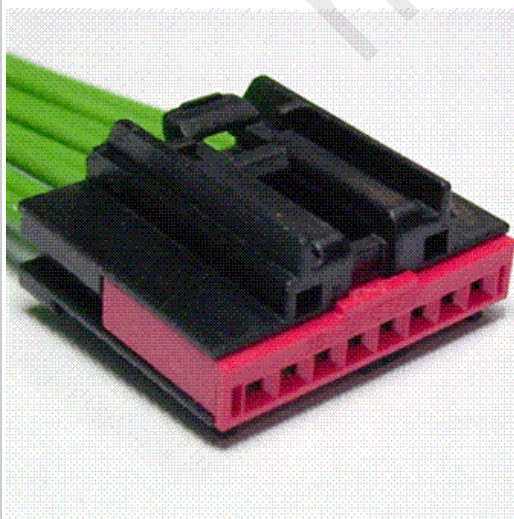

Service Part Number:

3U2Z-14S411-DAAC

Gauge:

18

Pin material:

Silver

Cavities:

8

Vehicle Uses

Switch - Ambient Lighting Dimmer

Switch - Door Lock (LH)

Switch - Message Center

Switch - Moon Roof/Sun Roof

Switch - Seat Memory