

	Switch - Brake Pedal Position
	Switch - Brake Pressure
	Switch - Park Brake
	Switch - Speed Control
	Switch - Speed Control Deactivation
	Switch - Stop Lamp
	Switch - Visor

CONNECTOR VIEWS > CONNECTOR END VIEW C605 - FRONT DOOR LOCK SWITCH RH

Connector: C605

Description

FRONT DOOR LOCK SWITCH RH

Color

BK

Harness


14630

Base Part

part# N/A

Service Pigtail

See Below

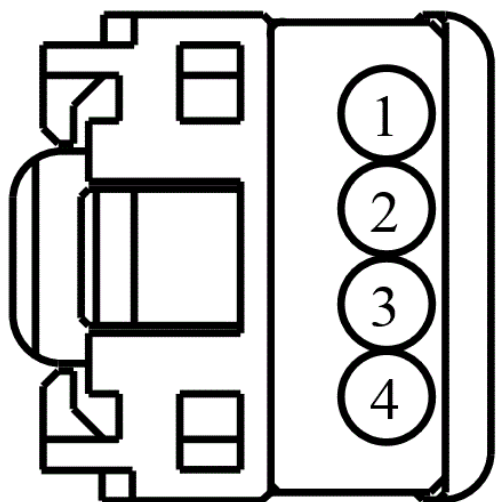

Check for Terminal Part Numbers

Pin	Circuit	Gauge	Circuit Function	Qualifier
1	CPL15 (BU)	26	SWITCH - TRIM DOOR LOCK PASSENGER # LOCK	
1	CPK19 (BU-GN)	22	SWITCH - LOCK DRIVER	
2	GD238 (BK-WH)	20	GROUND - COWL SIDE/PILLAR A RIGHT	
2	RPW05 (GN-BN)	22	CTRL MOD. - POWER WINDOW SWITCH FRONT PASSENGER RETURN	
3	CPL16 (YE)	26	SWITCH - TRIM DOOR LOCK PASSENGER # UNLOCK	
3	CPK23 (YE-VT)	22	SWITCH - HANDLE UNLOCK DRIVER	
4	CPL78 (VT)	26	CTRL MOD. - DOOR LOCK # SWITCH TRIM DOOR LOCK PASSENGER ILLUMINATION	
4	CBP23 (BN-YE)	22	FUSE - 23 OR CIRCUIT BREAKER	