


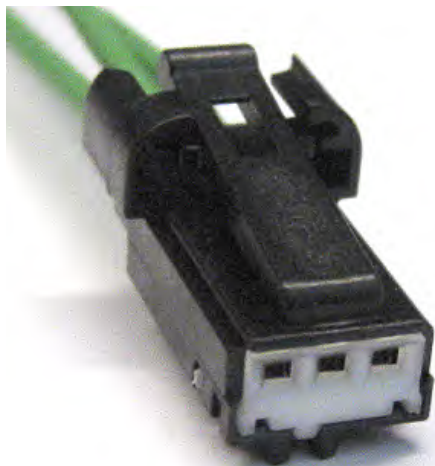

Fuse Panel Junction Block
Lamp - Ambient Lighting
Lamp - Front Park
Lamp - Map
Lamp - Park/Turn
Lamp - PRNDL Indicator
Lamp - Roof Marker
Module - Driver Door
Sensor - Speed
Switch - Ambient Lighting Dimmer

CONNECTOR VIEWS > CONNECTOR END VIEW C624 - PASSENGER DOOR WINDOW CONTROL SWITCH

Connector:C624

Description

PASSENGER DOOR WINDOW CONTROL SWITCH

Color

GY

Harness


14630

Base Part

part# N/A

Service Pigtail

See Below

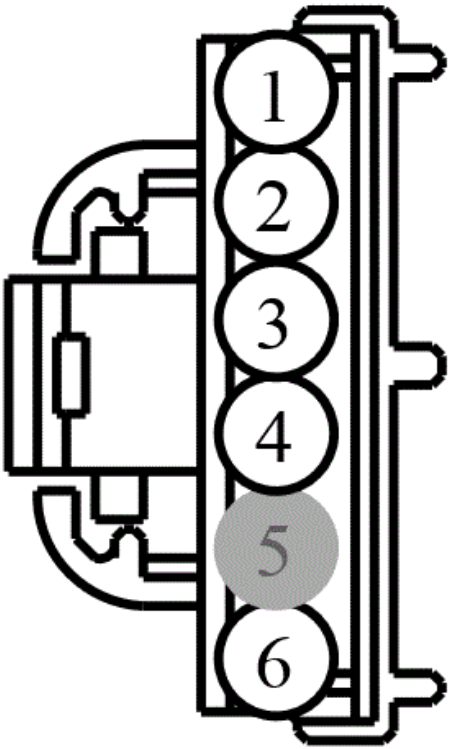

Check for Terminal Part Numbers

Pin	Circuit	Gauge	Circuit Function	Qualifier
1	CBP23 (BN-YE)	22	FUSE - 23 OR CIRCUIT BREAKER	
1	RPW05 (GN-BN)	22	CTRL MOD. - POWER WINDOW SWITCH FRONT PASSENGER RETURN	
2	CPW20 (WH)	26	SWITCH - POWER WINDOW FRONT PASSENGER # UP	
2	CPW13 (BN-YE)	22	SWITCH - POWER WINDOW DRIVER # FRONT PASSENGER UP	
3	CPW19 (GN)	26	SWITCH - POWER WINDOW FRONT PASSENGER # DOWN	
3	CPW12 (GN-OG)	22	SWITCH - POWER WINDOW DRIVER # FRONT PASSENGER DOWN	