


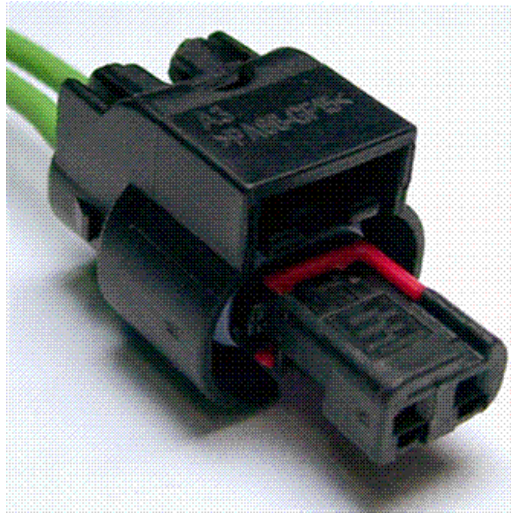

Vehicle Uses

Solenoid - Engine Variable Timing

CONNECTOR VIEWS > CONNECTOR END VIEW C1381B - POWERTRAIN CONTROL MODULE (PCM)

Connector: C1381B

Description

POWERTRAIN CONTROL MODULE (PCM)

Color

Harness


14290

Base Part

part# N/A

Service Pigtail

Not Available

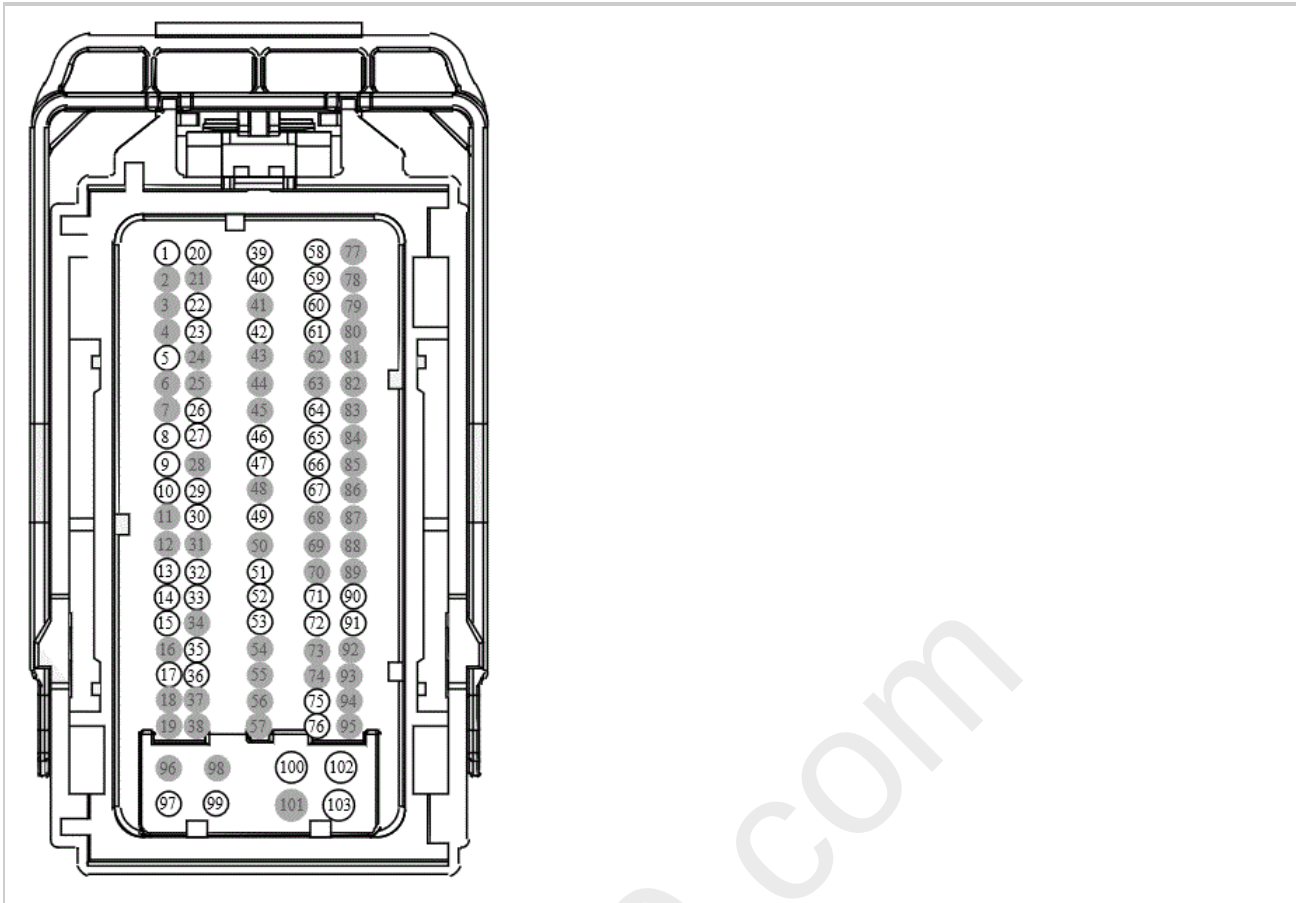

Check for Terminal Part Numbers

Pin	Circuit	Gauge	Circuit Function	Qualifier
1	CDC54 (WH-GN)	20	CTRL MOD. - POWERTRAIN # STARTER MOTOR CONTROL SENSE (SMCS)	
2	*	*	Not Used	
3	*	*	Not Used	
4	*	*	Not Used	
5	GD113 (BK-YE)	18	GROUND - COWL TOP RIGHT	
6	*	*	Not Used	

7	*	*	Not Used
8	CE904 (GN-VT)	22	SWITCH - CLUTCH PEDAL POSITION # TOP OF TRAVEL (CPP-TT)
9	CE903 (BU-OG)	22	SWITCH - CLUTCH PEDAL POSITION # BOTTOM OF TRAVEL (CPP-BT)
10	CEC01 (WH-BU)	20	CTRL MOD. - COOLING FAN CONTROL HIGH (HFC)
11	*	*	Not Used
12	*	*	Not Used
13	CDC10 (BU-OG)	20	CTRL MOD. - POWERTRAIN # GENERATOR REGULATOR CONTROL (GENRC)
14	VE225 (YE-OG)	22	CTRL MOD. - POWERTRAIN # FUEL PUMP COMMAND (FPC)
15	CH302 (WH-BN)	20	CTRL MOD. - POWERTRAIN # A/C CLUTCH CONTROL RELAY / WOT AC CUTOFF (ACCR)
16	*	*	Not Used
17	CEC02 (GN-BU)	20	CTRL MOD. - COOLING FAN CONTROL LOW (LFC)
18	*	*	Not Used
19	*	*	Not Used
20	CE302 (YE-BU)	20	CTRL MOD. - POWERTRAIN # POWERTRAIN CONTROL RELAY (PCMRC)

21	*	*	Not Used
22	CET42 (GN-VT)	22	SWITCH - TRANSMISSION SELECT SHIFT # DOWN (SST)
23	CET43 (GY)	22	SWITCH - TRANSMISSION SELECT SHIFT # UP (SST)
24	*	*	Not Used
25	*	*	Not Used
26	CDC15 (VT)	20	GENERATOR (ALTERNATOR) # LOAD INPUT (GENLI)
27	VE518 (BN-WH)	22	MONITOR - FUEL PUMP (FPM)
28	*	*	Not Used
29	LE230 (BN-BU)	22	CTRL MOD. - POWERTRAIN # FUEL TANK PRESSURE TRANSDUCER REF. VOLT. (VREF)
30	RE407 (YE-VT)	20	CTRL MOD. - POWERTRAIN # SIGNAL RETURN COWL (C-SIGRTN) (SIGRTN-C)
31	*	*	Not Used
32	CET47 (BU)	20	SWITCH - REVERSE (RS)
33	VH433 (VT-OG)	22	TRANSDUCER - A/C PRESSURE (ACPT) +
34	*	*	Not Used
35	RE136 (VT-GN)	22	CTRL MOD. - POWERTRAIN # ACCELERATOR PEDAL POSITION SENSOR 1 (APPRTN1)