


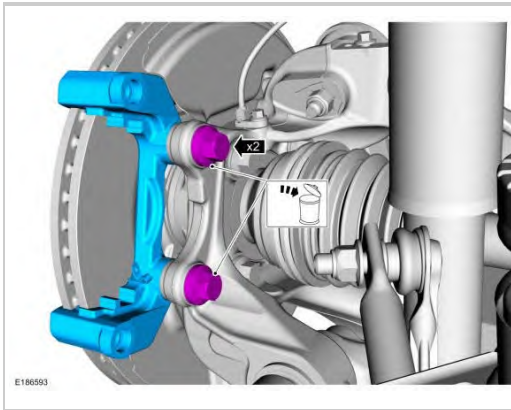

REMOVAL AND INSTALLATION > BRAKE CALIPER ANCHOR PLATE > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > BRAKE DISC

Materials

Name	Specification
Metal Brake Parts Cleaner (U.S.)PM-4-A, PM-4-B (U.S.)	-

REMOVAL AND INSTALLATION > BRAKE DISC > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove wheel and tire. Refer to: Wheel and Tire .



NOTE: Do not allow the brake caliper and anchor plate assembly to hang from the brake hose or damage to the hose may occur.

2.

Remove the 2 bolts and position the brake caliper and anchor plate assembly aside. Discard the bolts.

Torque