



E187178

REMOVAL AND INSTALLATION > EVAPORATIVE EMISSION CANISTER VENT SOLENOID > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FUEL TANK PRESSURE SENSOR AND TUBE > REMOVAL

 **WARNING:** Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

 **WARNING:** Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

 **WARNING:** Always disconnect the battery ground cable at the battery when working on an evaporative emission (EVAP) system or fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.



NOTE: Removal steps in this procedure may contain installation details.

1.

Position the vehicle on a hoist. Refer to: Jacking and Lifting - Overview .

2.


Disconnect the battery ground cable. Refer to: Battery Disconnect and Connect .

3.

Remove the rear subframe. Refer to: Rear Subframe .

4.

Disconnect the quick release coupling, routing clips and the fuel tank pressure sensor electrical connector. Refer to: QUICK RELEASE COUPLING .

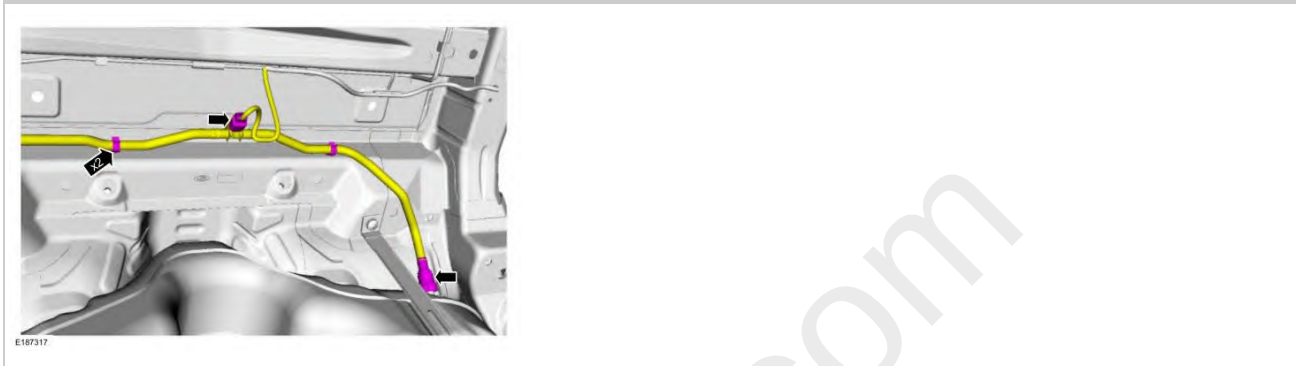

5.

Disconnect the routing clips.



6.

Disconnect the quick release coupling and routing clips. Refer to: QUICK RELEASE COUPLING .

