

K9K, and 750 or 752

Special tooling required

Mot. 1567 Remote pliers for exhaust gas recirculation pipe clamps.


Tightening torques

turbocharger outlet air pipe clips **5.5 N.m**

REMOVAL

I - REMOVAL PREPARATION OPERATION


- ☐ Disconnect the battery (see **Battery: Removal - Refitting**) (MR 392, 80A, Battery).

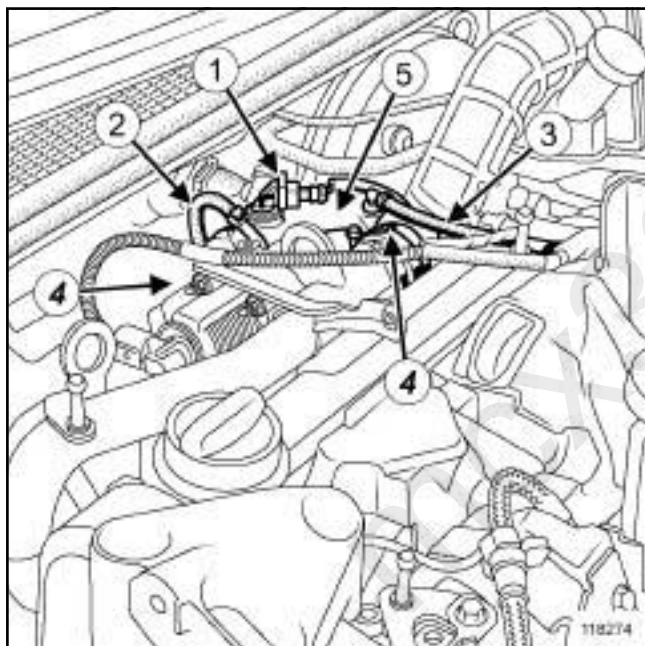

118274

- ☐ Disconnect:
 - the air temperature sensor connector (1) ,
 - the vacuum pipe (2) between the turbocharger regulation valve and the turbocharger outlet air pipe,
 - the vacuum pipe (3) between the air pressure sensor and the turbocharger outlet air pipe.
- ☐ Loosen the turbocharger outlet air pipe clips (4) .
- ☐ Remove the turbocharger outlet air pipe (5) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

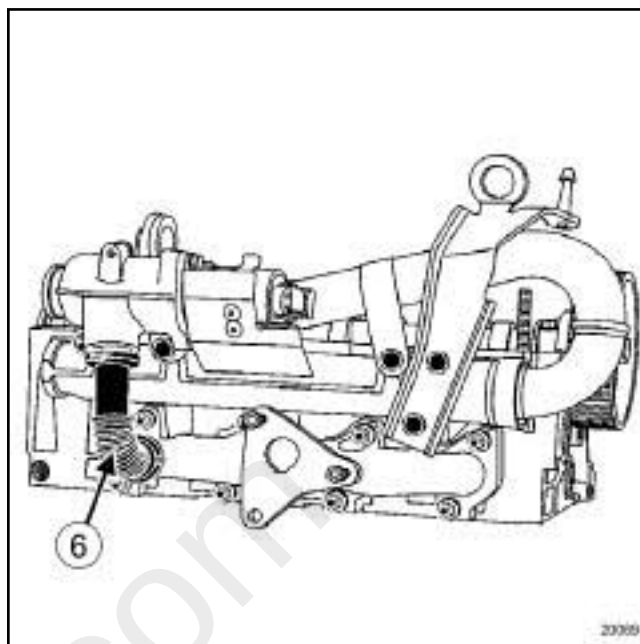

20069

- ☐ Remove:
 - the clips of the exhaust gas recirculation pipe using the **(Mot. 1567)**,
 - the exhaust gas recirculation rigid pipe (6) .

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ☐ Refit:
 - the exhaust gas recirculation rigid pipe,
 - the clips to the exhaust gas recirculation pipe using the **(Mot. 1567)**.

II - FINAL OPERATION

- ☐ Refit the turbocharger outlet air pipe.
- ☐ Torque tighten the **turbocharger outlet air pipe clips (5.5 N.m)**.
- ☐ Connect:
 - the vacuum pipe between the air pressure sensor and the turbocharger outlet air pipe,
 - the vacuum pipe between the turbocharger regulation valve and the turbocharger outlet air pipe,
 - the air temperature sensor connector,
 - the battery (see **Battery: Removal - Refitting**) (MR 392, 80A, Battery).