


Expansion bottle: Removal - Refitting

D4F, and 784

II - OPERATION FOR REMOVAL OF PART CONCERNED

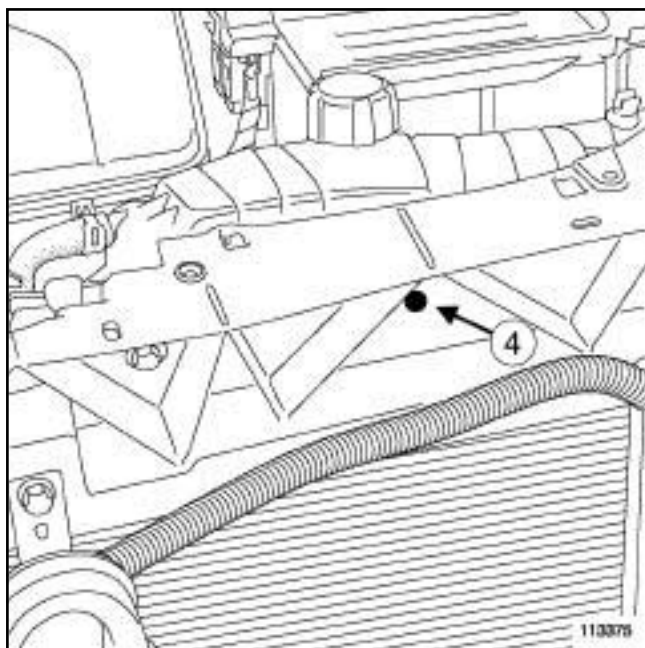

113375

- ☐ Remove clip (4) .
- ☐ Remove the expansion bottle.
- ☐ Fit the (**Ms. 583**) to the expansion bottle hoses.
- ☐ Using the (**Mot. 1448**), remove:
 - the expansion bottle bottom hose clip,
 - the expansion bottle top hose clip.
- ☐ Disconnect:
 - the expansion bottle's bottom hose,
 - the expansion bottle top hose.
- ☐ Remove the expansion bottle.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ☐ Connect:
 - the expansion bottle's top hose,
 - the expansion bottle bottom hose.
- ☐ Using the (**Mot. 1448**), refit:
 - the clamp of the top hose of the expansion bottle,
 - the clamp of the bottom hose of the expansion bottle.
- ☐ Remove the (**Ms. 583**).


- ☐ Refit:
 - the expansion bottle,
 - the expansion bottle clip.

II - FINAL OPERATION.

- ☐ Clip the fuse board onto the battery tray.
- ☐ Position the fuse board wiring harness.
- ☐ Refit the fuse board wiring harness nut.
- ☐ Clip the **30 A** fuse connector onto the fuse board.
- ☐ Refit:
 - the **30 A** fuse,
 - the fuse board mounting cover,
 - the air filter unit air inlet pipe.
- ☐ Top-up the coolant level in the expansion bottle.
- ☐ Refit:
 - the front bumper (see **Front bumper: Removal - Refitting**) (MR 393, 55A, Exterior protection),
 - the engine undertray.
- ☐ Connect the battery (see **Battery: Removal - Refitting**) (MR 392, 80A, Battery).

PIPE ASSEMBLY

D4F

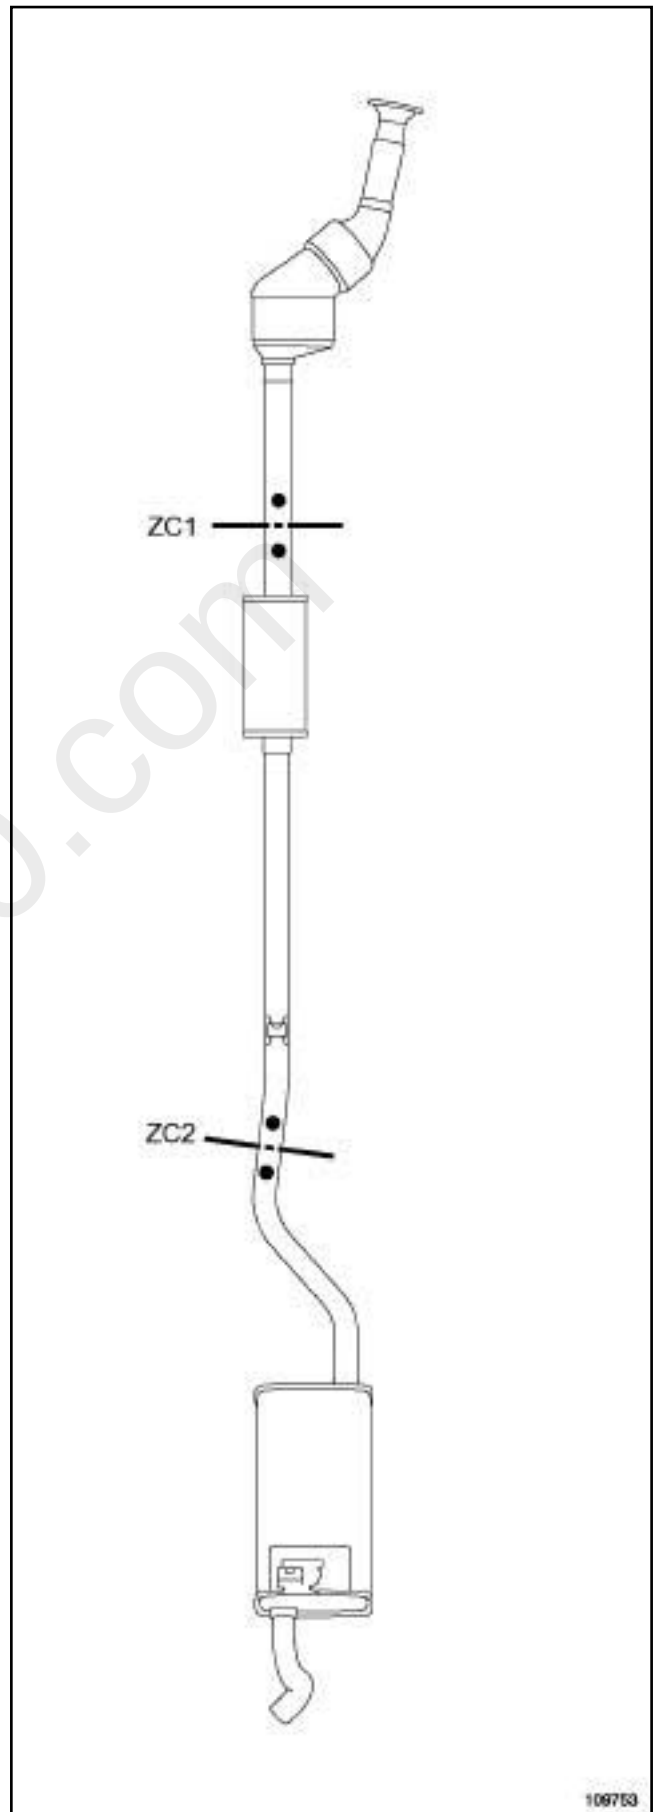

109753

109753

- (ZC1)


cutting area between the catalytic converter and the expansion chamber
- (ZC2)

cutting area between the expansion chamber and the silencer



mcx30.com

K4J

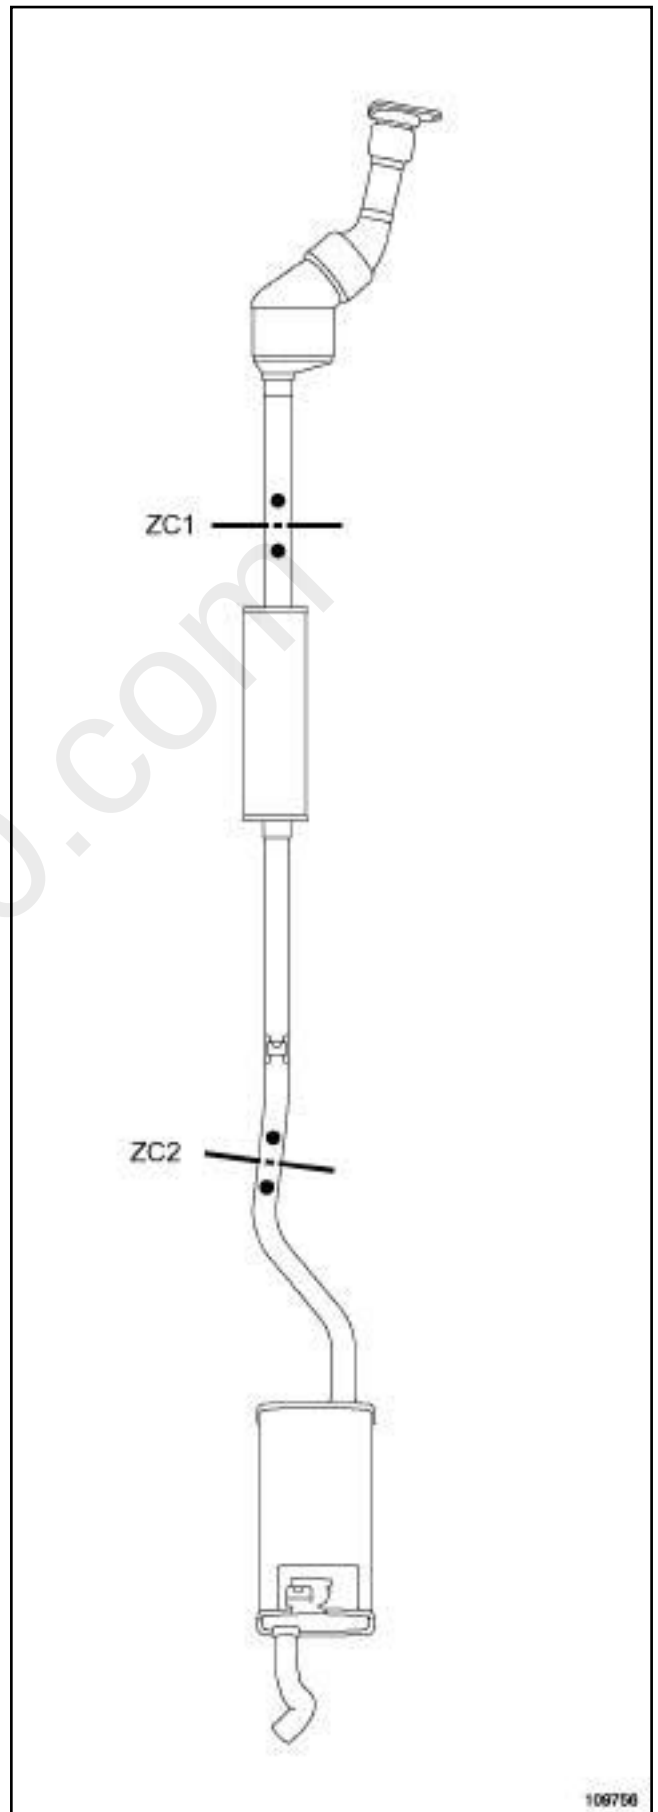

109756

109756

- (ZC1)


cutting area between the catalytic converter and the expansion chamber
- (ZC2)

cutting area between the expansion chamber and the silencer



mcx30.com

K4M

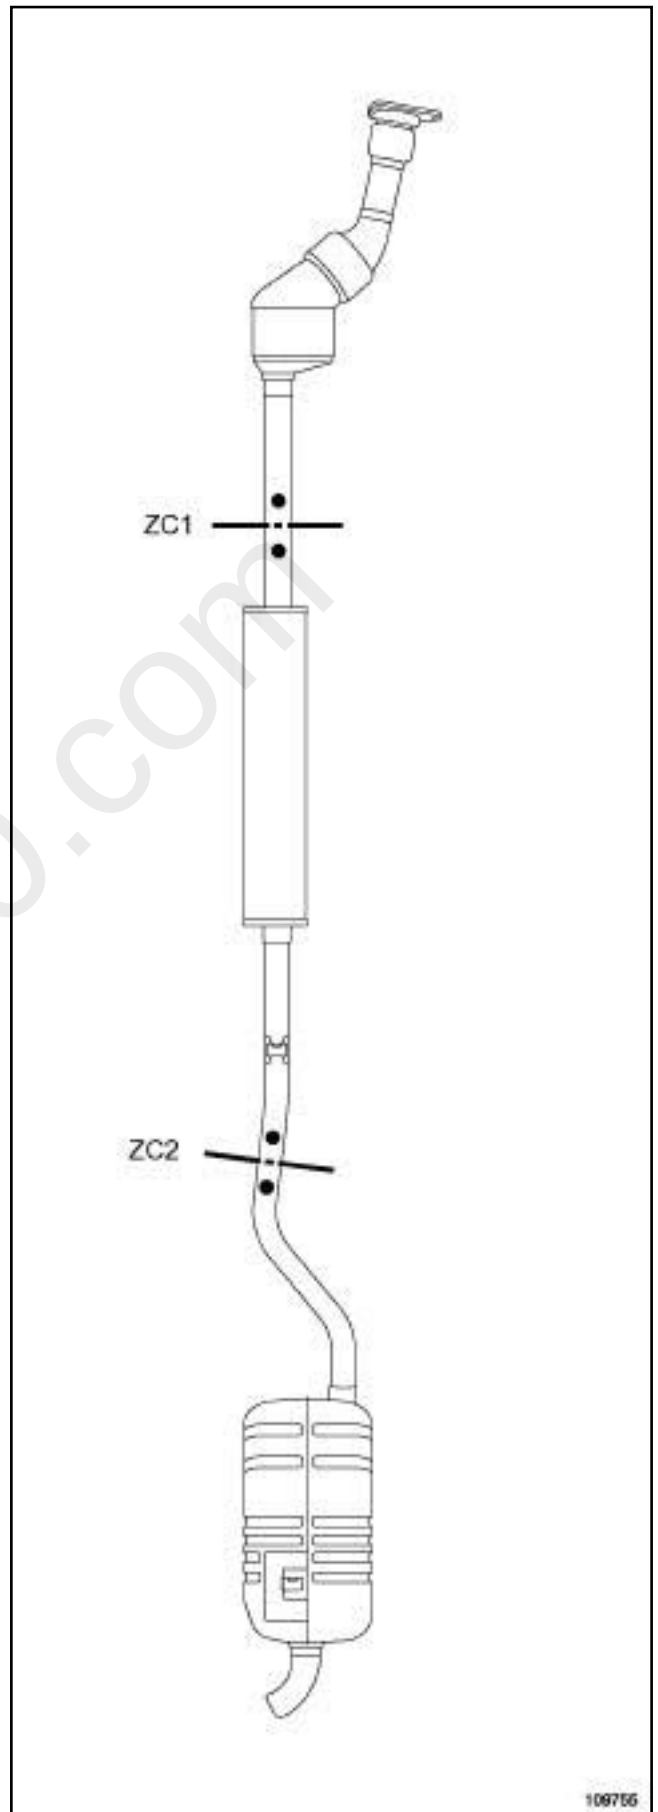

109755

109755

- (ZC1)


cutting area between the catalytic converter and the expansion chamber
- (ZC2)

cutting area between the expansion chamber and the silencer



mcx30.com

M4R

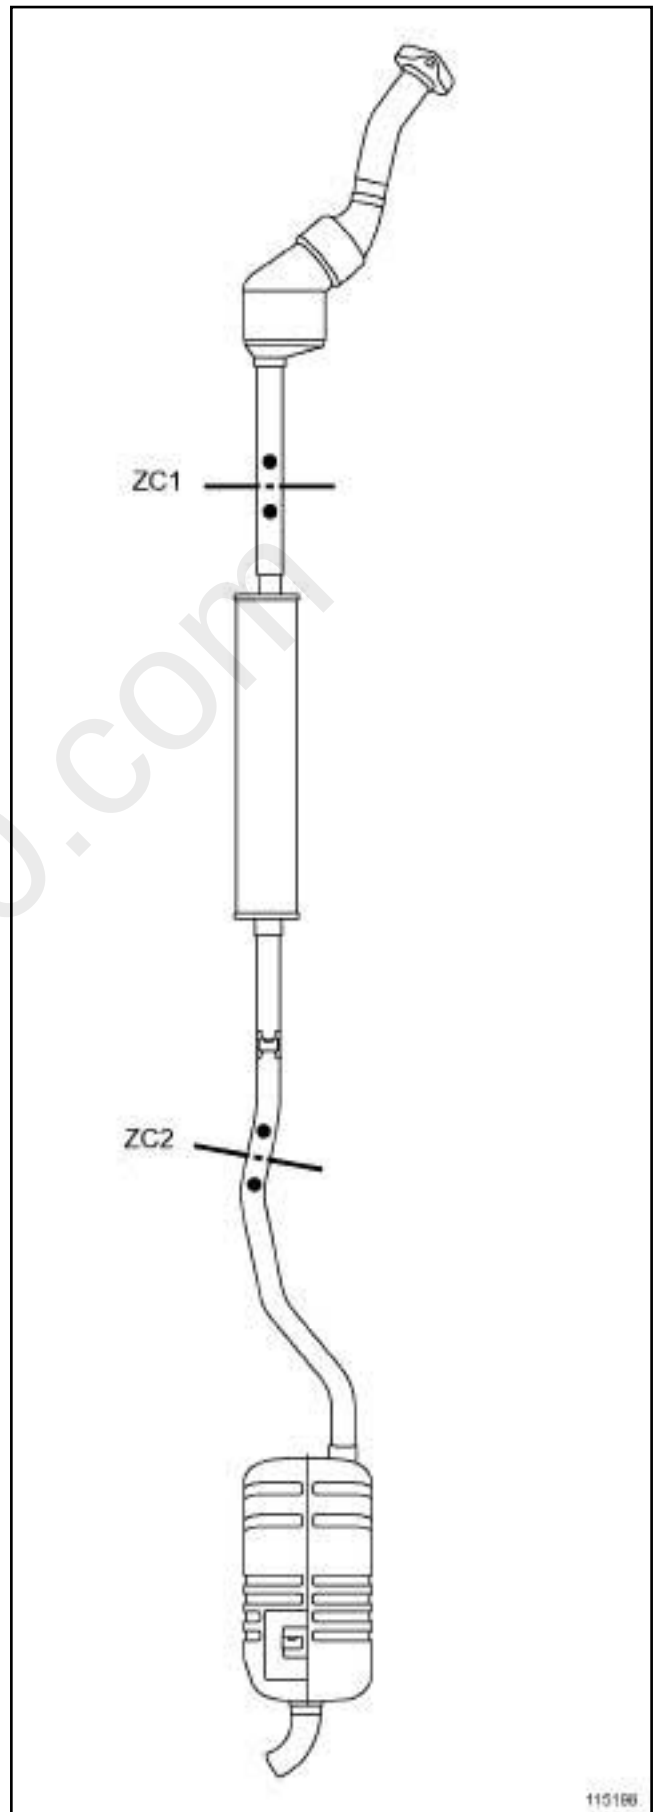

115188

115198

- (ZC1)


cutting area between the catalytic converter and the expansion chamber
- (ZC2)

cutting area between the expansion chamber and the silencer



mcx30.com

F4R

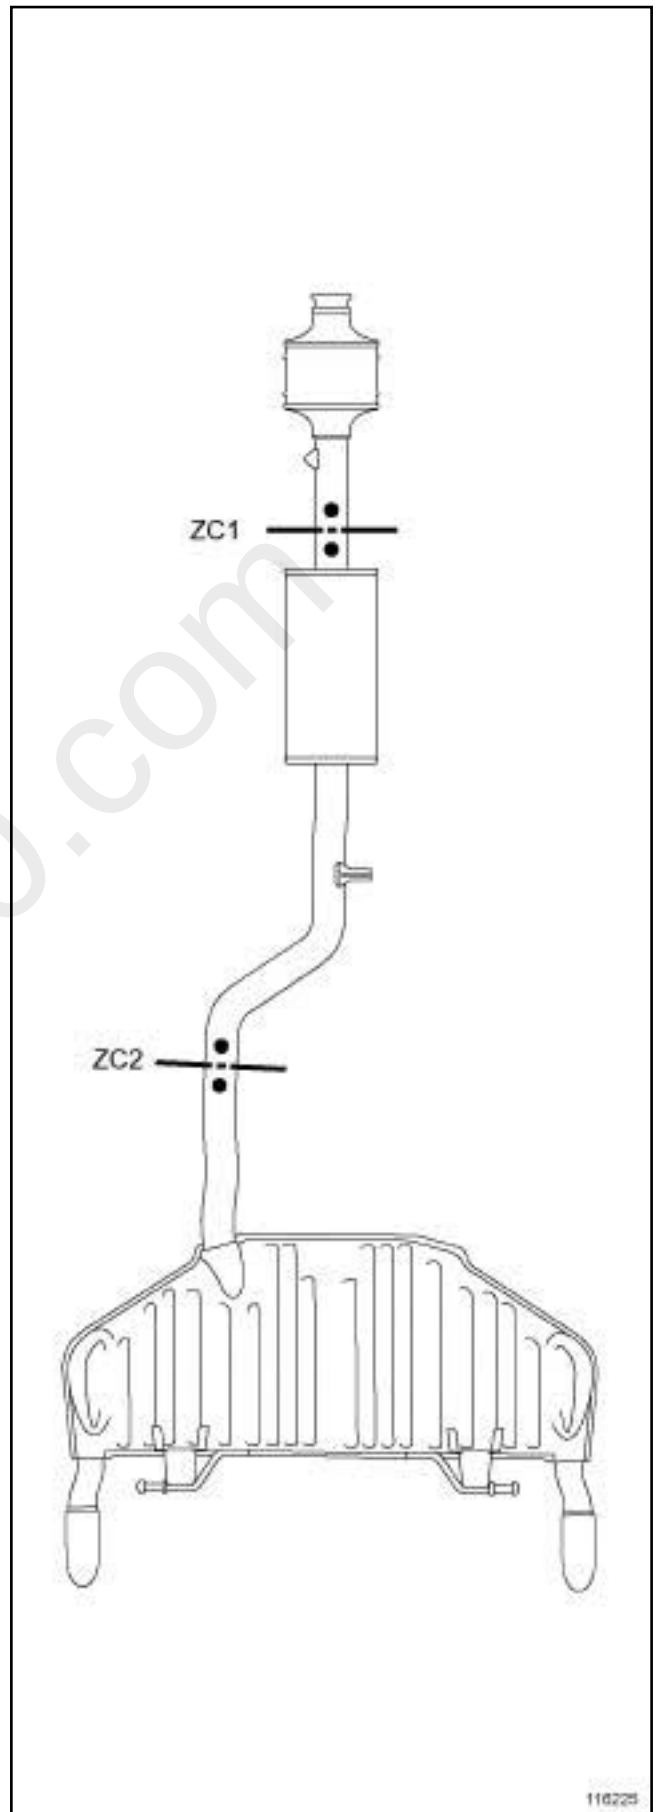

116225


116225

Exhaust: List and location of components

(ZC1)	cutting area between the catalytic converter integrated into the exhaust pipe and the expansion chamber
(ZC2)	cutting area between the expansion chamber and the silencer

mcx30.com

K9K, and 764

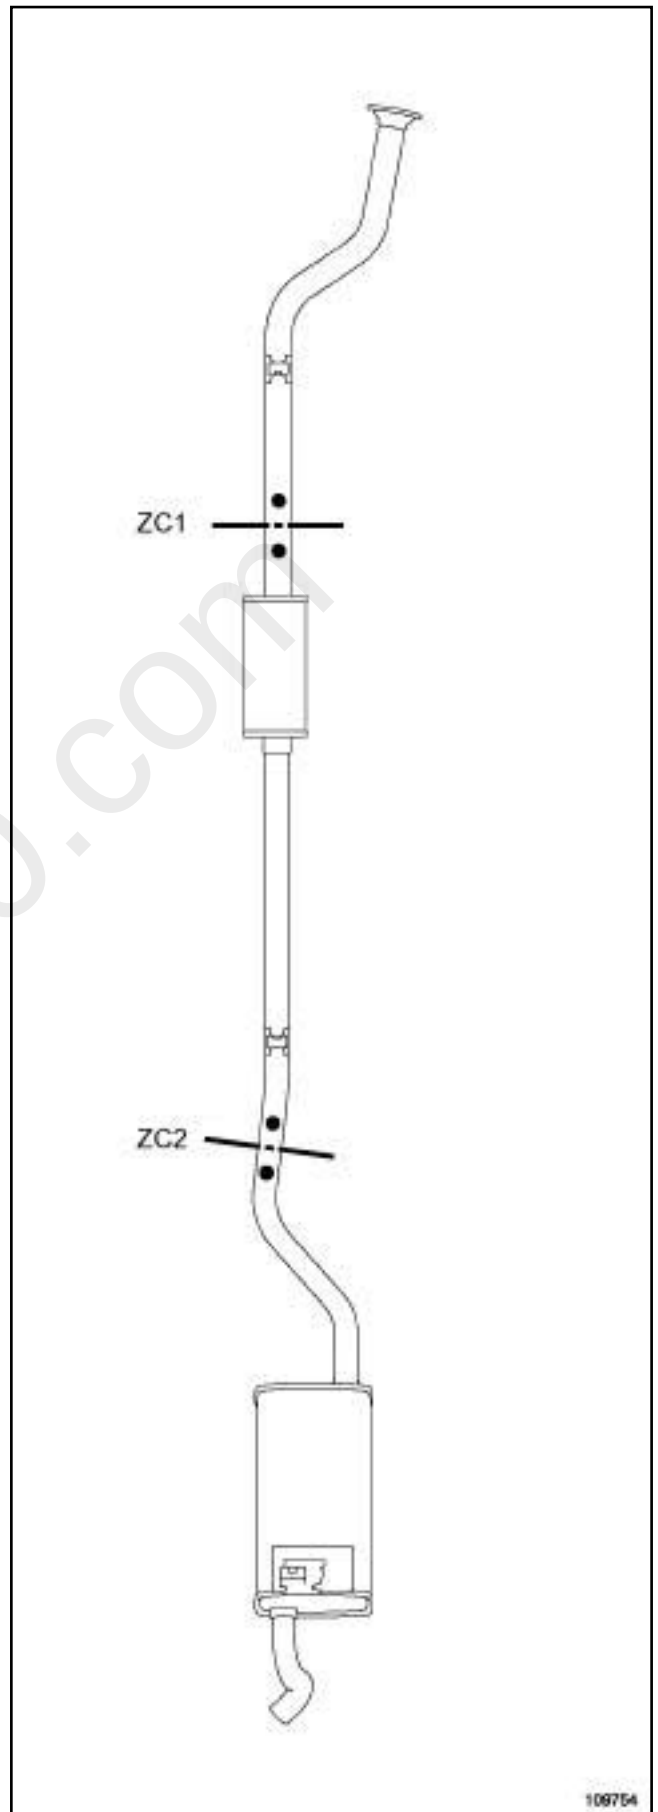


109754

109754

(ZC1)	cutting area between the expansion chamber inlet pipe and the expansion chamber
(ZC2)	cutting area between the expansion chamber and the silencer

mcx30.com

K9K, and 750 or 752 or 760 or 762 or 766 or 768

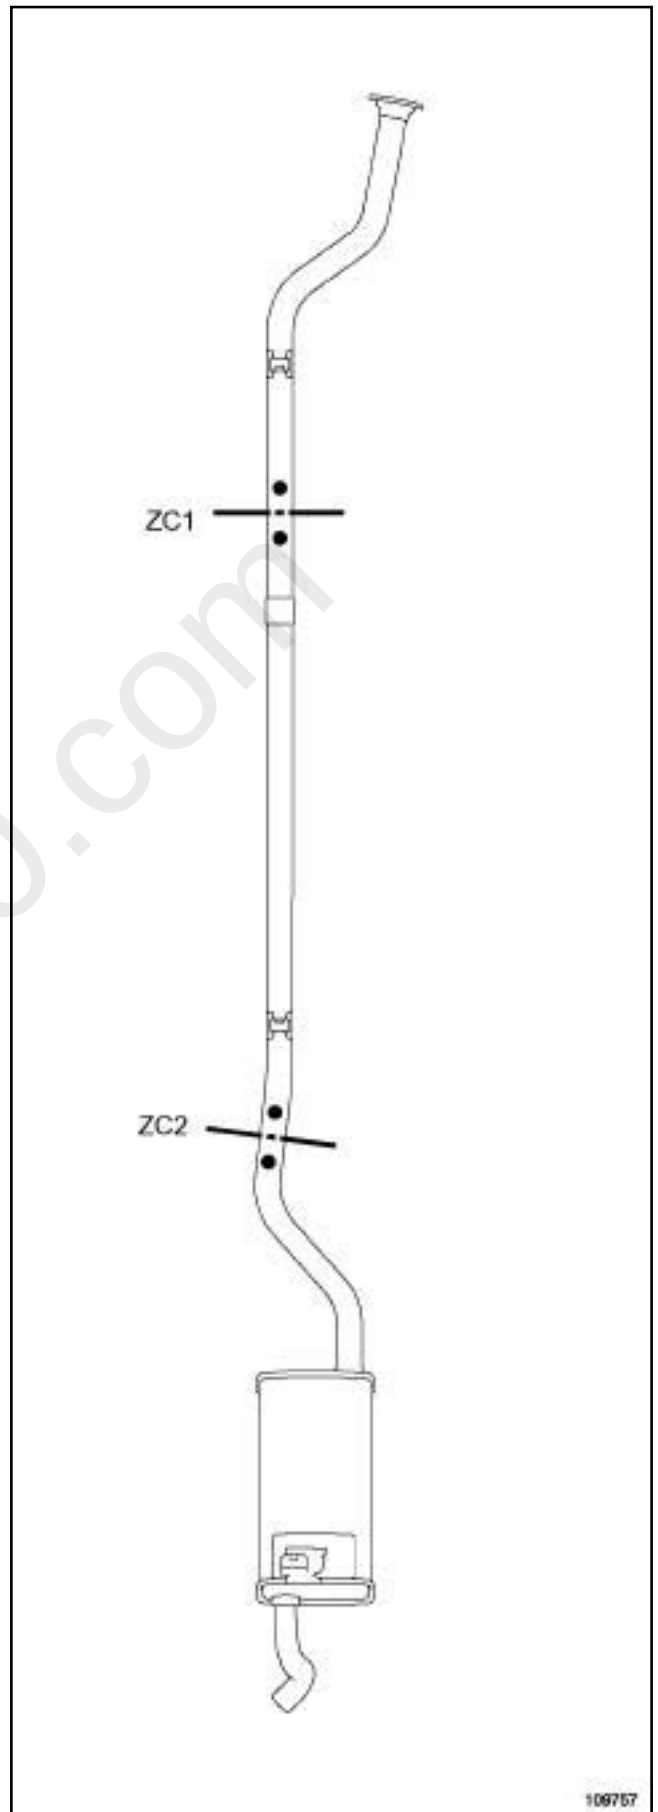

109757

(ZC1)	cutting area between the intermediate pipe inlet pipe and the intermediate pipe
(ZC2)	cutting area between the intermediate pipe and the silencer


mcx30.com

EXHAUST

Exhaust: List and location of components

19B

K9K, and 772

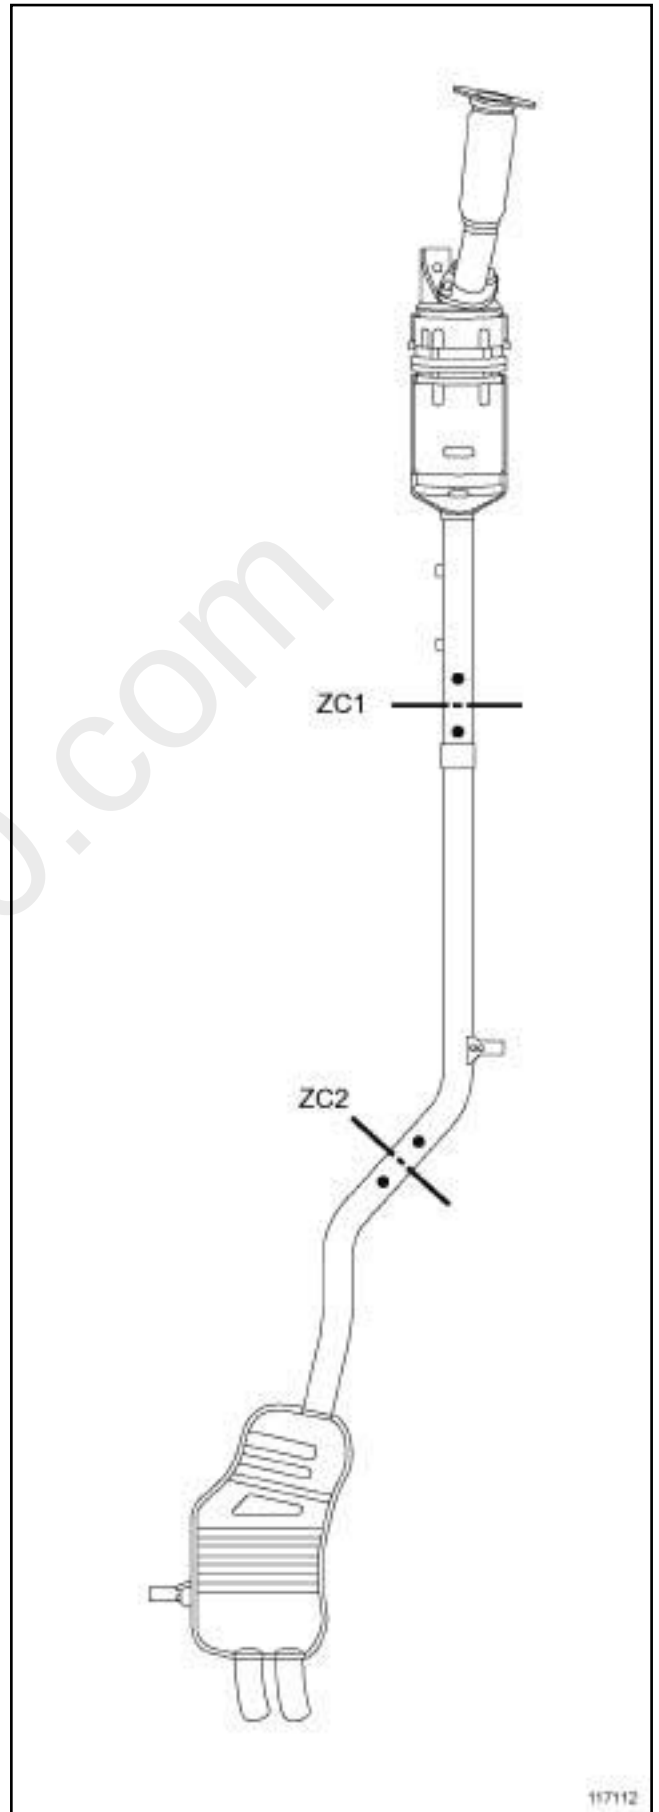

117112