

Perform the following operations:

-
- fill the refrigerant circuit using the refrigerant charging station [Refrigerant circuit: Draining - Filling](#) ,
- check for leaks [Refrigerant circuit: Check](#) .
-
- top up and bleed the cooling system [Cooling system: Draining - Refilling](#) .

Check that the air conditioning system is operating correctly [Air conditioning: Check](#) .



Repair-30x02x01x02-01x37-1-46-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com

DOOR MIRROR: REMOVAL - REFITTING

Special tooling required


Set of trim removal levers.

Car. 1363

REMOVAL


1. REMOVAL PREPARATION OPERATION

- Remove the front side door trim [Front side opening element trim: Removal - Refitting](#) .

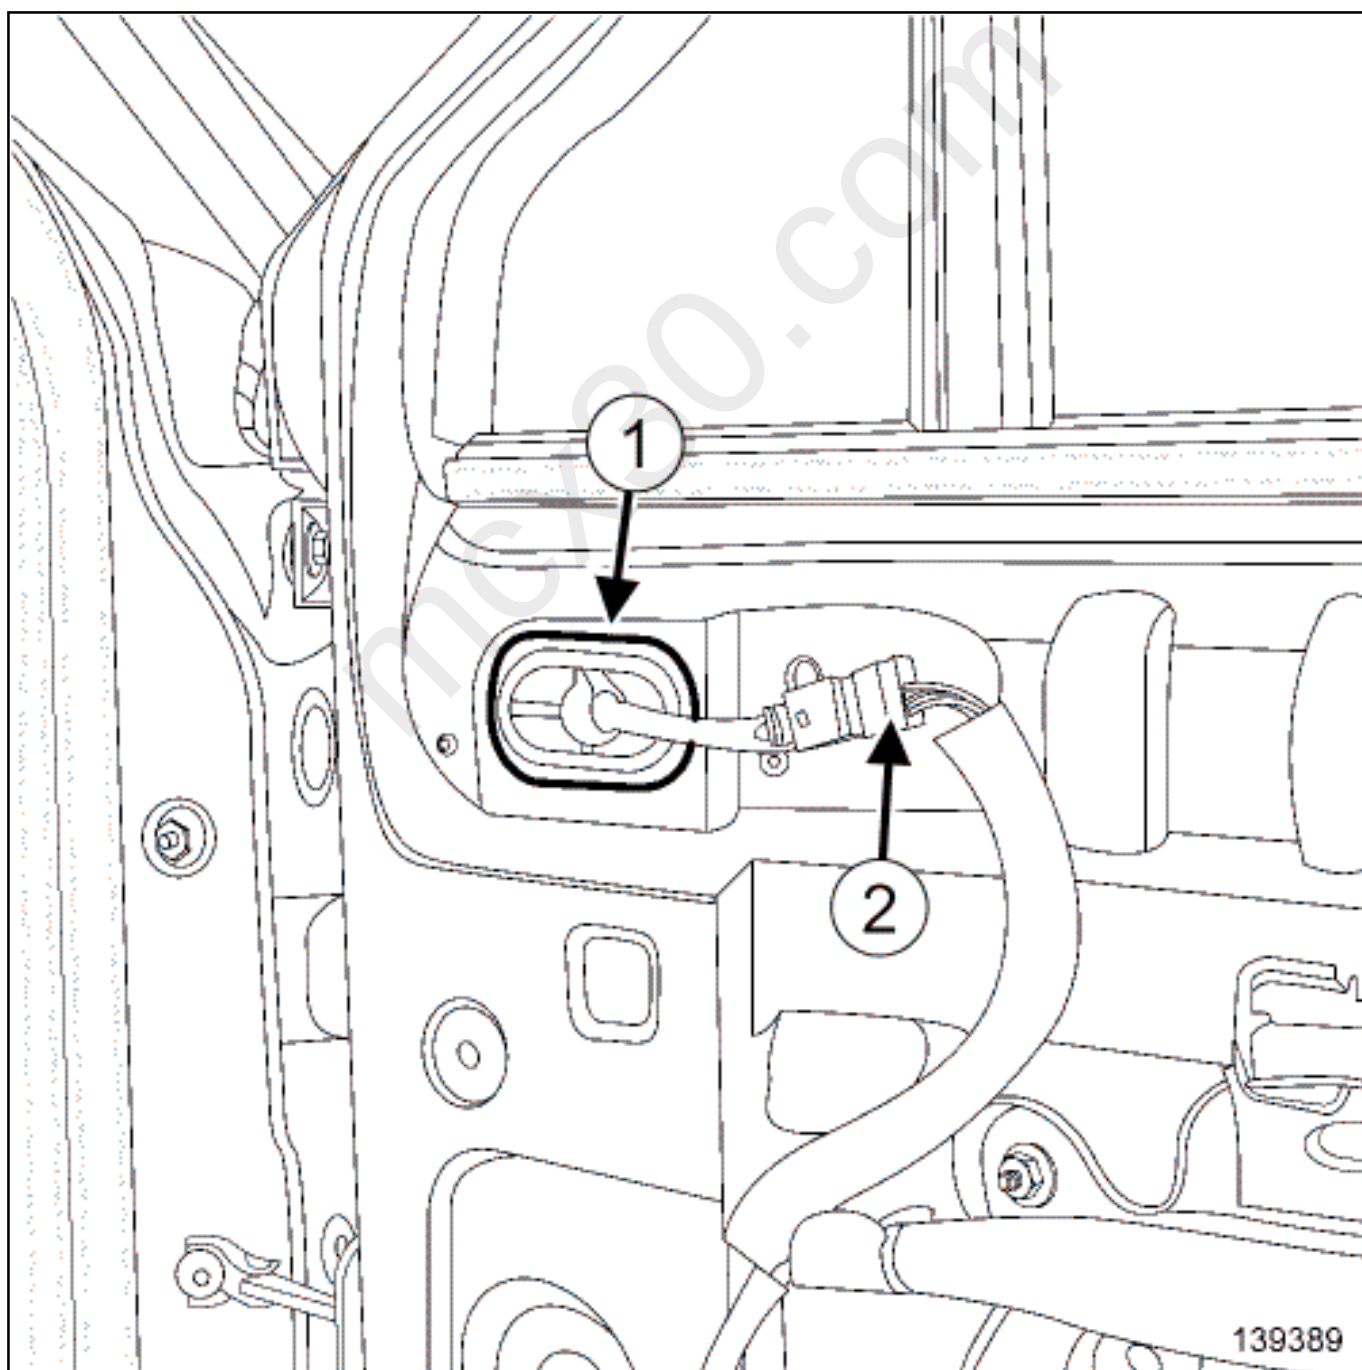

- Remove the blanking cover(1) .
- Disconnect the door mirror connector(2) .

2. REMOVAL OPERATION

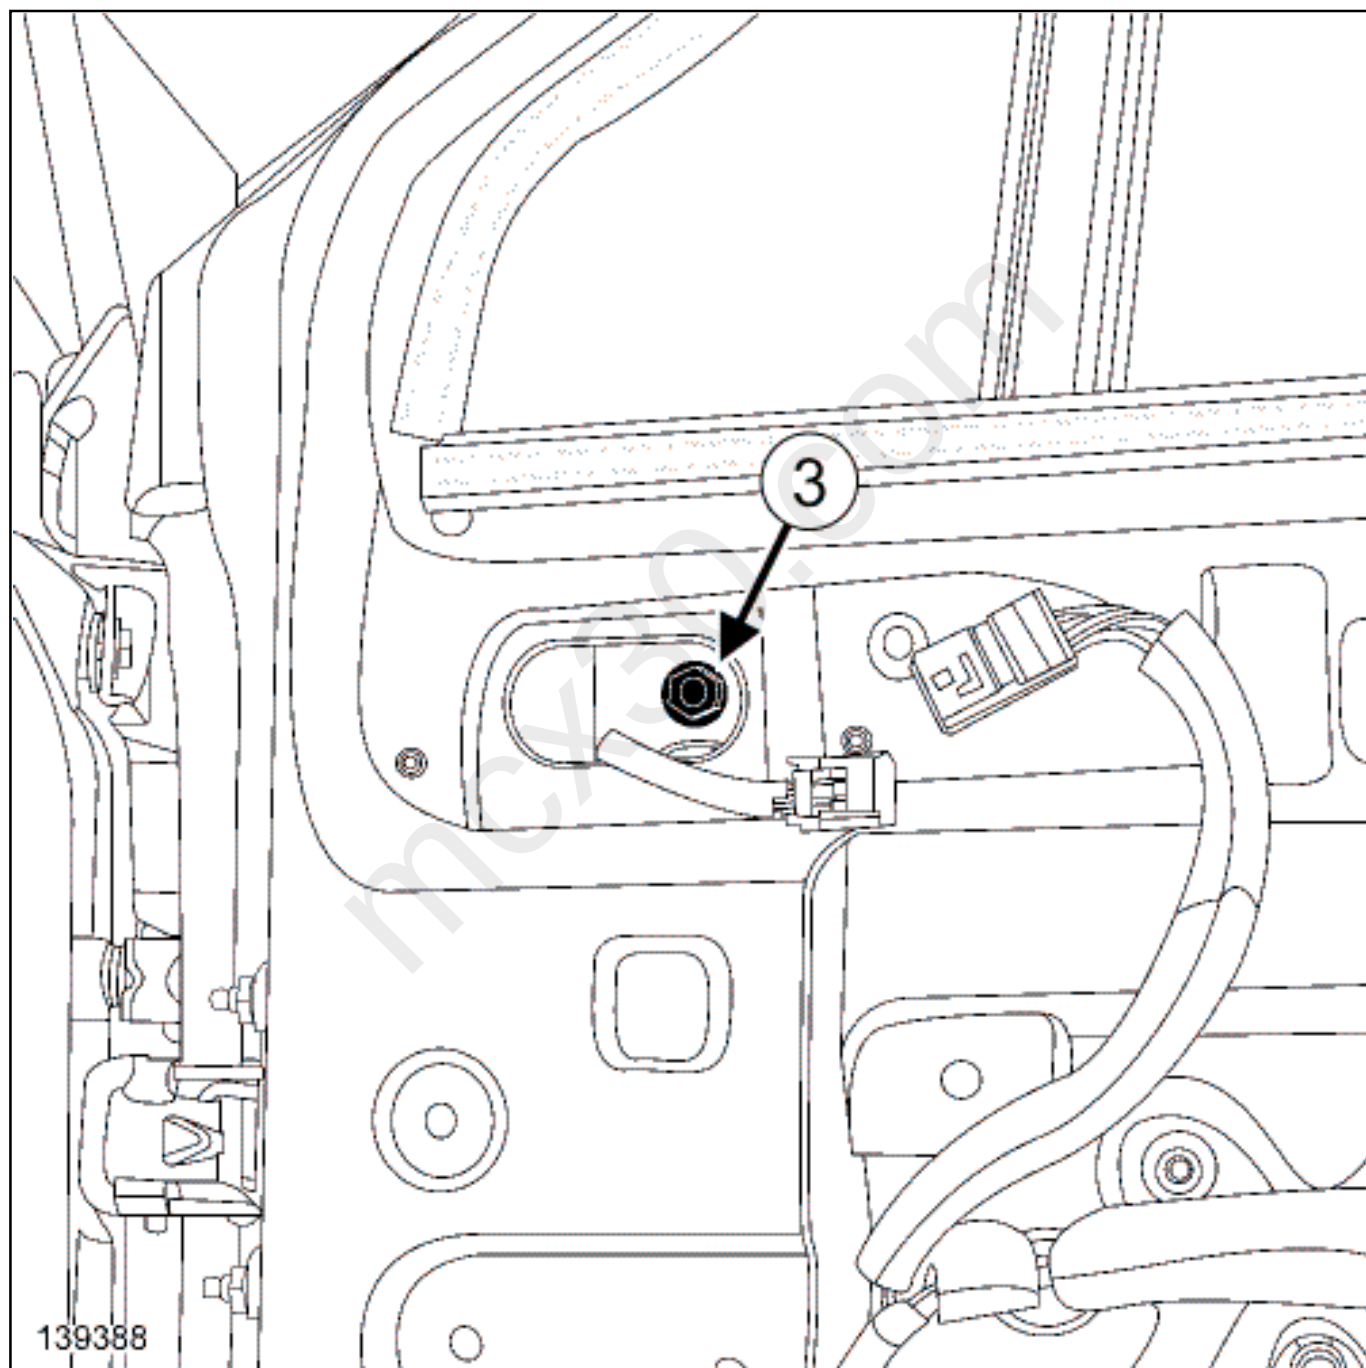


Remove:



the door mirror nut(3) ,

the door mirror.


1- IN THE EVENT OF A REPLACEMENT

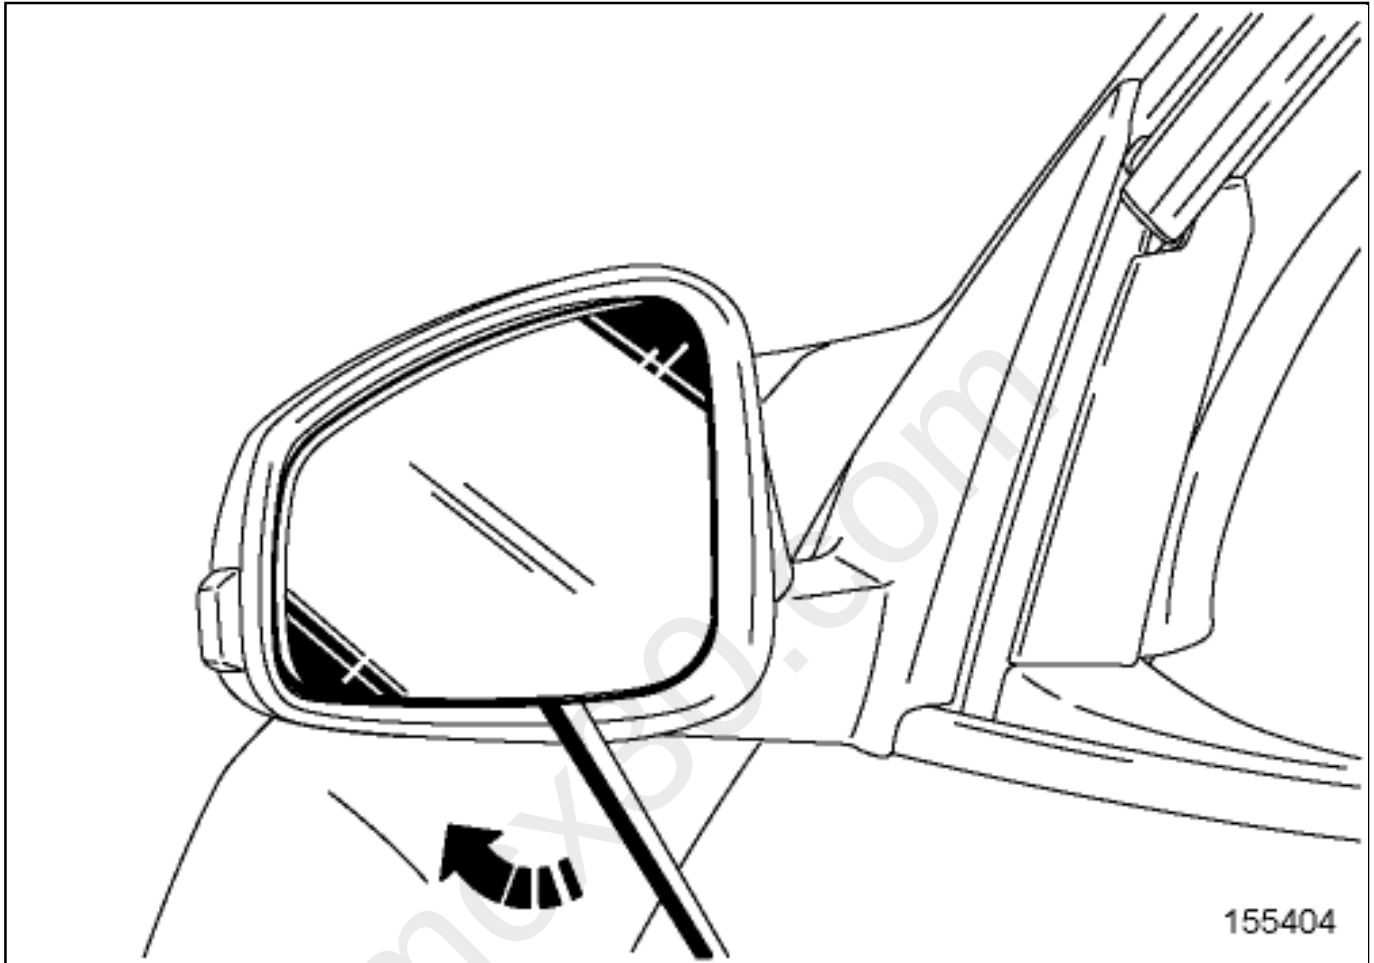


Protect the edges of the door mirror with masking tape.

Unclip the door mirror glass using the toolSet of trim removal levers.(Car. 1363) .

Disconnect the connector.

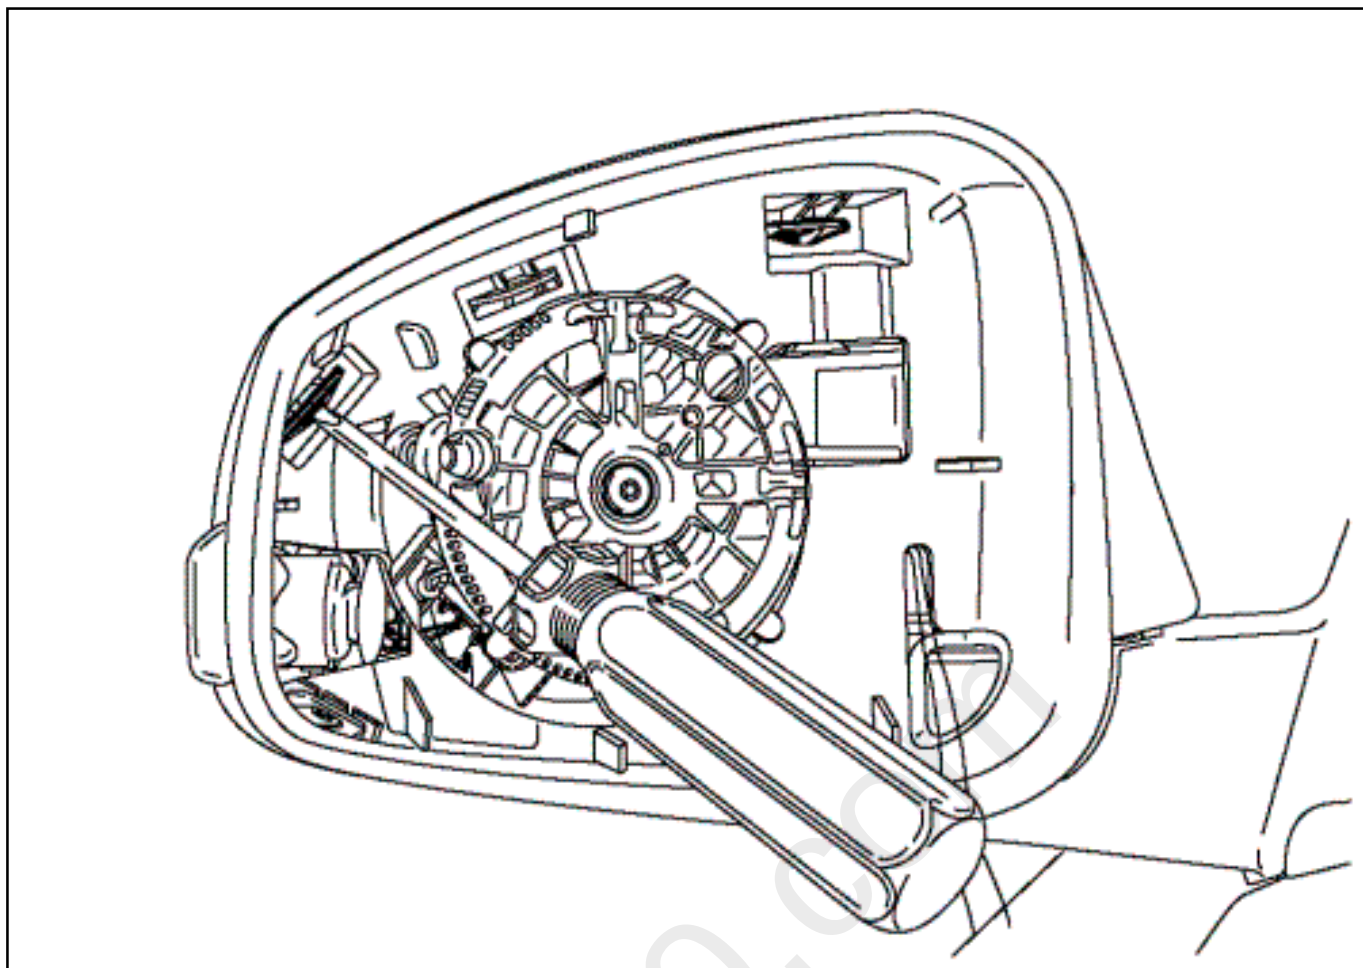

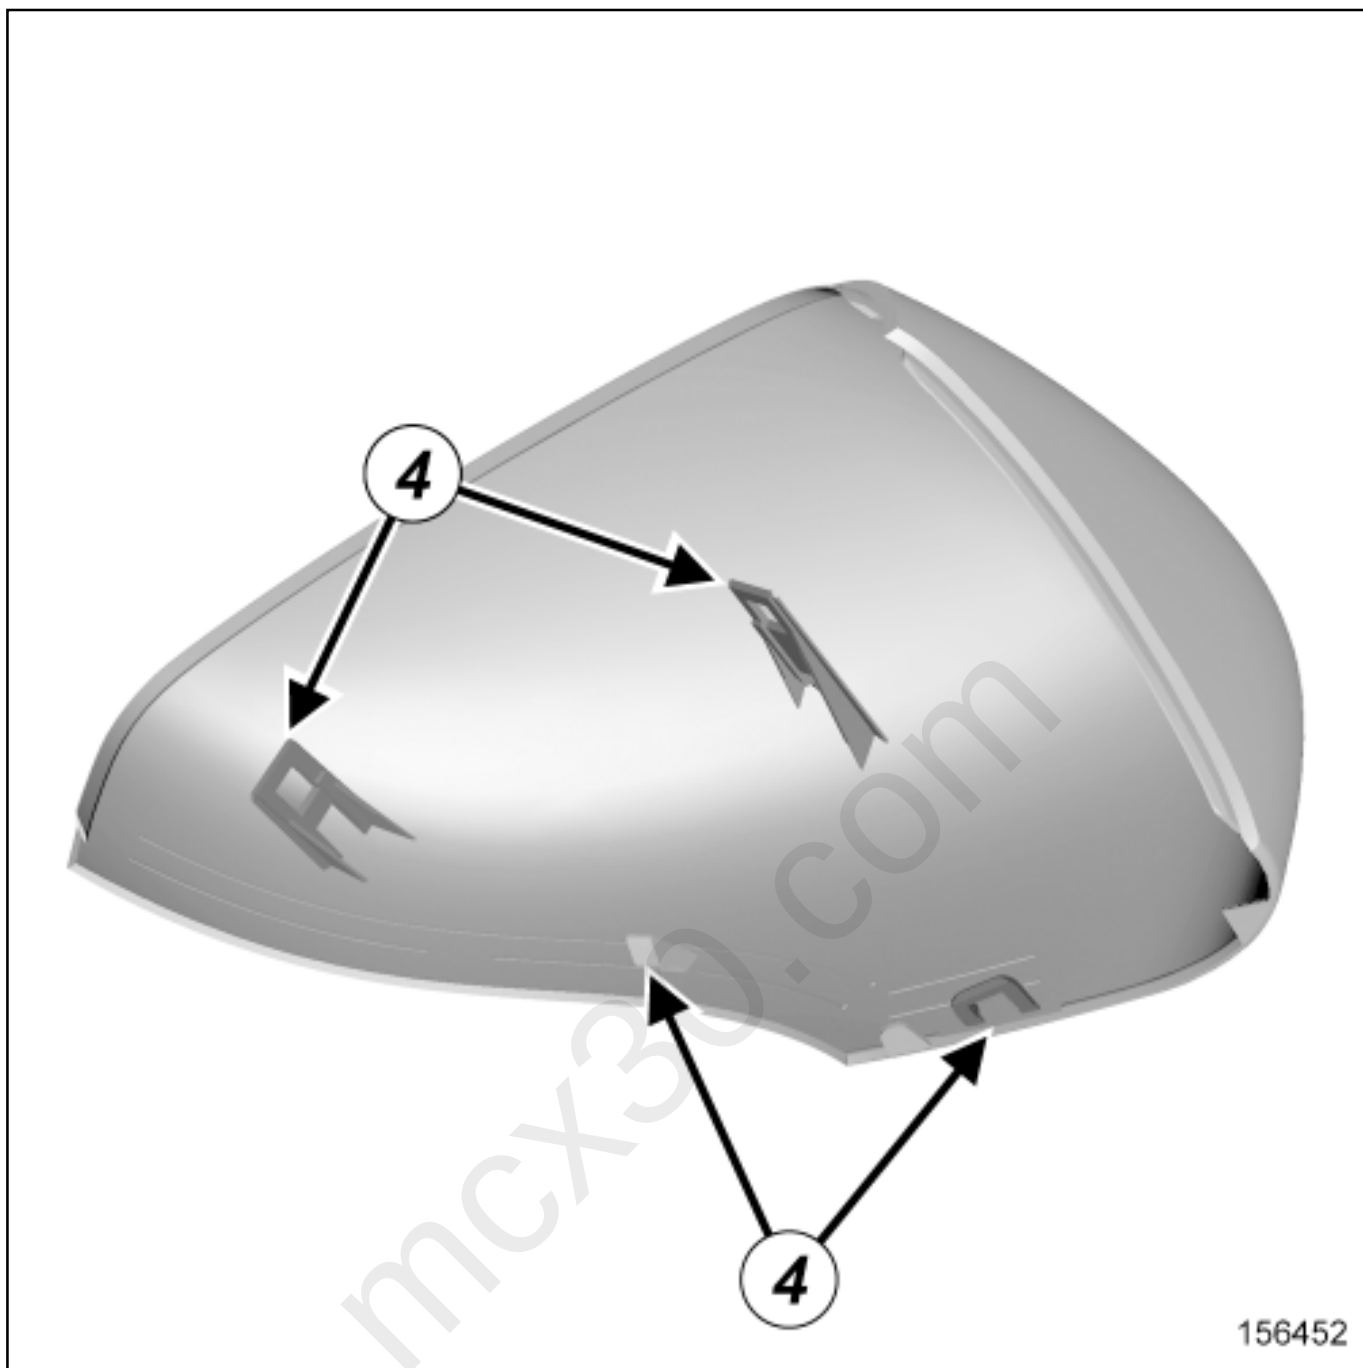

Unclip the door mirror casing at(4) using the toolSet of trim removal levers.(Car. 1363) .

Remove the door mirror casing.