

PUBLISHED: 27-APR-2020
2020.0 DEFENDER (LE), 413-09

WARNING DEVICES

IMAGE PROCESSING MODULE A (G2686296)

mcx30.com

GENERAL EQUIPMENT

EQUIPMENT NAME

Jaguar Land Rover approved diagnostic equipment

REMOVAL



 CAUTIONS:

- Use a suitable trim tool.
- Care must be taken to avoid damaging the surrounding components.
- Take extra care when removing the component, prevent damage to the mating faces.

 NOTES:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.
- Make sure the ignition is OFF before carrying out this procedure.


1.

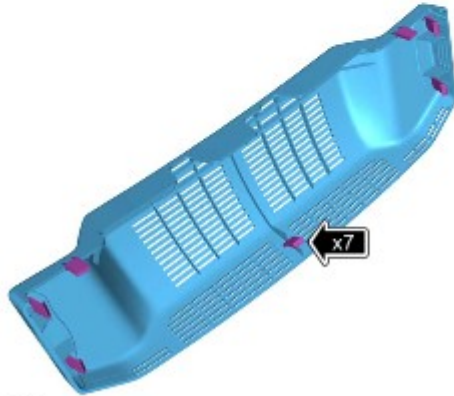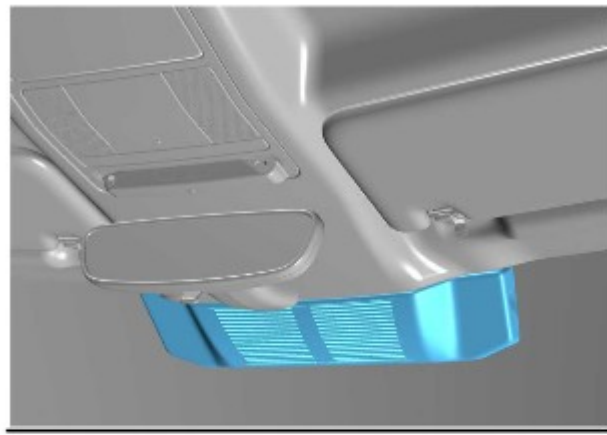

E252715


- Release the 7 clips.
- Remove the cover.

2.

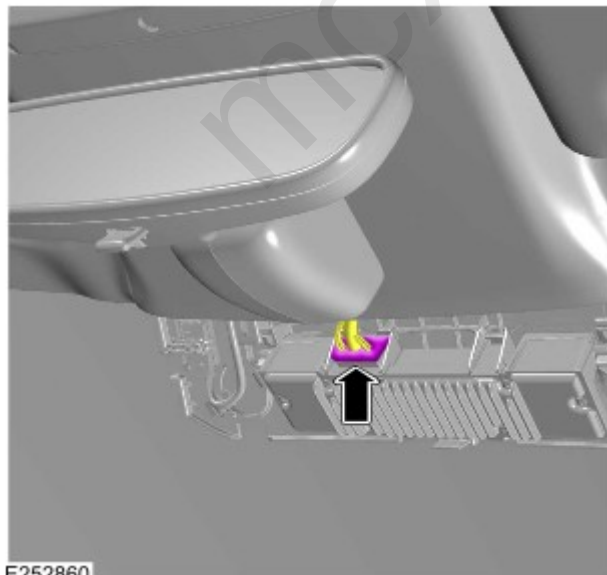

E252860

Disconnect the electrical connector from the Image Processing Module 'A' (IPMA)

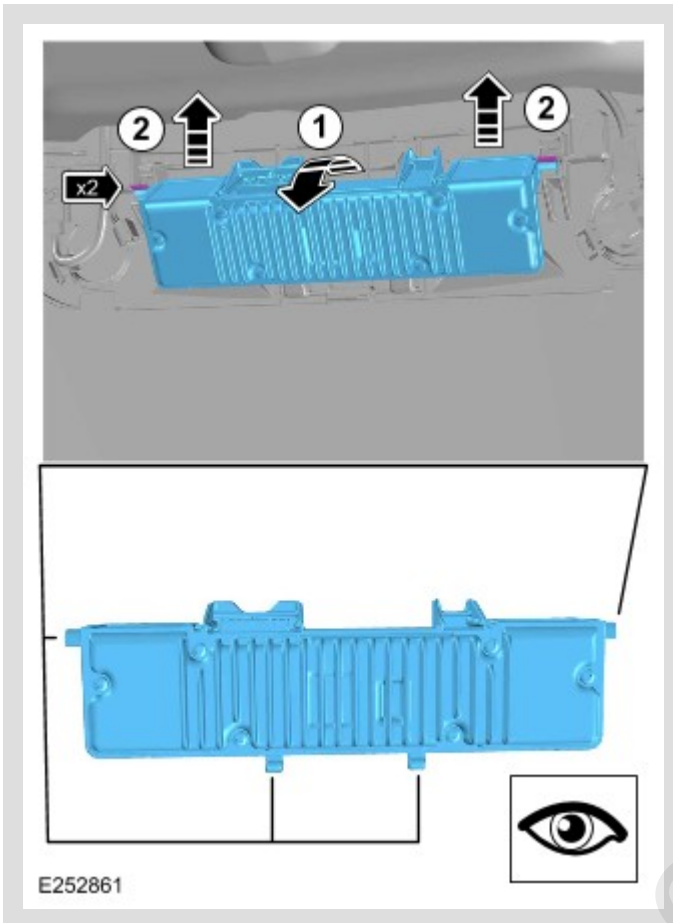

- Release the IPMA from the bracket.
- Carefully, remove the IPMA as illustrated.

INSTALLATION

1.

CAUTION:

Make sure that the all the clips are correctly installed.

NOTE:

Lens must be clean (no fingers print/dust/condensation/moisture etc are allowed on the lens during the installation); clean accurate the lens with lens cleaning wipes (example: uvex clear ect).

- Install the IPMA into the bracket.
- Connect the electrical connector to the IPMA.

2.

CAUTION:

Make sure that all the clips are correctly installed.

Install the cover.

3.

Use the Jaguar Land Rover (JLR) approved diagnostic equipment to configure the IPMA.

General Equipment: [Jaguar Land Rover approved diagnostic equipment](#)