

PUBLISHED: 18-FEB-2020  
2020.0 DEFENDER (LE), 415-01

INFORMATION AND ENTERTAINMENT SYSTEM

# FRONT INFOTAINMENT CONTROL MODULE (G2413588)

mcx30.com

## GENERAL EQUIPMENT

## EQUIPMENT NAME

Jaguar Land Rover approved diagnostic equipment

## REMOVAL

 NOTE:


- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1. Remove the front row left seat.

Refer to: [Front Row Seat - Vehicles With: Power Seats](#) (501-10 Seating, Removal and Installation).


Refer to: [Front Row Seat - Vehicles Without: Power Seats](#) (501-10 Seating, Removal and Installation).

- 2.

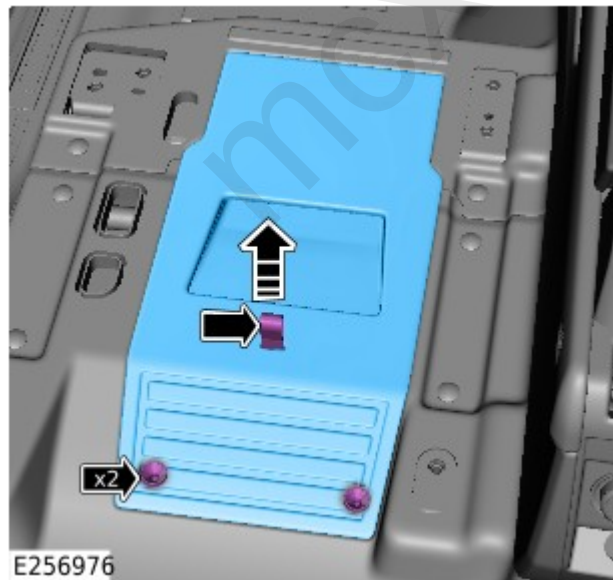


- Release the 2 clips.
- Remove the access cover.

3.

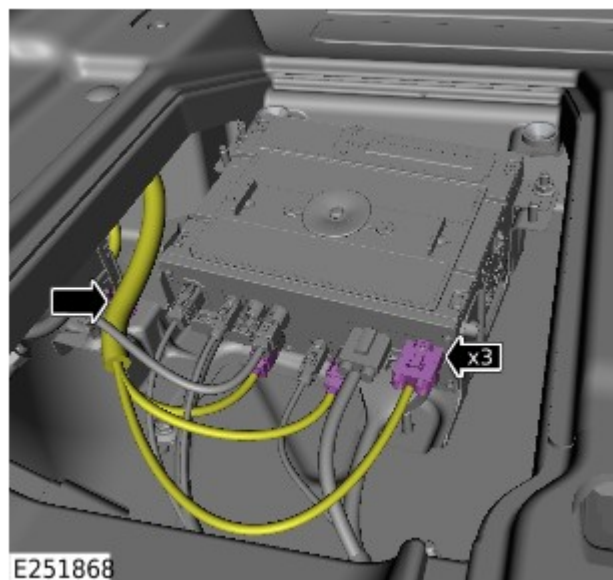

- Disconnect the 3 electrical connectors.
- Release the wiring harness clip.

4.

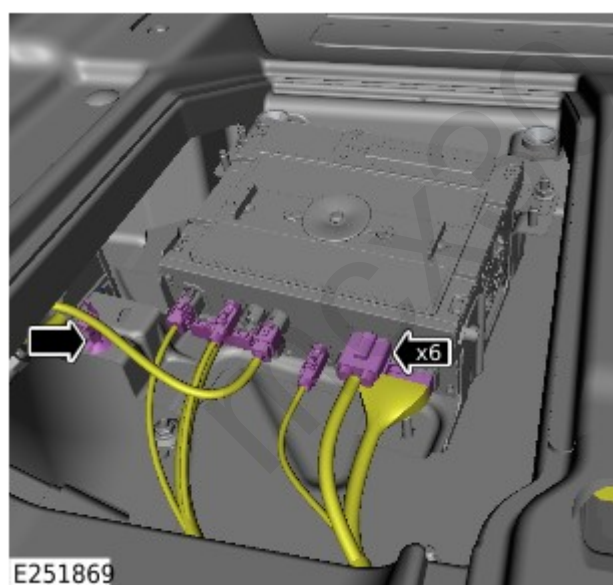

- Disconnect the 6 electrical connectors.
- Release the wiring harness clip.



- Remove the 2 nuts.
- Remove the Front Infotainment Control Module (IGM / ICCM) from the mounting bracket.

mcx30.com

## INSTALLATION

1.

- Install the IGM / ICCM to the mounting bracket.
- Install and tighten the 2 nuts.

*Torque: 5.4Nm*

2.

- Connect the 9 electrical connectors to the IGM / ICCM.
- Install the 2 wiring harness clips.

3.

Install the access cover.

4.

Install the front row left seat.

Refer to: [Front Row Seat - Vehicles With: Power Seats](#) (501-10 Seating, Removal and Installation).

Refer to: [Front Row Seat - Vehicles Without: Power Seats](#) (501-10 Seating, Removal and Installation).

5.



### NOTES:

- This step is only required if a new component is installed.
- SRO to be claimed separately.
- Use the Jaguar Land Rover (JLR) approved diagnostic equipment to configure the new module.  
*General Equipment:* [Jaguar Land Rover approved diagnostic equipment](#)
- Follow all on-screen instructions to complete this task.