

PUBLISHED: 11-MAR-2020
2020.0 DEFENDER (LE), 418-00

MODULE COMMUNICATIONS NETWORK

ENGINE JUNCTION BOX A (G2444764)

mcx30.com

GENERAL EQUIPMENT

EQUIPMENT NAME
Jaguar Land Rover approved diagnostic equipment

REMOVAL



NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains illustrations for right hand drive vehicles, left hand drive vehicles are similar.


1. If a new Engine Junction Box (EJB) is to be installed, download the stored data using Jaguar Land Rover (JLR) approved diagnostic equipment.

General Equipment: [Jaguar Land Rover approved diagnostic equipment](#)

2. Disconnect the startup battery ground cable.
Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).


3. Remove the cowl panel.
Refer to: [Cowl Panel](#) (501-02 Front End Body Panels, Removal and Installation).

4.

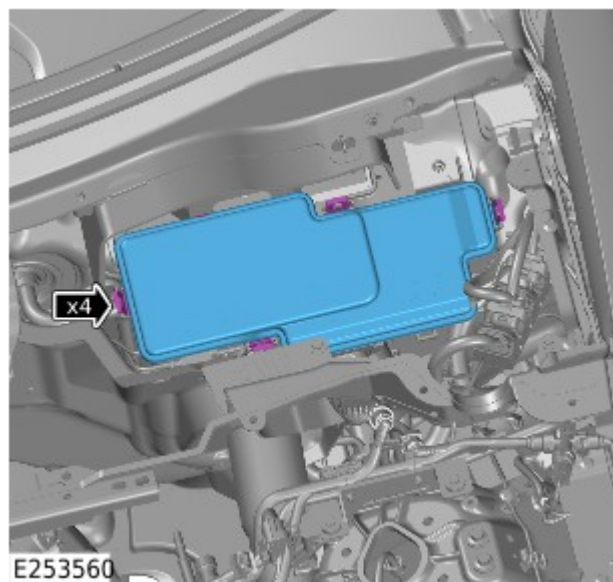


- Release the 4 clips.
- Remove the EJB access cover.

5.

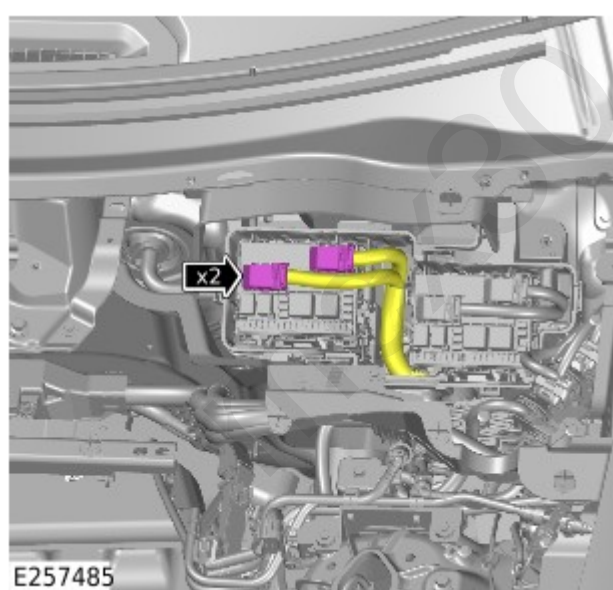

- Disconnect the 2 electrical connectors.
- Reposition the wiring harness away from the EJB A.

6.

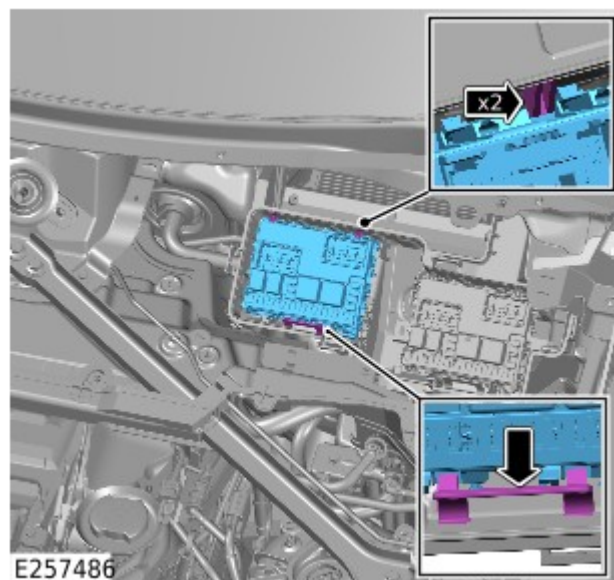

- Release the 3 clips.
- Remove the EJB A.

INSTALLATION

1.

- Install the EJB A.
- Install the 3 EJB A clips.

2.

- Reposition the wiring harness into the correct location.
- Connect the 2 electrical connectors to EJB A.

3.

- Install the EJB access cover.
- Install the 4 clips.

4.

Install the cowl panel.

Refer to: [Cowl Panel](#) (501-02 Front End Body Panels, Removal and Installation).

5.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

6.

If a new EJB is installed, upload the stored data using JLR approved diagnostic equipment.

General Equipment: [Jaguar Land Rover approved diagnostic equipment](#)

mcx30.com