

PUBLISHED: 17-FEB-2020
2020.0 DEFENDER (LE), 419-10

MULTIFUNCTION ELECTRONIC MODULES

REMOTE FUNCTION ACTUATOR (G2323874)

mcx30.com

GENERAL EQUIPMENT

EQUIPMENT NAME
Jaguar Land Rover approved diagnostic equipment

REMOVAL

 NOTES:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1. Disconnect the startup battery ground cable.


Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

2.




Move the front row left seat as illustrated.

3.

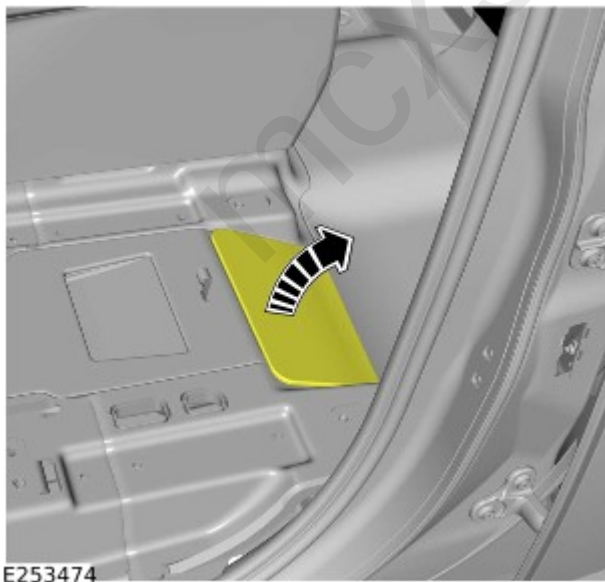


Release the rear floor carpet for access to the Remote Function Actuator (RFA) cover.

4.

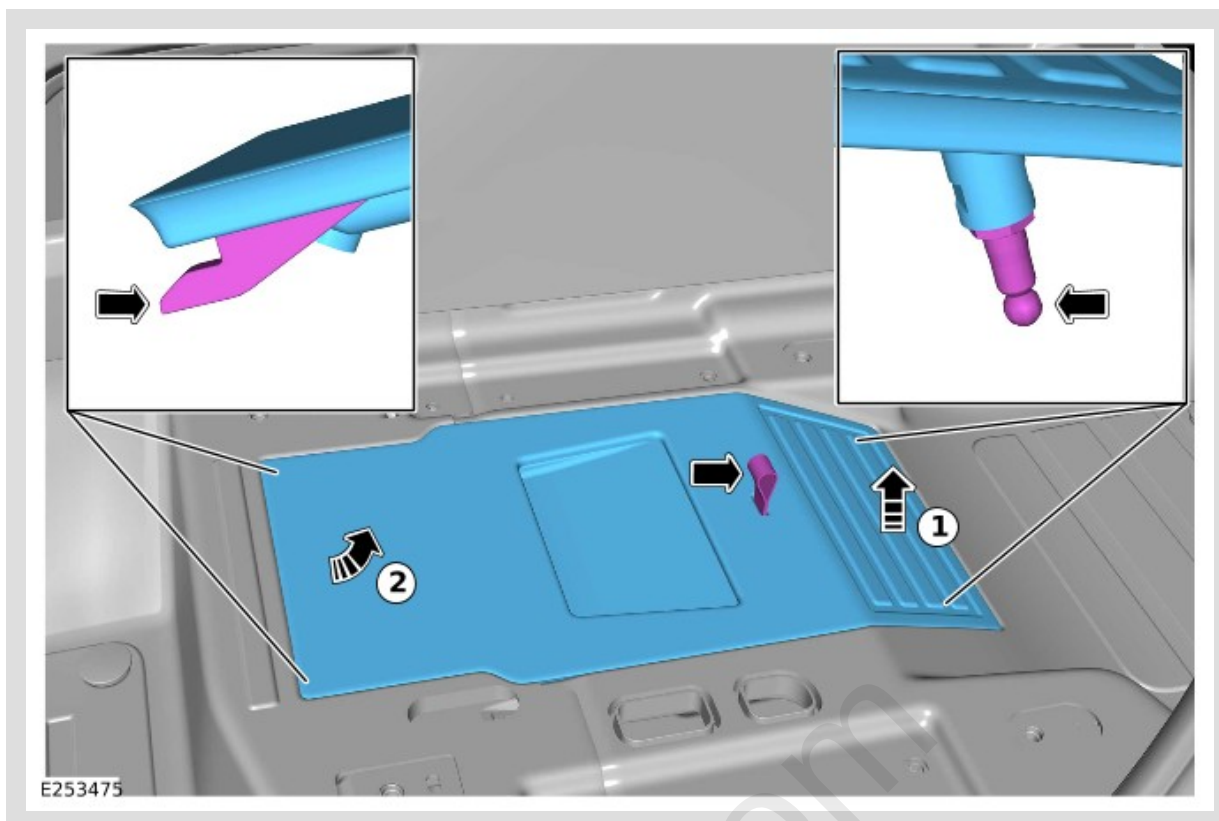

Remove the RFA cover as illustrated.

5.

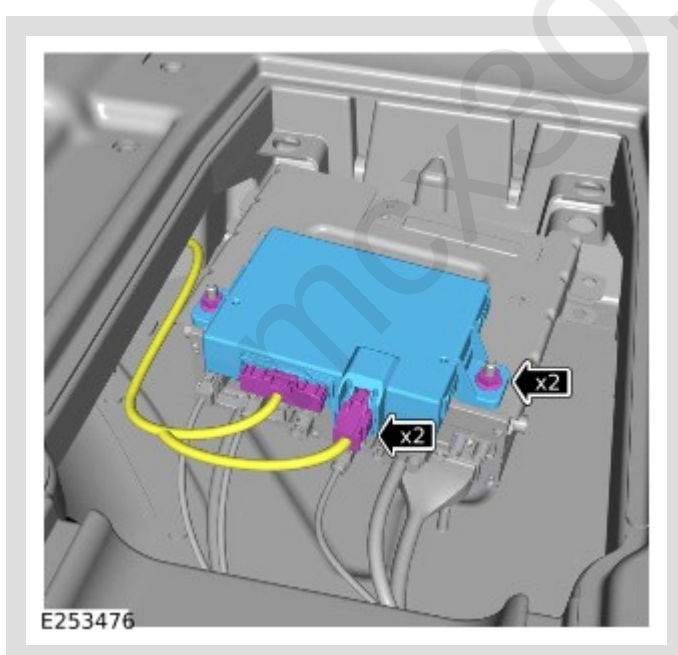

- Disconnect the 2 electrical connectors from the RFA.
- Remove the 2 nuts.
- Remove the RFA.

INSTALLATION

1.

- Install the RFA.
- Install and tighten the 2 nuts.
Torque: 3.2Nm
- Connect the 2 electrical connectors to the RFA.

2.

Install the RFA cover to the 4 clips.

3.

Reposition the rear floor carpet to the original position.

4.

Position the front row left seat to the original position.

5.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

6.



NOTE:

This step is only required if a new component is installed.

- Use the Jaguar Land Rover (JLR) approved diagnostic equipment to configure the new module.
General Equipment: [Jaguar Land Rover approved diagnostic equipment](#)
- Follow all on-screen instructions to complete this task.