



Repair-13x05x02-01x22-1-1-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com

UCH: REMOVAL - REFITTING

Equipment required
Diagnostic tool

REMOVAL

1. REMOVAL PREPARATION OPERATION


■ Apply the before repair procedure using the Diagnostic tool [Diagnostic tool : Use](#) :

-Computer concerned by the Before repair procedure:

■ "UCH" .

■ Disconnect the battery [Battery: Removal - Refitting](#) .


■ Remove the dashboard lower trim [Dashboard assembly: Exploded view](#) .

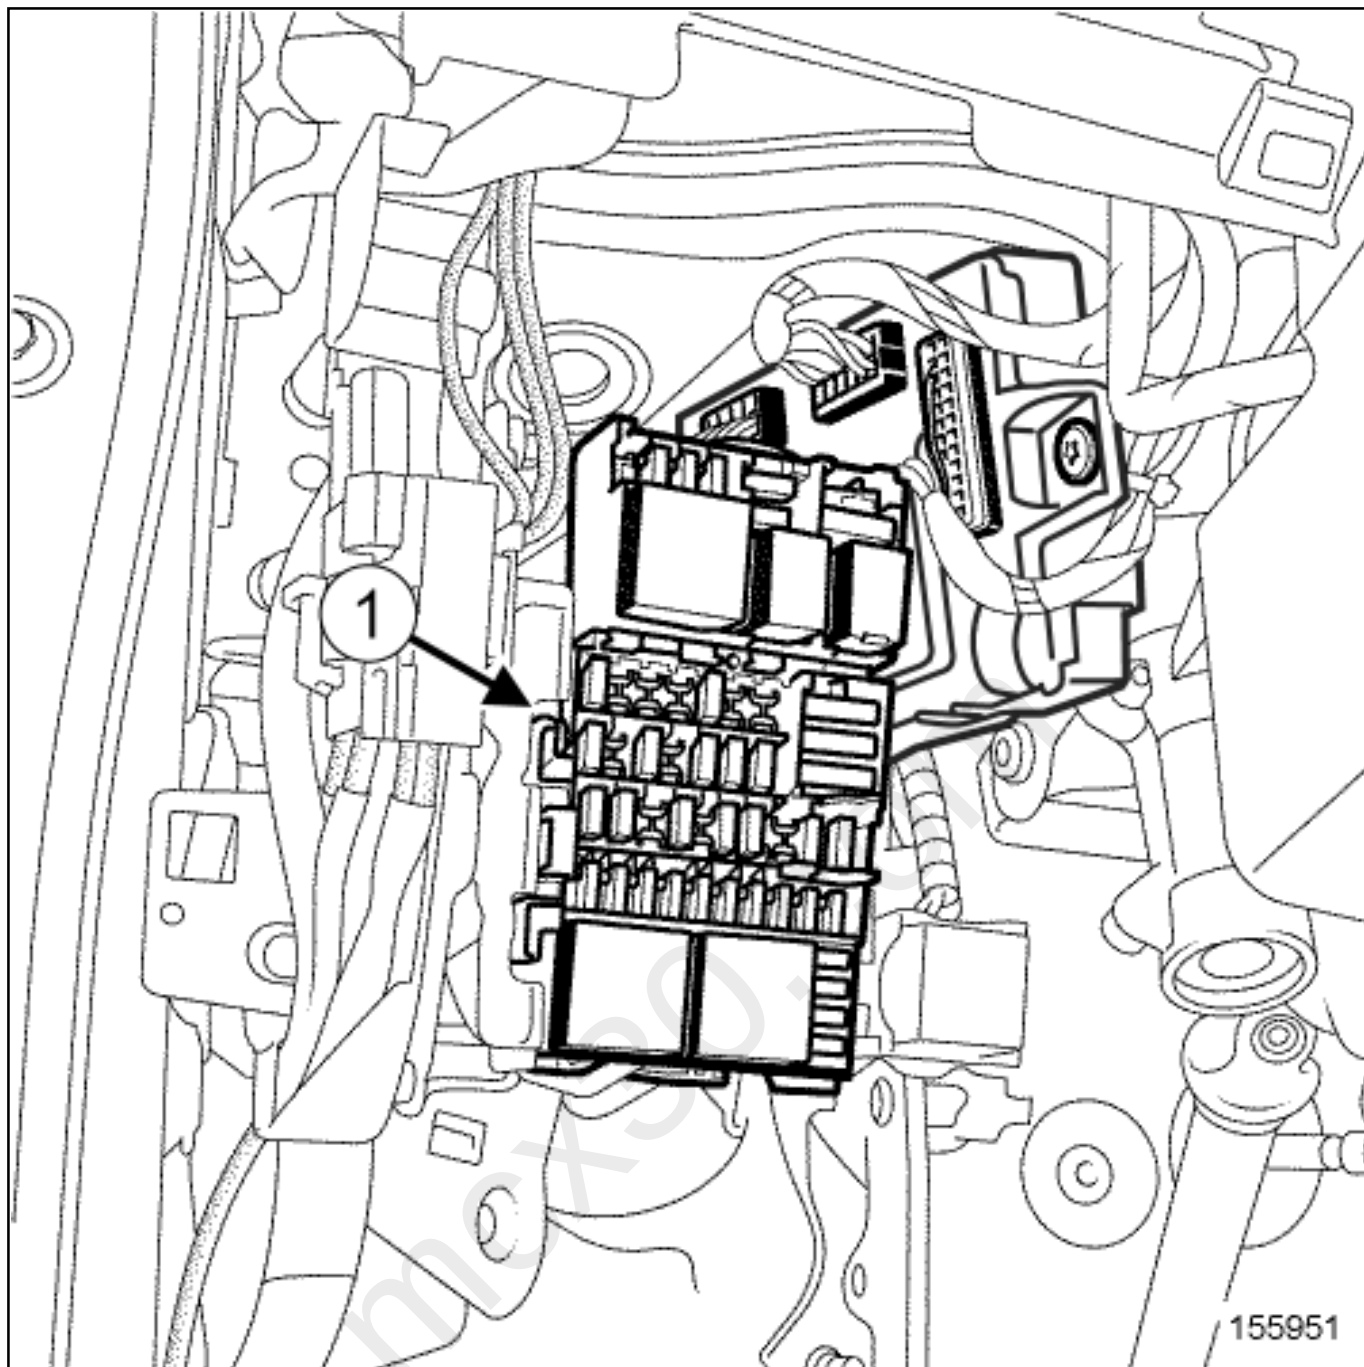

Unclip the passenger compartment fuse and relay box plate(1) from the dashboard cross member.

Move aside the passenger compartment fuse and relay box.

2. REMOVAL OPERATION

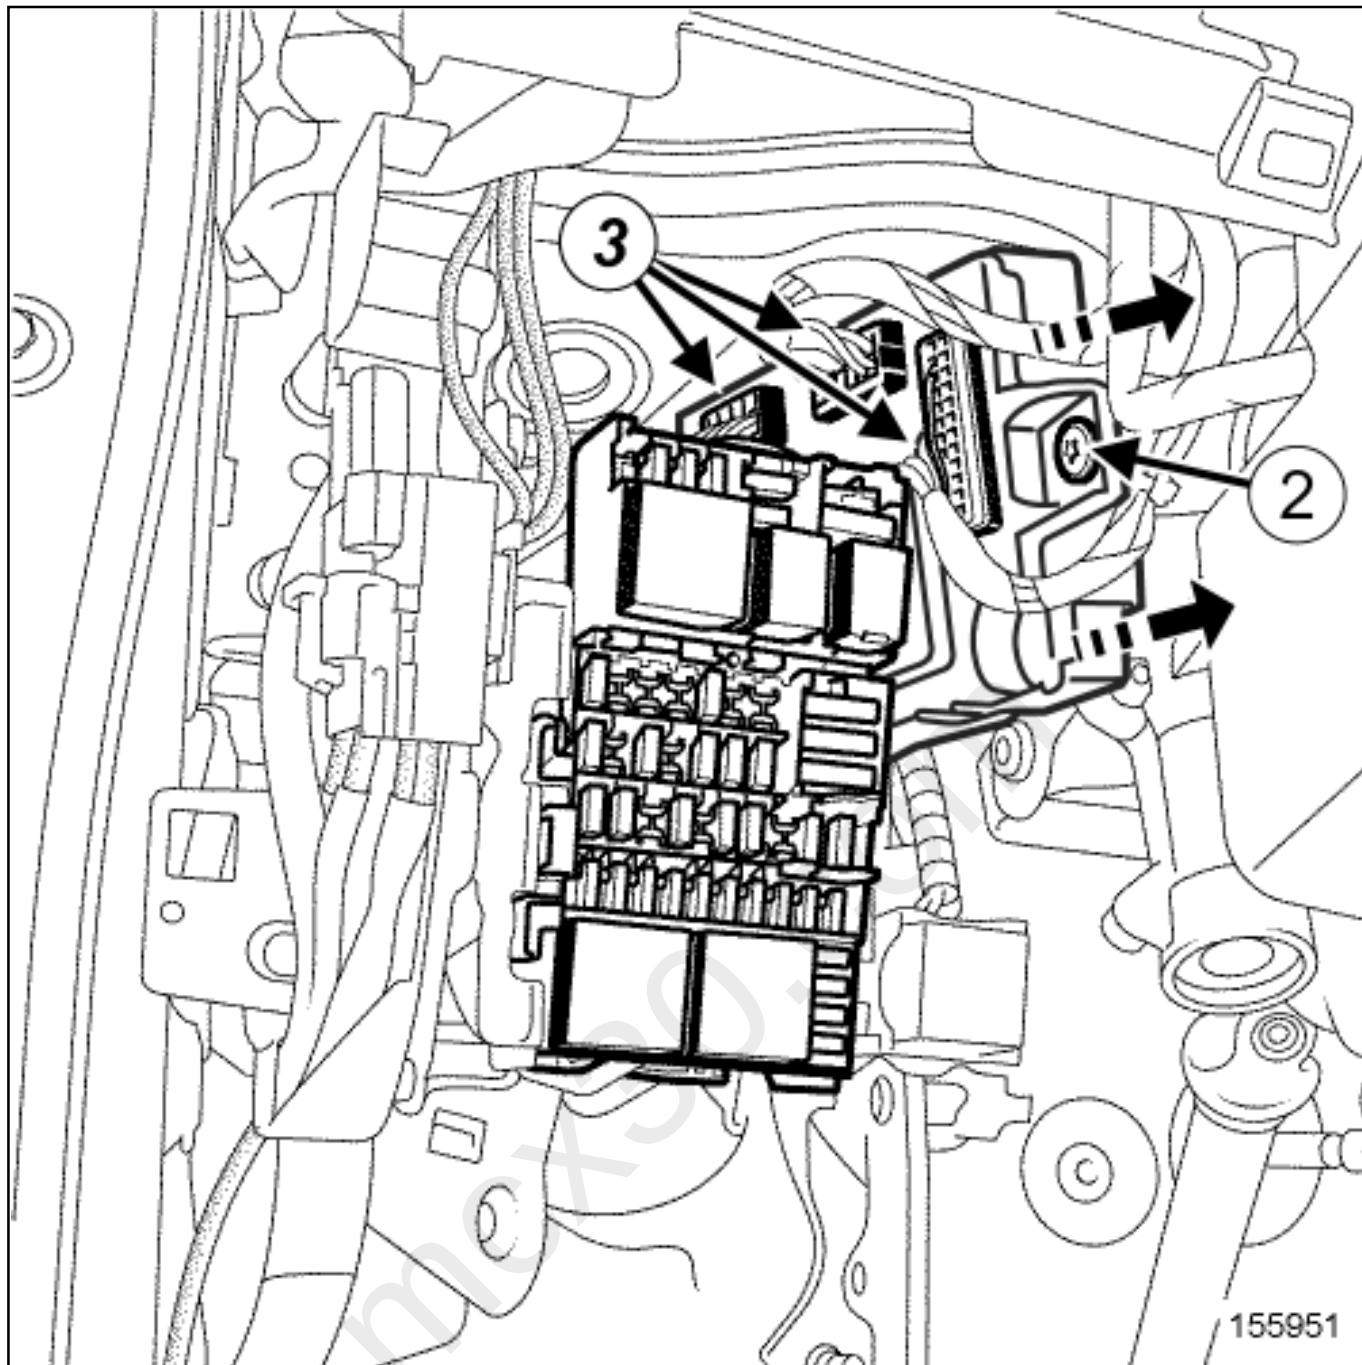

Remove the UCH screw(2) .

Disconnect the UCH connectors(3) .

Remove the UCH.