

PARKING BRAKE CABLES: REMOVAL - REFITTING



Note, one or more warnings are present in this procedure



WARNING



■ To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:

- [Brake circuit: Precautions for the repair](#) ,
- [Vehicle: Precautions for the repair](#) .

■ Location and specifications (tightening torques, parts always to be replaced, etc.):

- [Parking brake assembly: Exploded view](#) ,
- [Rear hub carrier assembly: Exploded view](#) ,
- [Rear drum brake assembly : Exploded view](#) .

REMOVAL

1. REMOVAL PREPARATION OPERATION

■ Position the vehicle on a two-post lift [Vehicle: Towing and lifting](#) .



WARNING

DANGER: HIGH VOLTAGE VEHICLE.

Risks of serious burns or electric shock that may prove fatal.



Before carrying out any work on the vehicle, it is essential that you adhere to the instructions regarding vehicle voltage cut-off.

As there are several types of lockout, it is essential that you apply the procedure indicated by the repair method or diagnosis.

This work must be carried out by an employee who is qualified and authorized to work on a high-voltage onboard network [Vehicle: Precautions for the repair](#) .

Lockout the vehicle [Vehicle: Lockout - Removal of lockout](#)

- Remove:
 - the traction battery [Traction battery assembly: Removal - Refitting](#) ,
 - the centre console.

■ Remove the rear wheels [Rear hub carrier assembly: Exploded view](#) .

■ Remove the rear brake drums [Rear drum brake assembly : Exploded view](#) .

2. REMOVAL OPERATION

■ Remove the parking brake cable [Parking brake assembly: Exploded view](#) from the lever using pliers and a screwdriver.


- Unclip [Parking brake assembly: Exploded view](#) :
 - the parking brake cable sheath from the drum back-plate,
 - the cables from their housing,
 - the sheaths from their stop on the body using pliers,
 - the parking brake cables from their guides.

■ Remove the parking brake cables [Parking brake assembly: Exploded view](#) .

REFITTING

1. REFITTING OPERATION

■ Proceed in the reverse order to removal.

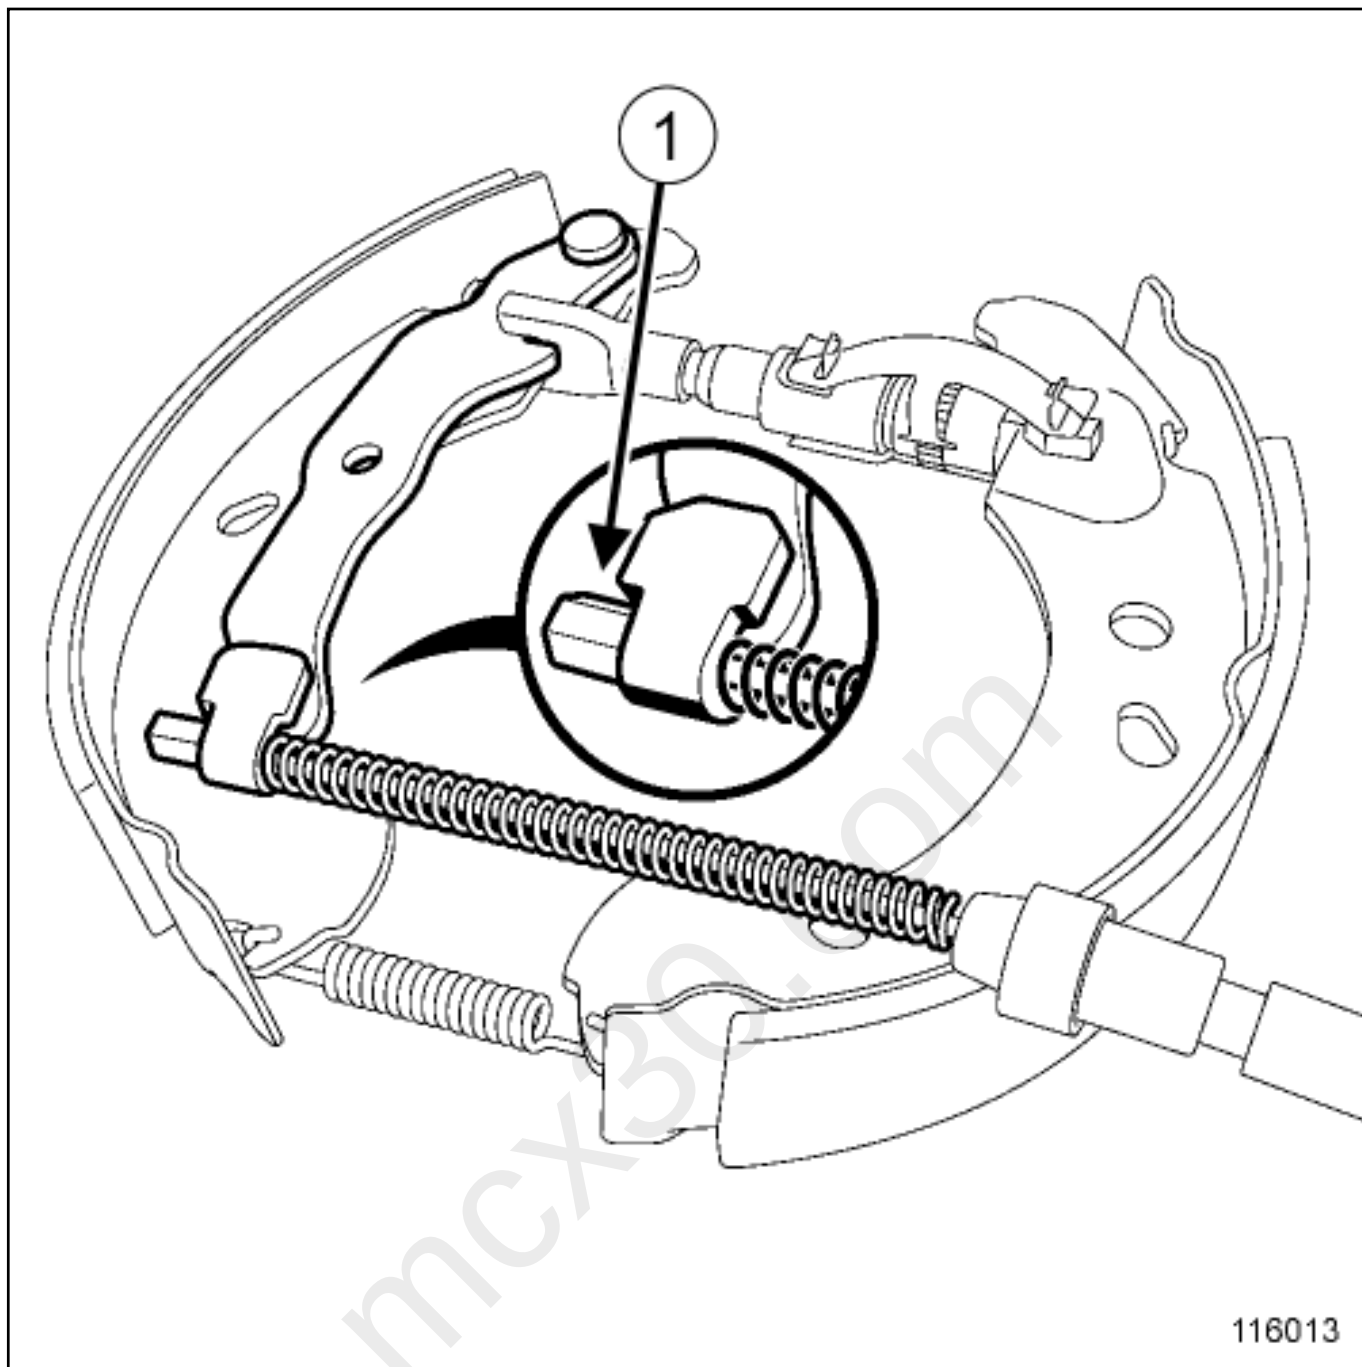

- Check that the cables(1) are correctly positioned on the levers.
- Adjust the parking brake cables([see 37A, Mechanical component controls, Parking brake lever: Adjustment](#)) .



Repair-13x03x11x03-01x37-1-35-1.xml

